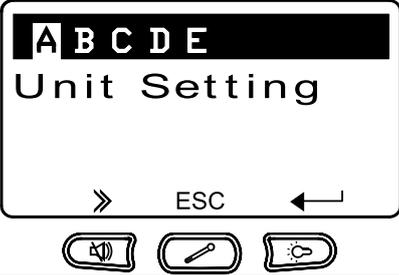
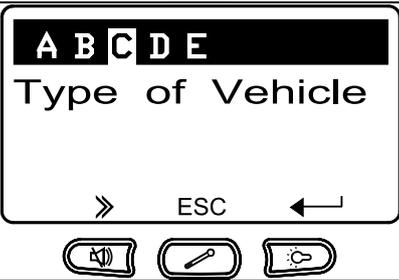
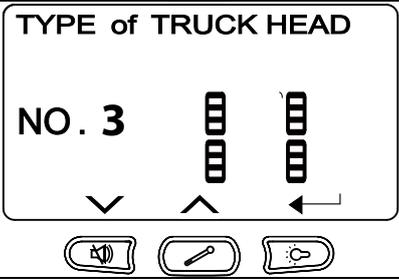
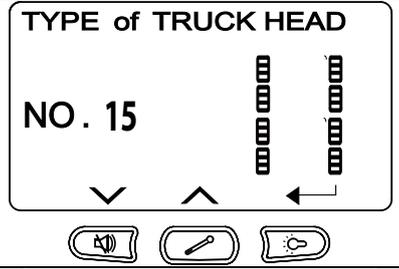
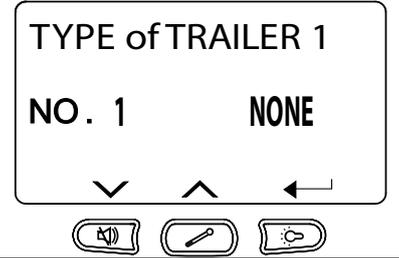
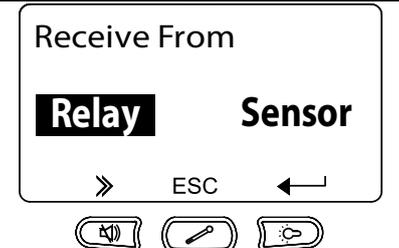
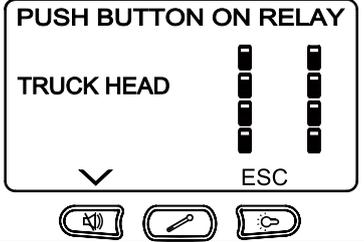
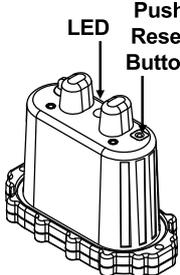
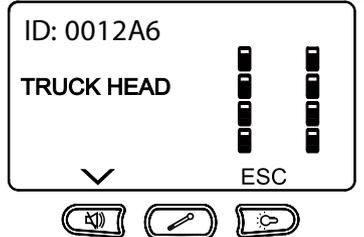


TD2300A / TD2700F – Changing Vehicle Layout. (Single Relay System)

Step 1: Changing the Layout

<p>Press and hold the Mute (Left) button down for a few seconds until the Unit settings menu appears.</p>	 <p>The screen displays 'Unit Setting' with a black bar over the letters 'A B C D E'. Below the bar are navigation arrows and the text 'ESC'. At the bottom are three icons: a speaker with a slash (mute), a pencil (edit), and a lightbulb (backlight).</p>
<p>Press the Mute (Left) button a couple of times to scroll across to menu C (Type of vehicle),</p>	 <p>The screen displays 'Type of Vehicle' with a black bar over the letters 'A B C D E'. Below the bar are navigation arrows and the text 'ESC'. At the bottom are three icons: a speaker with a slash (mute), a pencil (edit), and a lightbulb (backlight).</p>
<p>Press the Backlight (Right) button to enter this menu. TYPE of TRUCK HEAD and your current Layout No. will be displayed.</p>	 <p>The screen displays 'TYPE of TRUCK HEAD' and 'NO. 3'. There are two vertical columns of small squares representing layout options. Below the screen are navigation arrows and the text 'ESC'. At the bottom are three icons: a speaker with a slash (mute), a pencil (edit), and a lightbulb (backlight).</p>
<p>Use the Mute (Left) or Temperature (Middle) button to scroll through the vehicle layouts until you find your new layout then press the Backlight (Right Button).</p>	 <p>The screen displays 'TYPE of TRUCK HEAD' and 'NO. 15'. There are two vertical columns of small squares representing layout options. Below the screen are navigation arrows and the text 'ESC'. At the bottom are three icons: a speaker with a slash (mute), a pencil (edit), and a lightbulb (backlight).</p>
<p>Make sure TYPE of TRAILER is set to NO.1 NONE by using the Mute (Left) or Temperature (Middle) button to scroll through the vehicle layouts then press the Backlight (Right Button).</p>	 <p>The screen displays 'TYPE of TRAILER 1' and 'NO. 1 NONE'. Below the screen are navigation arrows and the text 'ESC'. At the bottom are three icons: a speaker with a slash (mute), a pencil (edit), and a lightbulb (backlight).</p>
<p>Make sure Receive from Relay is highlighted Black like shown then press the Backlight (Right Button) and this will take you back to the settings menu.</p>	 <p>The screen displays 'Receive From' with 'Relay' highlighted in a black bar and 'Sensor' to its right. Below the screen are navigation arrows and the text 'ESC'. At the bottom are three icons: a speaker with a slash (mute), a pencil (edit), and a lightbulb (backlight).</p>

Step 2 - Saving the new layout to the relay.

<p>Press the Mute (Left) button to scroll across to menu D (Add new Relay).</p>	
<p>Press the Backlight (Right) button to enter this menu. PUSH BUTTON ON RELAY TRUCK HEAD your current Layout No. will be displayed.</p>	
<p>Now Press the reset button on the relay once (short press only). You might have to remove the relay top cover by removing the 2 screws to access the reset button.</p>	
<p>The Monitor will beep and will briefly show an ID for the relay for a couple of seconds. Now press the Backlight (Right Button) and this will take you back to the settings menu.</p>	

Switch the monitor off and on or press the Temperature (middle) button to exit the menu.

The new layout is now saved to the monitor and relay. Note: If you skip step 2, it will keep defaulting back to the original layout.