
INSTALLATION INSTRUCTIONS

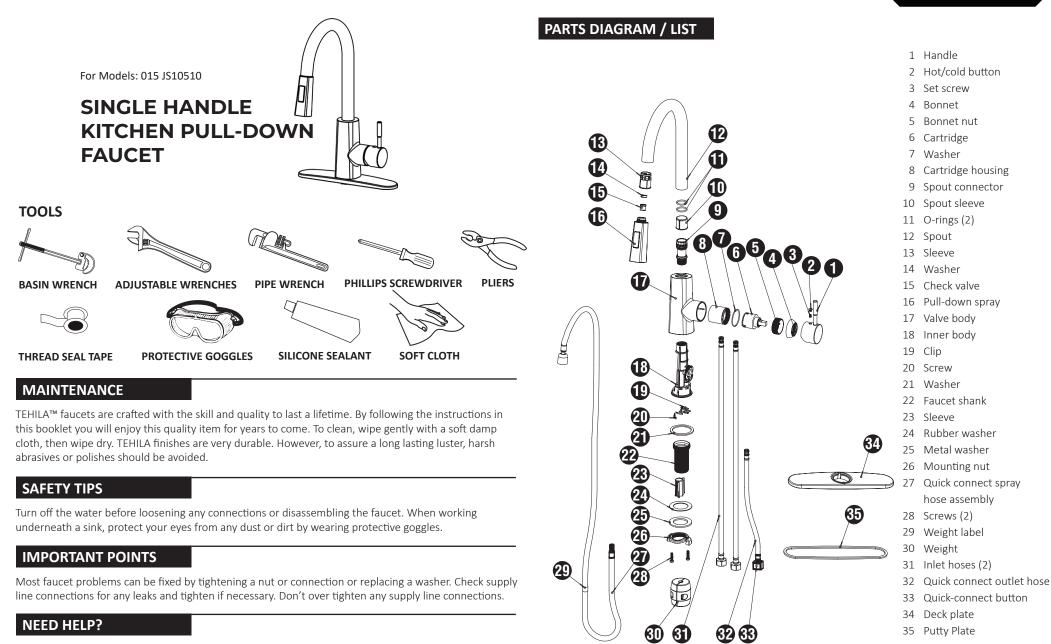


TEHILA

We take pride in our customer service and your satisfaction is very important to us. If you have any questions or problems, **please contact us at help@jsupplies.com**. Thank you for your business.

PREPARATION / ASSEMBLY (STEPS 1-9)

NOTE: Prior to installation, verify that the 20" integrated supply lines are long enough to attach to your water supply shut-ff valves beneath the sink. If the integrated supply lines are too short, a 3/8" compression union and a 3/8" compression X 3/8" compression supply line will be needed for each connection that is too short. Both are available at most hardware stores and home centers.


1. Shut off the water supply from the stop valves by turning the handle clockwise and remove the existing faucet from the sink.

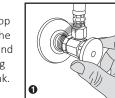


2. Remove any dirt or plumber's putty from around the faucet holes on the sink.

4. Insert faucet into the deck

plate.

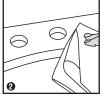


- 3. If installing with the deck plate (34), place the putty plate (35) onto the deck plate. Apply a thin bead of silicone sealant to the underside of the putty plate and set it on the appropriate sink holes.
- **5.** For 1 hole installations, insert the faucet directly into the sink hole.

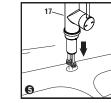

6. To secure the faucet to the sink, slide the rubber washer (24), then the metal washer (25) and the mounting nut (26) up the hoses to the faucet shank (22). Hand thread the mounting nut up to the top. Verify that faucet is positioned correctly, then tighten the 2 mounting nut screws (28). Do

at this time.

not attach the pull down spray

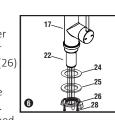


7. Attach the integrated supply lines (31) to the water supply valves and tighten. Be careful not to over tighten or twist the supply lines.

- 8. With the faucet handle in the off position, open the hot and cold water supply valves. Pull the hose down from the spout and point it into the drain. Turn on faucet in the mixed hot / cold water position. Run the water for 1 minute to flush out any debris. Turn water off and attach the pull down spray (16) to the hose.
- **9.** Check all connections for leaks. If leaks are present, tighten slightly until leak stops.

TROUBLESHOOTING

If a faucet installation doesn't deliver water properly or leaks, finding the cause and fixing it can be easy.

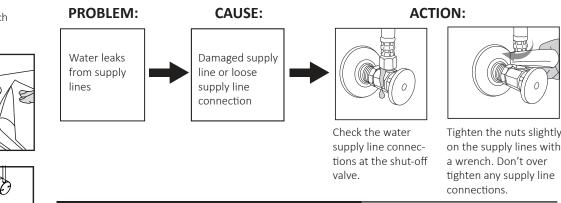


1-YEAR LIMITED WARRANTY INFORMATION

TEHILA[™] products are backed by a 1-Year Limited Warranty. TEHILA warrants that its products will be free from defects in material and workmanship for a period of 1 year from the date of purchase. Proof of purchaser's receipt is required to receive this warranty. A replacement for any defective part will be supplied free of charge for installation by you. This 1-year warranty covers the original consumer purchaser only and **DOES NOT INCLUDE BUSINESS, COMMERCIAL OR INDUSTRIAL USE OF THIS PRODUCT**. This warranty shall not apply to goods which have been subject to accidents, negligence, installation error, product abuse or misuse. In no event will TEHILA be liable for any consequential, indirect or special damages, nor shall TEHILA be liable for transportation, labor, or other charges arising out of the removal or reinstallation of its products. Defective parts must be made available for inspection by a TEHILA employee or its authorized representative. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

WARRANTY CLAIM PROCEDURES AND REQUIREMENT:

To obtain TEHILA[™] warranty service, customer will need to write to TEHILA explaining the defect, and include proof of purchase receipt, your name, phone number, email address and mailing address. Information can be emailed to **support@utility-sink.com** or mail to **TEHILA[™]** (Warranty Department), 990 E North Ave., Glendale Heights, IL 60148.

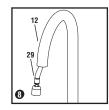

0