

# HI/LO SHOWER ARM EXTENDER 520JS3410CP/BLK/ORB/SS

We take pride in our customer service and your satisfaction is very important to us. If you have any questions or problems please contact us at [help@jsupplies.com](mailto:help@jsupplies.com). Thank you for your business!

## CARE & UPKEEP

Thank you for purchasing our product. To clean, wipe with soft damp cloth, then wipe dry. Do not use abrasive or caustic cleansers as these types of cleansers could damage the finish.

## INSTALLATION


**A) RECOMMENDED. To install onto existing shower arm:** Remove old shower head from shower arm, clean threads. If old shower arm has a ball where shower head connects to arm, replace with shower arm with threads on both ends. Using pipe compound or thread seal tape on threads, install adjustable shower arm and reinstall shower head.

**(B) To install flush with wall, replacing existing shower arm:** Remove existing shower arm. Slide flange forward from wall and mark shower arm where it meets with wall. Remove shower arm and flange. Measure from the mark you made to end of thread on shower arm. You will need a 1/2 in. inside diameter pipe nipple. Length of pipe nipple should be distance just measured plus 1 in. Using pipe compound or thread seal tape on threads, thread pipe nipple into wall. Using pipe compound or thread seal tape on threads, install adjustable shower arm and shower head. Loosen the wing nuts one to two full turns before adjusting to the desired height and the angle of your shower, then tighten the wing nuts when you have the desired position.


## RECOMMENDED

**A. UNSCREW SHOWER HEAD**


**SCREW ON HI/LO SHOWER ARM. REATTACH HEAD AND ENJOY.**

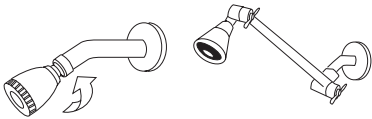

**B. MARK ON PREVIOUS SHOWER ARM WHERE IT COMES OUT OF THE WALL**

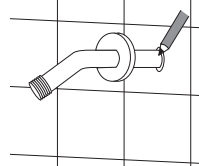

**USE THAT MEASURE FROM YOUR MARK TO THE END OF THE SHOWER ARM AND ADD 1 INCH. BUY AND SCREW THAT NIPPLE INTO THE WALL.**

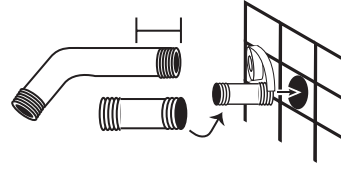

**USE PIPE COMPOUND OR TAPE ON THREADS. SCREW ON HI/LO SHOWER ARM. ENJOY**

