

# AERATRON


## Aeratron Wall Switch Control Instruction




**IMPORTANT** - The Wall Switch must be installed by a licensed and qualified electrician. 5 Gang Wall Switch components are not supplied by Aeratron

### 5 Gang Wall Switch


ON/OFF > FWD/REV SWITCH  
TYPE: ON/OFF SWITCH

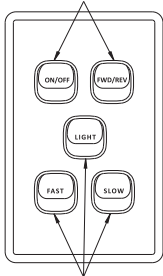

SPEED > LIGHT/ MOMENTARY ACTION SWITCH  
Type: BELL PRESS PUSH-BUTTON SWITCH

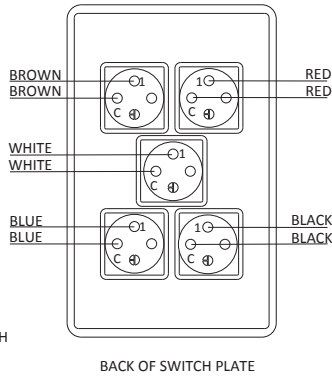



BACK OF SWITCH PLATE

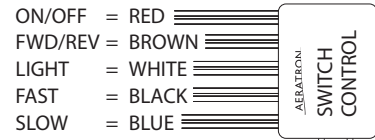

**SWITCH CABLE SPECIFICATION:**  
TPS Mains rated cable / Twin active  
1mm<sup>2</sup> = 250m max. Cable length  
1.5mm<sup>2</sup> = 375m max. Cable length

**Not Supplied by Aeratron**



### First Fan (Signal Master)

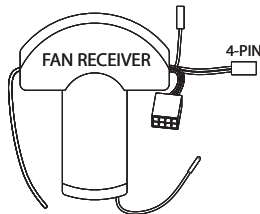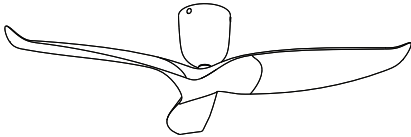

TO





### Second Fan (Signal Slave)

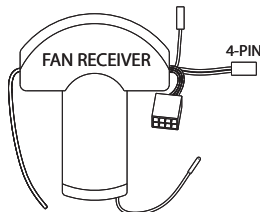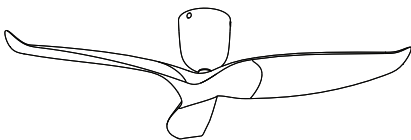


TO




### Additional Fan / max.8 Fans in total

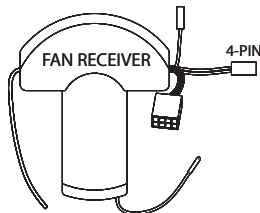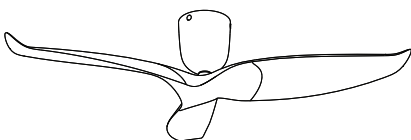

TO

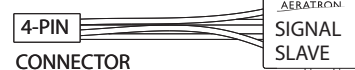

# Controlling the Fan

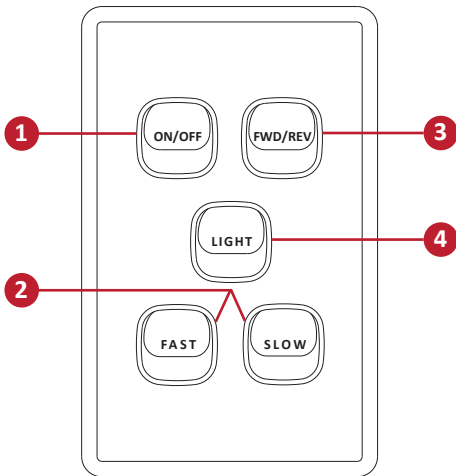

1. Fan ON/OFF
2. Speed Up/Down - 1-6 Speed
3. Forward/Reverse  
Use forward mode (clockwise) for cooling.  
Use reverse mode (anti-clockwise) to circulate warm air.
4. Light On/Off  
To DIM, press and HOLD light button to cycle from bright to dark.

## Audible Speed Indication

🔊) short beeps	🔊)) long beeps
SPEED 1 —	SPEED 4 —
SPEED 2 — —	SPEED 5 — —
SPEED 3 — — —	SPEED 6 — — —

For General Information & Warranty issues refer to the Aeratron™ User Manual available at [www.aeratron.com](http://www.aeratron.com)

Thank you. Your Aeratron team.

# AERATRON

Wall Switch Control Edition 2018/10