

# CARE & MAINTENANCE GUIDE

## CORNHOLE BOARDS



### STORAGE

Properly storing your cornhole board is the most important step in ensuring the longevity of your board. Proper storage protects your boards from becoming faded or damaged. Store the boards in a cool, dry place such as a basement, garage, or recreation room where the boards are not exposed to water or humidity.



Cornhole Board Wall Mounts may be used to keep your cornhole boards off the floor and away from pests or water damage.

The polyester exterior and weather-resistant coating of ACA Cornhole Board Covers protect the surface and sides of your board from outdoor elements. A protective layer of foam padding adds cushion around the edges making them safer to transport to your next game of cornhole.

### KEEP IT CLEAN

Use a damp cloth to wipe off dust and dirt after every use of your cornhole boards. When necessary, use warm, soapy water to clean your boards. Regular cleaning of the cornhole board playing surface and frame is necessary to keep the board in good condition and ensure the durability of the board.

## CORNHOLE BAGS

### STORAGE

It is recommended to store your cornhole bags and boards together to ensure bags are not lost. Cornhole bags can be kept in a container or drawstring carry tote to keep all items together when not in use.

When left outdoors, corn-filled cornhole bags can attract squirrels or other wildlife who may try to eat the corn feed filling. Be sure to store corn-filled bags in a cool, dry place where animals cannot reach them. All Weather and Synergy Pro cornhole bags are filled with plastic resin pellets and do not share this risk.



### KEEP IT CLEAN

Cornhole bags may be washed with warm, soapy water to clean off dirt and debris that has collected on the bags. All Weather and Synergy Pro cornhole bags may also be washed in the washing machine with detergent or fabric softener (this may make the bags feel more "broken-in"). Do not machine wash corn-filled cornhole bags.

Let bags dry completely before returning to storage. It is recommended to let the bags air dry in the sun or in your home. If using a drying machine, only place cornhole bags in the dryer under low heat. Avoid high heat or extreme temperatures when drying your cornhole bags. This could damage the interior resin pellets and ruin the cornhole bags.

## MIND THE ELEMENTS

Extreme weather conditions such as hail, rain, snow, mud, and excessive heat may cause damage to your cornhole games. To protect your cornhole board from serious damage, do not leave your game outdoors or play in harsh conditions.