

USER GUIDE

This guide contains important product and safety information. Please read before using your device and keep this guide for future reference. Failure to read and comply with this guide may result in injury. Additional information is available at DiscoverTalkingPen.com.

Instructions for Getting Started

Read all the information regarding product care and safety before using Discover Talking PenTM products.

- Use the USB cable included with your Discover Talking Pen
 to fully charge the product. To charge, use the USB cable to
 connect to your computer or to a power outlet with a USB
 adapter (not included). A red light indicates your product is
 charging. When the product is fully charged, the red light will
 turn off.
- Eject and disconnect the Discover Talking Pen from power source.
- 3. Press the On/Off button to begin. A flashing yellow light indicates that the Discover Talking Pen is on.
- Gently point the bottom tip of the Discover Talking Pen at text or characters in your Discover Wonders Talking Book (including those on the front and back covers) and start discovering!
- When finished, press and hold the On/Off button to turn off your Discover Talking Pen.

Downloading and Deleting Audio

When you connect your Discover Talking Pen to your computer via the USB cable, you will see four folders on your device: book, DIYRECORD, mp3 and record. The 'book' folder is for bnl format audio files of the Discover Wonders books. The 'DIYRECORD' folder is for wav format audio files of recordings from both the recording buttons in the Discover Wonders books and the audio recording stickers. The other two folders are not being used at this time.

Steps to download audio:

- Connect the Discover Talking Pen to your computer via the USB cable (included).
- Download the bnl audio file for each of your Discover Wonders books at DiscoverTalkingPen.com. Copy-Paste or drag and drop the downloaded audio file to the 'book' folder on your Discover Talking Pen.
- Download any wav audio recordings sent from distant relatives or friends. Copy-Paste or drag and drop the downloaded audio file to the 'DIYRECORD' folder on your Discover Talking Pen.
- Eject and disconnect your Discover Talking Pen from your computer.

Steps to delete audio:

- Connect the Discover Talking Pen to your computer via the USB cable (included).
- Select the bnl audio file from the 'book' folder or the wav audio recording from the 'DIYRECORD' folder and delete. Recording buttons in the Discover Wonders books and audio recording stickers are now ready to be re-recorded.
- Eject and disconnect your Discover Talking Pen from your computer.

Product Care

The Discover Talking Pen is designed to be light, compact and durable. However, it is an electronic device and should be handled carefully. Avoid dropping and never take apart, crush, bend, puncture, squeeze, microwave, incinerate, insert foreign objects, paint the product or intentionally damage or modify if any other way. Clean your hands before handling the product if they have been exposed to lotions or other chemicals.

Keep Discover Talking Pen Dry and Use Indoors

Never submerge the Discover Talking Pen in water. Do not use near locations where product could be exposed to water. Avoid spilling food or liquids on this product. If Discover Talking Pen does get wet, unplug all cords, turn it off, and allow product to dry thoroughly. Do not dry with hair dryer or other heat source. Do not connect to power source if wet or damaged.

Avoid prolonged exposure to heat, cold, humidity, or other adverse conditions. Avoid storing your Discover Talking Pen in humid, damp or wet places. Exposure can shorten battery life or cause the product to temporarily stop working.

Cleaning

Disconnect all cords before cleaning. Clean the Discover Talking Pen with a cloth dipped in cold water until slightly damp. Do not use soap, household cleaning products or other chemicals. Allow to dry thoroughly before re-use. Do not connect to power source if wet or damaged.

Repairing or Modifying Discover Talking Pen

Never attempt to repair or modify. The Discover Talking Pen does not contain any parts that can be repaired or modified by the user.

If the product has been damaged, please reach out to support@discovertalkingpen.com. Additional information on warranty and returns can be found at DiscoverTalkingPen.com.

Recycling and Disposal

The Discover Talking Pen should be disposed through your local electronic product recycling system – do not throw in the trash.

Important Safety Information

Please read all the Important Safety Information before using your Discover Talking PenTM products. Failure to read and comply with safety information could result in possible property damage, serious personal injury or death.



Choking Hazard - Small parts not for children under 3 years old or any individuals who have a tendency to place inedible objects in their mouths.

Warning: Regularly check the Discover Talking Pen[™] products to ensure they can be properly operated and are in safe condition. If there is any damage or broken parts, do not use the products.

Warning: Cords are a strangulation hazard. Keep out of reach of children under 3 years of age. Children pulling on the cord while cord is connected to computer or other equipment to which the device is connected could cause equipment to fall, resulting in possible property damage, serious personal injury or death. Adult supervision required during play.

Warning: Keep plastic bags away from children to avoid danger of suffocation.

PROTECT YOUR HEARING: Protect any user of the Discover Talking Pen from long-term exposure to loud sounds and high volume. Increase or decrease the volume depending on your environment. When using headphones or ear buds, it is recommended that you listen to the Discover Talking Pen at lower volumes for shorter periods of time. Limit listening time to 90 minutes to avoid long-term exposure. If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.



Caution: The Discover Talking Pen may malfunction, lose information stored in memory, or fail to respond due to electrostatic, electromagnetic, magnetic, or radioactive fields. Normal operation may be re-established by pressing the On/Off button or by pressing the reset key.

Warning: The Discover Talking Pen is equipped with a rechargeable lithium-polymer battery. Do not use in applications which may contaminate food or do harm to human health. This product is generally not hazardous under normal conditions. But like any sealed container, battery may rupture when exposed to excessive heat and this could result in the release of flammable or corrosive materials which may cause irritation to respiratory tract, skin and eyes.

Warning: The lithium rechargeable battery cannot be removed from the product and should only be replaced by Discover Talking PenTM. For your safety, never try to remove the battery.

Caution: The rechargeable lithium battery should only be charged by adults or children 8+ years old, under the full supervision of adults.

FCC Notice

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:


- 1. This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Change or modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Product Certifications

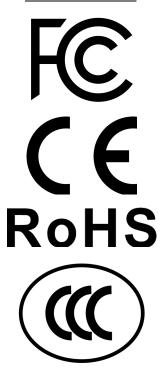

Product Specifications

Discover Talking Pen

Size: 6 x 2.25 x 2 in (152 x 57 x 51 mm)
Weight: 2.3 oz (0.14 lbs)
Talking Pen USB Cable Weight: 0.8 oz (0.05 lbs)
Talking Pen Basement Weight: 0.5 oz (0.03 lbs)

Pen includes an 8GB memory card. Assuming the audio for each book is 160-200 MB, the pen will hold 40-50 books. Your audio recordings on book pages and recording stickers will also count towards the 8GB. One minute of audio is roughly equivalent to 1 MB of memory (varies based on quality and format of audio). With an 8GB memory card, your Discover Talking Pen can store approximately 130-140 hours of audio.

After a full charge, the pen can be used continuously for approximately 5 hours. Charging takes approximately 2-3 hours.

Discover Talking Pen is patented for both its technology and appearance.

Discover Wonders[™] Talking Books

Size: 8.5 x 11.5 in (216 x 292 mm) Weight: 16.5 oz (1 lb 0.5 oz)

Books are hard-cover and include ~1,000 audio hotspots.

All books are copyrighted. All Rights Reserved.

Discover Talking Pen[™] Recording Stickers

Each sticker sheet includes 20-100 recording stickers.

Sticker Sheet with 20 Recording Stickers Size: 3.7 x 9 in (94 x 229 mm) Weight: 0.1 oz (0.006 lbs)

Patented sticker paper with two-dimension coding.