

9HP & 16HP Electric Start Engine

To avoid damage in transit, the starter key box of the engine has been shipped unmounted.

How to connect the wires from the Starter Key box to the Engine.

1. Mount the starter key box to the side of the engine.
2. Separate the BLACK wire from the Diode Box to the Ignition Cut Out wire
3. Connect the wires from the key box as follows.
4. BLACK wire with female connector wire to the BLACK wire from the Diode Box.
5. BLACK wire with male connector to BLACK wire from ignition cut out.
6. BROWN wire to WHITE shielded wire.
7. GREEN and YELLOW STRIPED wire to ground
(You may need to slide back the wire shielding to determine the colour for the last two wires)
8. BLACK/WHITE stripe wire to starter solenoid spade clip
9. WHITE wire with lug attaches to the terminal on the starter solenoid
10. Connect battery positive (12v) to starter solenoid terminal and negative to earth.

