


## OUTDOOR LIVING PERFECTED™

	COMPATIBLE WITH OUTLAND LIVING FIRE TABLE MODELS:					
TICK	SERIES NAME	MODEL NUMBERS	SERIES NUMBERS			
	OUTLAND FIRE TABLE	FMPPC2E, FMPPC2E-1, FMPPC2E-403	400, 401, 403			

Dimension (WxL): 12.75" x 28.75" (325mm x 730mm)

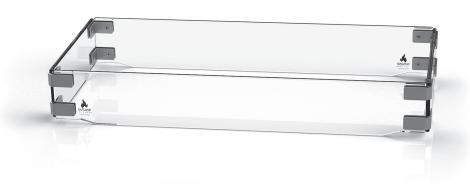

™ Trademark of FMI Brands Inc.



## **PARTS LIST:**

PART NUMBER	DESCRIPTION	QUANTITY	PART
1	LONG GLASS WALL	2	
2	SHORT GLASS WALL	2	0 0
3	M5 X 10	16	
4	INTERIOR BRACKET	8	
5	GASKET	32	
6	SPACER	16	
7	EXTERIOR BRACKET	8	0




## **ASSEMBLY INSTRUCTIONS:**

#### STEP 1

Ensure flat side of glass is top side up on all sides.

# **⚠** IMPORTANT:


Assemble the glass panels on a flat surface. The wind break assembly must be straight and squarely aligned to fit the glass table top properly.

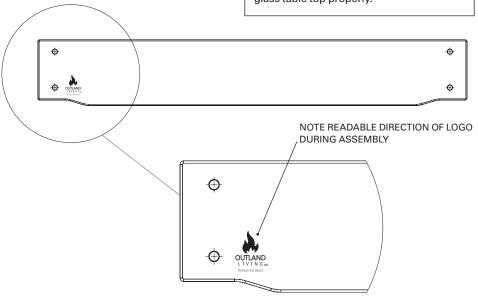

#### STEP 2

For each bracket assembly:


- a. Fit Gaskets (Part 5) over studs on Exterior Brackets (Part 7).
- Press Spacers (Part 6) over studs on Exterior Brackets (Part 7).
- c. Assemble Gaskets (Part 5) and Interior Brackets (Part 4).
- d. Repeat for each bracket (8 times).

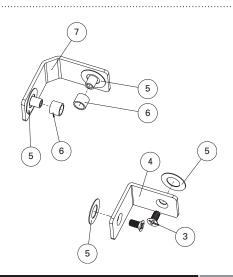

#### STEP 3

There are 8 sets of brackets to install.


- a. Insert Exterior Bracket studs through spacer holes in Glass Walls.
- b. \*\*LOOSELY\*\* Assemble Interior Brackets (Part 4) to Exterior Bracket using M5 x 10 Screws (Part 3) do not tighten screws.
- Once all 8 brackets are loosely assembled tighten the screws. Ensure the glass panels are straight and squarely aligned.

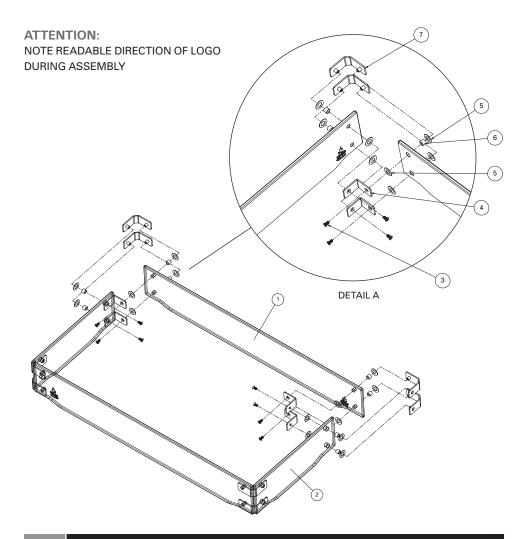



#### STEP 4

Your Glass Wind Break is now assembled.

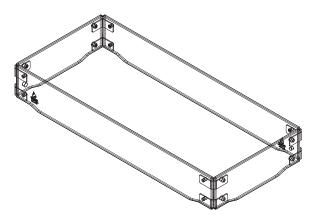

#### STEP 5


Place Glass Wind Break on OUTLAND Fire Table. Ensure flat side of glass is top side up.

## **WARNING:**

The wind break is designed to be slightly loose fitting as it sits in the fire table glass table top. If the wind break is tight fitting \*\*\*DO NOT\*\*\* force it into position. The solution is to ensure all four glass panels are squarely assembled:

- Place the wind break assembly on a flat surface.
- Loosen (do not remove) all bracket fasteners.
- Now, tighten all fasteners again, one at a time, ensuring the glass panels are all straight and squarely aligned.



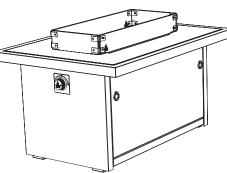

#### **MAINTENANCE:**

Simply use warm soap water to wipe down your Glass Wind Break to keep it clean.

Do not use abrasive cleaners.

## ⚠ WARNING:

This is NOT a toy.

Glass Wind Break will become extremely hot during operation! - DO NOT TOUCH GLASS WIND BREAK while fire table is in operation!

Do not place ANY cover on the Glass Wind Break while the fire table is in operation.

Do not rest anything on or over the Glass Wind Break while the fire table is in operation.

The fire table is a decorative gas appliance only. NEVER cook food on the fire table. Do not use the Glass Wind Break, or any other type of accessory, as a means to cook or keep food warm on the fire table.

Wait at least 30 minutes after turning off the fire table to allow it to cool down before touching Glass Wind Break or putting ANY cover over the fire table.

Please ensure that all adults and children which use or are near a unit in use are aware of the hazard of high-surface temperatures present on the unit during use and should use caution and stay away to avoid burns or clothing ignition.

Children should be supervised at all times when using this unit without exception.



FIRE TABLE!
GLASS WIND BREAK!

WARNING! HOT SURFACE!



GLASS. FRAGILE!



HANDLE WITH CARE



Fire Table accessories, replacement rocks and parts can be purchased at: www.outlandliving.com or by calling 888-514-1663.

The owner's manual is available as a free download from www.outlandliving.com.

Replacement part orders can be sent by mail to the address on the cover of this booklet, or faxed to (888) 797-9931.

Should you have any questions or comments regarding this appliance, please do not hesitate to contact FMI Brands Inc. at (888) 514-1663 or E-Mail to info@outlandliving.com.

# FOR REPLACEMENT PARTS AND ACCESSORIES PLEASE VISIT WWW.OUTLANDLIVING.COM

