 
 


LillyC

WIRELESS PHONE CHARGING PURSE
USER MANUAL

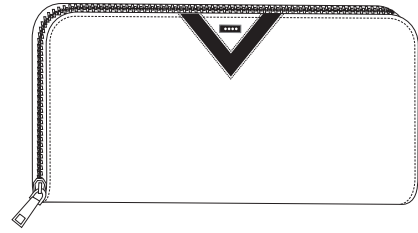


FEATURES

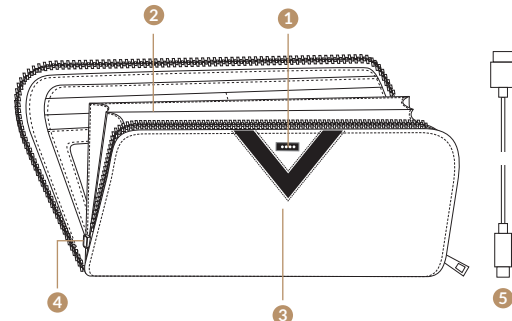

- 1. Touch switch / working status LED indicator
- 2. Wireless charging pocket
- 3. Wireless charging outer zone
- 4. Input / output Type-C charging port
- 5. USB to Type-C recharging cable

TOUCH SWITCH / WORKING STATUS

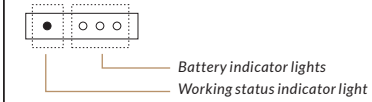


WORKING STATUS

Status	Wireless Charging Phone	Fault (Not Charging)
LED Colour	Green	Red

BATTERY INDICATOR

Status	On	Charging Purse	LED Lights (Blue)	3	2	1
LED Colour	Blue	Flashing Blue	Power	100%	50%	10%

CHARGING THE PURSE

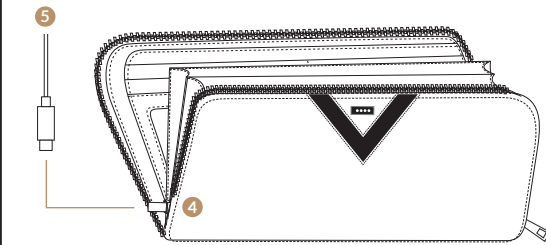


IMPORTANT:
Ensure the purse is fully charged before first use.

Before you start to use your purse make sure the battery is fully charged by plugging the cable (5) into port (4) using a suitable power source. Minimum of 1A USB power supply required, 2A preferably.

The LED indicator (1) will flash blue while charging and will go solid once fully charged. The purse will automatically stop charging once full.

WIRELESS CHARGING YOUR PHONE

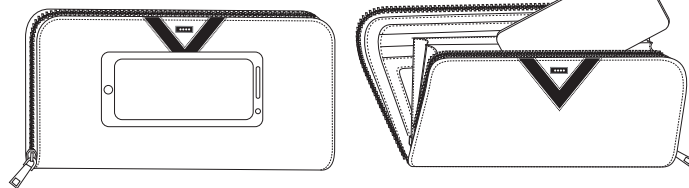

OUTSIDE PURSE

Place phone on the surface of the purse in the charging zone near the 'V' shaped stitching (with the screen facing toward you).


Double touch the indicator switch to turn on the purse. Move the phone if needed to locate the spot for charging (LED indicator will turn green, phone will begin to charge).

INSIDE PURSE

Place phone inside the purse in the pocket closest to the indicator switch. Ensure the phone screen is facing towards the battery (battery is located in the centre of purse).

Double touch the indicator switch to turn on the purse (LED indicator will turn green, phone will begin to charge).

WIRE CHARGING YOUR PHONE

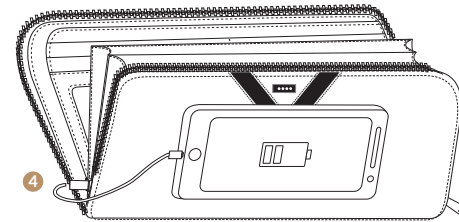

- 1. To achieve wired charging you will need your own cable (Type-C to own phone input)
- 2. Connect your phone to the cable, and the cable to the input / output on purse
- 3. Charging starts automatically. The blue LED will illuminate indicating that charging has begun.
- 4. Charging will stop once your phone is fully charged or the purse battery is empty.

TROUBLE SHOOTING

If the red LED light is shown on the battery/charge indicator a) remove cables, phone and any foreign items away from both the inner and outer charging surface. If this stops the red LED from showing after a few seconds the purse is reset to normal operation.

Possible causes:

- Metal objects near the wireless charging zones
- Phone cases with metal in them
- Thick phone cases – if in doubt try without the case
- Non-wireless enables phones
- Non-suitable power supply – ensure your power supply is within specifications

CARE & MAINTENANCE

- Do not twist, bend or subject the purse to force that may damage the battery or components.
- Do not wash, or expose the purse to heavy rain or liquids in any way.
- Use a damp cloth to clean the outside of the purse
- Keep your purse dry – do not touch the charging cable or charging port with wet hands.
- Do not store your purse near or in direct heating, microwave ovens, cooking equipment or high-pressure containers.
- Keep your purse within a temperature range of -10 to 35 degrees celsius. If used outside of this range the purse may be damaged and/or the battery life reduced.

SPECIFICATIONS

IMPORTANT: Your smartphone must be wireless charging enabled. Please check the manufacturers specifications for suitability.

IMPORTANT: Ensure the purse is fully charged before first use.

Input Power	5V/2A 9V/1.67A
Output Power	5V/2A 9V/1.67A
Battery Capacity	4000mAh Lithium-ion polymer battery
Output Charging	2 position wireless / 1 port wired
Efficiency	> +85%
Certification	CE FCC RoHS
Wireless	85% Qi Standard
Warranty	12 Months

Designed & distributed by CMI Accessories
www.cmiaccessories.com.au

www.lillyc.com.au
Made in China