

12V LED SPOT LIGHT

Rated Voltage 12V AC/DC

Thank you for purchasing this quality product. To ensure correct function and safety, please read and follow all instructions carefully before assembly, installation and use of this product. Please keep instructions for future reference.

NOTE: This installation instruction applies to the 12V side of the luminaire only.

This luminaire is 12V extra-low voltage and can be DIY. Do not plug this luminaire directly into 240V.

Warranty

- This luminaire is covered by a 5 year warranty. The warranty is from date of purchase, not the date of installation.
 Please retain proof of purchase.
- Warranty will be void if there is any damage due to improper usage or modification to the luminaire.
- Failure to comply with the instructions in this manual may increase the risk of damage or injury and will void warranty.

Important: Please Read Before Installation

- INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS Lighted lamp is HOT!
 WARNING To reduce the risk of FIRE OR INJURY TO PERSONS.
 - 1. Turn off/unplug and allow to cool before replacing lamp.
 - 2. Lamp gets HOT quickly! Contact only switch/plug when turning on.
 - 3. Do not touch the hot lens, guard or enclosure.
 - 4. Keep lamp away from materials that may burn.
 - 5. Do not touch lamp at any time. Use a soft cloth. Oil from skin may damage lamp.
 - 6. Do not operate the luminaire fitting with a missing or damaged shield.


SAVE THESE INSTRUCTIONS

Package Contents


A. (1) Stake

B. (1) Luminaire

Product Dimensions

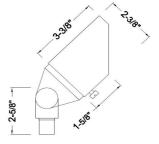


1 Install Stake

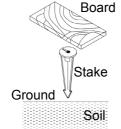

Determine the desired location for mounting the luminaire. Hammer the stake into the ground until flange of stake is flush to grade. To avoid damage to the stake, place a board on top of the stake while hammering.

NOTE:If the ground is hard and the stake is difficult to install, make a crosscut in the ground using a flat shovel.

2 Install Luminaire to Stake

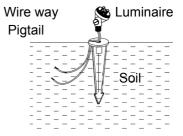


Clear away an area in the ground at the wire way on top of the stake. Lay the luminaire pigtail into the wire way and attach the luminaire onto the stake. Tighten until snug.



3 Wire Connections

5 Install Inner Shield

 Wire Connectors



Main Low Voltage Supply Cable Inner Shield


Luminaire

Strip both leads from the luminaire pigtail.
Using two wire connectors (sold separately) connect the leads from the luminaire to the main supply cable leads.

Thread the inner shield onto the luminaire and hand tighten until snug.

4 Install Bulb

6 Install Glare Guard

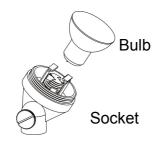

Glare Guard
Lock Screw
Set Screw

Insert the bulb with the correct wattage and type marked on the luminaire label.

CAUTION: Do not exceed maximum wattage marked on luminaire label.

NOTE: DO NOT touch bulb with bare hands. Use soft cloth to handle bulb.

Place the glare guard onto the inner shield and secure it with the lock screw. Adjust the luminaire to the desired angle byusing the set screw

Install/Replace Bulb

Loosen the lock screw to remove the glare guard. Then remove the inner shield to expose the bulb. Replace it with the correct wattage and type marked on the fixture label. Then reinstall the inner shield and glare guard.

IMPORTANT: Halogen bulbs must be protected from moisture and dust

at all times. Always reinstall shield when removed.