



DESCRIPTION

The Zion 4" Path Light comes complete with a fully adjustable reflector top. It is available in a standard 22" fixed stem or a 17" to 28" adjustable stem.

ZION PATH LIGHT

Use	Path, Area, and Garden Accent Lighting Brass, Copper, or Brass w/ Black Cerakote®			
Finish				
Includes	ABS Mounting Sta	ABS Mounting Stake, LightingShrink Professional Crimp, and Heat Shrink Cable Connector		
Order Without	Fits G4 Bi-Pin	FIXED	ADJUSTABLE	
Lamp		ZION-PL-4-G4-CU-F-NL	ZION-PL-4-G4-CU-A-NL	
		ZION-PL-4-G4-BR-F-NL	ZION-PL-4-G4-BR-A-NL	
		ZION-PL-4-G4-BR-BLK-F-NL	ZION-PL-4-G4-BR-BLK-A-NL	
			22" Total 18" Stem Lating and the second sec	
.		Fixed Step Option	- 4.0" - 4.0"	
		Fixed Stem Option	n (F) Adjustable Stem Option (A)	
rass (BR)	Copper (CU)	Brass + Black Cerakote®		
		(BR-BLK)		

WILDLIFE LIGHTING CERTIFICATION PROGRAM

Certification Number: 2019-267

Certification Requirements: Amber LED; Must be downward directed; Maximum mounting height of 24" from the ground; Additional shielding may be necessary if visible from the beach





Application picture shown as **ZION-PL-4-G4-CU-F** (not in Amber).

SOFT SOIL APPLICATIONS: INSTALLING THE GROUND STAKE & FIXTURE

- 1. Connect the power cable from the fixture body to the landscape cable.
- 2. Lay the power cable into the slotted relief on the stake.
- 3. Press the fixture and stake into the ground.
- 4. Use a level to ensure the top of the stake is level with the ground.

HARD SOIL APPLICATIONS: INSTALLING THE GROUND STAKE & FIXTURE

- 1. Unscrew the fixture body from the stake.
- 2. Dig a hole approximately 4" wide by 10" deep and gently tap the stake into the ground with a rubber mallet.
- 3. Use a level to ensure the top of the stake is level with the ground.
- 4. Reinstall the fixture body onto the stake and lay the power cable into the slotted relief on the stake.
- 5. Connect the power cable from the fixture body to the landscape cable.

ADJUSTING THE FIXTURE

- 1. Turn the threaded ring counter clockwise to loosen the lid.
- 2. Find the right light pattern by moving the lid up and down on the stem.
- 3. Turn the threaded ring clockwise to lock the lid into the desired position.
- 4. For adjustable stem models, adjust the stem length by loosening the set screw, adjusting the stem height, and tightening the set screw to hold it in place.

INSTALLING THE LAMP

- 1. Unscrew the threaded ring toward the stem.
- 2. Unscrew the lid from the stem.
- 3. Install the Beacon G4 Bi-Pin into the socket.
- 4. Screw the lid onto the stem.
- 5. Adjust the threaded ring until you achieve the light pattern you want.

WILDLIFE LIGHTING CERTIFICATION PROGRAM

Certification Number: 2019-267

Certification Requirements: Amber LED; Must be downward directed; Maximum mounting height of 24" from the ground; Additional shielding may be necessary if visible from the beach

