



HOW TO FILL YOUR RINSEKIT


Watch the video: www.rinsekit.com/faq

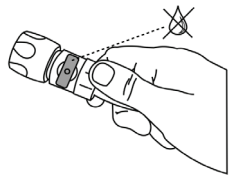


1 Turn off valve on RinseKit hose.

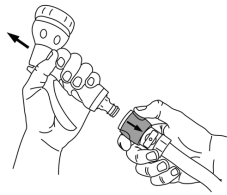


2 Slide down blue sleeve to release quick connect from the nozzle.

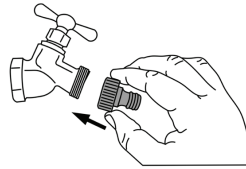


3 Locate a hose bib connected to your home.

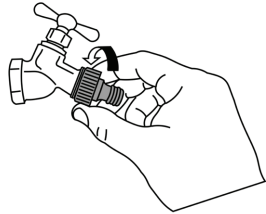


4 Tightly screw on hose bib adapter directly to hose bib.

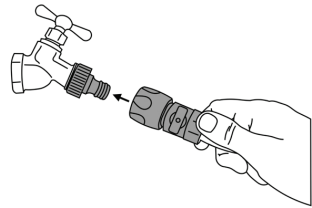


5 Attach quick connect to hose bib adapter. You will hear the quick connect click when it locks in place.

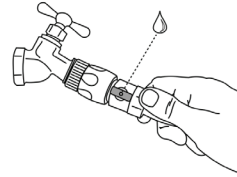


6 Turn on RinseKit valve.

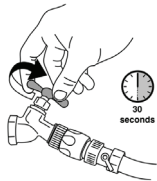


7 Turn on hose bib and allow 30 seconds for the RinseKit to fill. (You cannot overfill the RinseKit)

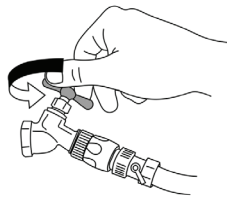


8 Turn off hose bib.

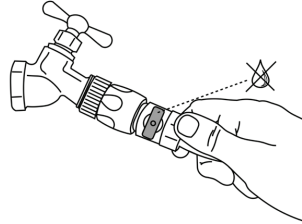


9 Turn off RinseKit valve.

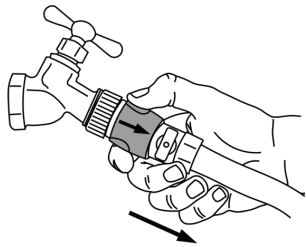

10 Pull down blue quick connect sleeve to disconnect hose from hose bib adapter.

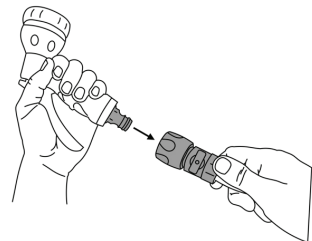

11 Insert nozzle into quick connect. You will hear the quick connect click when it locks on to the nozzle.

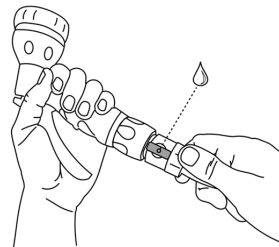

12 Turn on valve on RinseKit hose and spray away!

YOUR RINSEKIT PLUS COMES WITH A PUMP

Watch the video: www.rinsekit.com/faq



Built in gauge ensures proper pressure (65psi)

INSTRUCTIONS FOR USE WHEN FILLING YOUR RINSEKIT REMOTELY WITHOUT A HOSE BIB OR SINK:

1. Unscrew the drain plug from your RinseKit and pour water into the tank.
2. When the RinseKit is 95% full and there is about one (1) inch of air space at the top, screw the drain plug back in.
3. When the drain plug is securely installed, use your hand to pump pressure into the unit. Make sure to look at the pressure gauge located on the top of the pump to ensure that you are pressurizing your RinseKit to the recommended 65psi.
4. If you'd like to reset the PSI gauge, push the small button on the side of the pump.

RINSEKIT^{PLUS}

Your purchase includes: a RinseKit Plus, Pressure Booster Pump, a spare parts bag with an extra drain plug, two hose bib adapters, some extra o-rings and a sticker.