

MOUNT BASE


Curved



Flat



Use either the flat or curved base depending on the surface type.

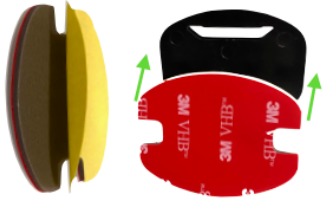

Apply sticker to bottom of base part.



Attach base to desired location.



Use screws to permanently attach base if needed.
DO NOT USE SCREWS ON GLASS!

MOUNT


The nozzle can be mounted directly to the side of the RinseKit. Use the curved base with the screws.




**Note: Only attach to the handle area.
Do not screw into any other areas or
you will puncture the water tank!**



QUICK MOUNT

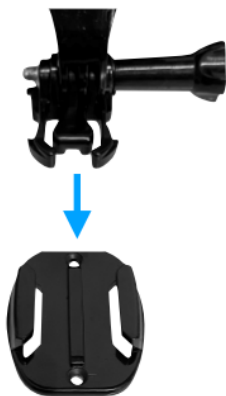

Insert the mount into the base.

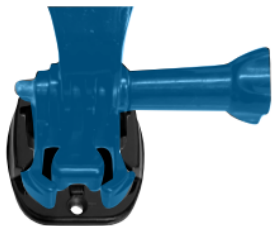


Mount will click when it locks into place on the base.



Press mount tabs in to release from the base.

TOUCH FREE NOZZLE

Firmly press to attach the nozzle to the RinseKit Quick Connect.

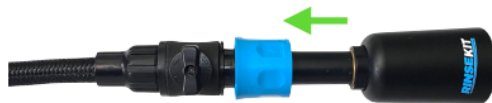

Note: Turn off hose valve when disconnecting nozzle from Quick Connect.

The Touch Free Nozzle is also designed to fit in the hose groove with the lid closed.



SUCTION MOUNT



Use the locking screws to adjust the position of the mount as desired.



Use the suction cup lever to lock the suction cup down.

NOTE: The suction cup mount only works on a smooth clean surface (like glass).



Only use with clean water



1 Year Warranty



Freezing conditions will damage the Touch Free Nozzle.



Lithium battery lasts approximately 6 months before it needs to be recharged.




Touch Free Nozzle will automatically shut off when placed in the storage case.



IP65 Waterproof

TOUCH FREE NOZZLE

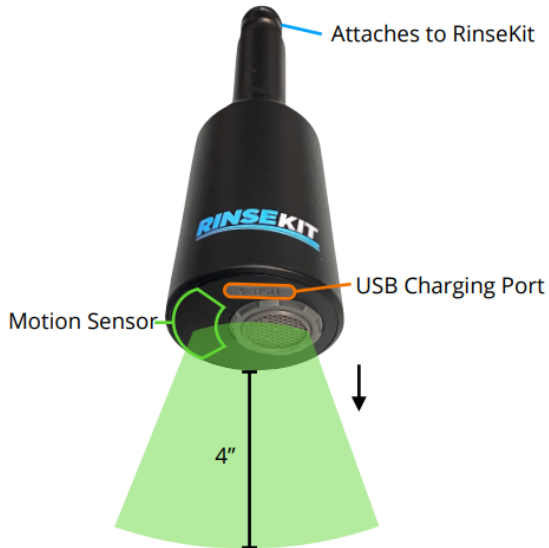

Place hands within 4 inches of nozzle to activate.

NOZZLE MOUNT



Use the swivel mount screw to adjust the angle of the nozzle mount.



Loosen the nozzle mount clamp screws to insert and secure the Touch Free Nozzle.

NOTE: Mount with logo up to keep water drops away from the motion sensor.

TOWEL MOUNT



Loosen the mount screw to adjust the angle of the towel mount.



Rotate towel clamp as needed.