


PRODUCT BRIEF:

The MA-130 diffuser equipment is suitable for small-area commercial occasions to create an aromatic atmosphere. It uses advanced physical atomization technology to convert liquid sesame oil into aroma gas. The well diffuses the aroma quickly into the environment through the auxiliary air flow: Can maximize the effectiveness of fragrance coverage. The concentration setting device and the built-in 200-second/1-week timer ensure that the system can adjust the concentration of fragrance release in different environments according to customer needs. The encryption program loaded on the control panel can lock the operating system of the device for safer use.

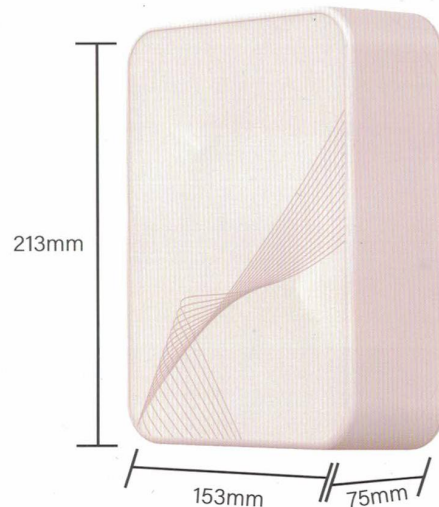

TECHNICAL PARAMETERS OF DIFFUSER EQUIPMENT:

PRODUCT NUMBER: MA-130	APPLICATION AREA: 300m ³
VOLTAGE: DC12V	CAPACITY: 150ml
NOISE: <38dba	NET WEIGHT: 0.85kg

- The accessories of this diffuser unit: diffuser equipment, power adapter, instruction manual, atomizing core wall-mounted screws, etc.
- There are program controls in the diffuser to set different working days, different working hours and concentration adjustments to suit the concentration requirements of different users and different spaces.
- Essential oils are added to essential oil bottles, and you can enjoy a long-lasting and consistent fragrance atmosphere when you turn on the machine.

OPERATING INSTRUCTIONS:

Step 1: Press and hold the top button to open the device cover.


Step 2: Hold the threaded mouth of the atomizing head, pull out the plastic atomizing head, and turn counterclockwise to remove the essential oil bottle.

Step 3: After adding proper amount of essential oil, put it back into the plastic atomizing head and turn clockwise to tighten the essential oil bottle.

Step 4: After installing the essential oil bottle, point the device at the air outlet of the device and hold it back to its original position.

SET THE SYSTEM TIME:

Press the [SET] key for the first time, the hour period number flashes, press [UP/DO-IMIN] to adjust the hour time; the second time press the [SET] key, the hour period setting is completed, the minute segment number flashes, press [UP/DOWN] Key to adjust the minute time; press the [SET] key for the third time, the minute period is set, the working day number flashes, press the [UP/DOWN] key to adjust the working day time, set the current working day; the fourth press [SET] Press the key to confirm that the system is set up.

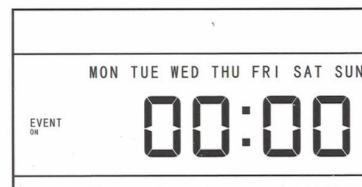

EQUIPMENT MAINTENANCE:

When the equipment is not used for a long time, it is necessary to add 95% industrial alcohol to the essential oil bottle to clean the nozzles and other components inside the equipment;
Specific operation: Add 95% industrial alcohol to the empty bottle, turn on the device and set it to 95% concentration and run for 10-15 minutes, then turn off the device, pour the bottle of alcohol into the spinner.

Tip: At least once every 1-2 months, use 95% industrial alcohol to maintain the equipment

SET WORKING HOURS:

- MODE** Selection of working cycle, timing of 5 working periods, cycle on/off function
- SET** Enter the setting state, such as time setting, week setting, etc.
- UP** Fine adjustment upwards, adjustable time data, date, fragrance intensity
- DOWN** Fine adjustment downward, adjustable time data, date, fragrance intensity

SET THE RUNNING TIME PERIOD:

- Press the [MODE] key for the first time, the LCD display factory setting time, the machine can set 5 kinds of working time period. Example: Set 8 o'clock-10 o'clock, 11 o'clock-12 o'clock, 13 o'clock-14 o'clock. After crossing 00 o'clock, you can set two times, such as the first period-08:00 23:58, the second period 00:02-06:00.
- Press the [SET] key for the first time to enter the start working time setting of the first period of time, the hour start time digits flash, press the [UP/DOWN] key to adjust the hour start time; press the [SET] key for the second time, the hour starts After the time period is set, the minutes start time digit flashes, press the [UP/DOWN] key to adjust the minute start time period; the third time [SET] key, the minutes start time period is set, and the week group number flashes, press [UP/DOWN] Key to adjust the week-matching time group and select the appropriate week-matching time group; after setting the week-matching time group, you can press the [MODE] key a second time to set the end time period of the first-time period. Supplement: week setting, selectable time combination, Monday to Wednesday/Tuesday to Thursday/Monday to Friday/Saturday Sunday/Monday to Saturday/Monday to Sunday/Monday/Tuesday/Wednesday/Thursday/Friday /Saturday/Sunday/Wednesday/Wednesday/Tuesday/Thursday/
- Press the [MODE] key a second time to set the end time period of the first time period. Press the [SET] key for the first time, the hour end period flashes, press the [UP/DOM] key to adjust the hour end period; press the [SET] key for the second time, the hour end period is set, and the minute end period flashes, Press the [UP/DOWN] key to adjust the minute end period.
- Press the [MODE] key for the third time to set the device density. Press the [UP/DOWM] key to adjust the density and select the appropriate density. The concentration range is 5% 95%, from the minimum concentration of 5%, with 5% as a step up to the maximum concentration of 95% (5% for 10S, stop 190S; 90% for 180S, stop 20S).

Precautions:

When the running time period is set, the shutdown time cannot precede the startup time;
If the line time period needs to cross 00:00, you need to separate the two time periods and set separately. Long press the MODE key to restore the factory settings;
Long press SET button 10S button to lock/unlock PCB settings

TROUBLESHOOTING AND MAINTENANCE

MALFUNCTION	ELIMINATION METHOD	INSPECTION METHOD
No display	Whether the voltage plug is connected	Reinsert the power plug
No fogging	Whether the power is turned on, whether the air pump is working normally, and whether it is currently within the set working time period	Turn on the power, check the operation of the air pump, and reset the program
Small amount of atomization	Whether the atomizer is blocked and the air pump is aging	Clean the atomizer and replace the air pump
Spray liquid out of the atomizing outlet	Whether the atomizing joint is loose, the device is placed at an angle	Twist the atomizing connector to keep the device upright
Oil spill	Whether the essential oil bottle is loose and whether the seal ring of the bottle drop	Re-tighten the essential oil bottle and check the correct position of the sealing ring
Equipment abnormal noise	Whether the air pump is loose and the fan is dusty	Install the air pump correctly, fix the position and clean the dust of the phoenix fan

INSURANCE REGULATIONS

1. This warranty applies to brand-new products sold by our distributors or agents in mainland China for self-use rather than resale.
2. Warranty is provided for failures due to manufacturing reasons under normal conditions of use. The warranty period ends after 12 months from the date of purchase. During the warranty period, the service or accessories covered by the repair will be waived. This warranty does not include essential oil consumables.
3. To obtain warranty service, please contact the after-sales department during the warranty period, and show the original or copy of the valid warranty card and official commercial invoice to the relevant department.
4. If you have the following conditions, you will not enjoy free warranty service.

- Damages and malfunctions due to fire/accidents (eg: fire, earthquake, fall, etc.)
- Failure to operate in accordance with the requirements of use, resulting in failures caused by use under unsuitable working conditions and conditions.
- The product was damaged by non-company authorized personnel to repair or replace additional parts.
- Damage caused by improper transportation after delivery.
- Failure to provide a valid warranty certificate, the content of the certificate does not match this product or altered.
- Failure to perform daily maintenance and cleaning as required.
- The product exceeds the compliance requirements.
- Products, consumables, parts or other parts not manufactured or provided by the company.
- Products sold in unusual ways.
- The equipment that needs to be sent to the manufacturer for repair must be notified to the recipient in advance for confirmation.

Dear users: Please read the manual carefully before using this product. Please keep it after reading it for future reference. Thank you. Since the product is sold, it is non-artificially damaged, free warranty within one year, paid repairs and lifetime maintenance beyond the free warranty period, please read the detailed description in the product manual for detailed related warranty provisions

REPLACE THE ATOMIZING CORE



The first step is to unscrew the essential oil, re- remove the black atomizing core and pull out the the oil suction pipe



The second step is to insert the new atomizing core into the body of the atomizing head, and align the oil suction pipe with the small hole in the atomizing core.

REGIONAL DIFFUSER EQUIPMENT FRAGRANCE EQUIPMENT MANUAL



- Please read this instruction manual carefully and keep it properly before using this product;
- The essential oil in the bottle must be emptied during transportation of the equipment to avoid leakage of essential oil and damage to the equipment;
- The device must be kept upright when loaded with essential oils, and cannot be inverted or tilted, otherwise it may damage the internal accessories of the device;
- Do not use overloaded power sockets, power cords and damaged power plugs, which may endanger your safety and may cause fire;
- Please do not try to open the interior of this product, if you find that the product is abnormal, please contact us in time;

SAFETY EFFICIENT ENERGY SAVING ENVIRONMENTAL PROTECTION

EXPERT OF COMPREHENSIVE SCHEME OF SPACE FRAGRANCE COMMUNICATION SYSTEM