


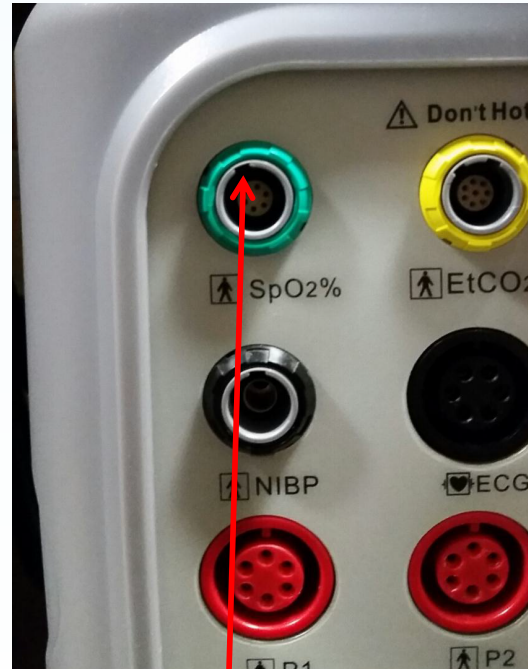

Digital SpO2 Monitors  
- 2 Keyway Guides; 5 pin connector



Analog or Nellcor SpO2 Monitors  
- 1 Keyway Guide; 6 pins



### Analog or Nellcor SpO2

- Once the monitor has been turned on and shows the main operating screen
- Press Setup
- Press Factory Password
- Type in (SPO2.....) you are required to fill the rest of the empty spaces in with periods
- Then exit to main operating screen
- Open SpO2 menu
- Press Factory Button
  - It will either read Nellcor or
  - BCI (Analog)
- Please inform your sales rep if you have Nellcor or Analog