

# EdenPURE®



## 360 Air Fan Heater/Cooler

Model: A5934

**IMPORTANT:  
SAVE THESE  
INSTRUCTIONS**

---

To ensure you get the best results from your Fan, please read this manual first and keep it for future reference. For additional information, please contact your place of purchase or call 1-800-225-6595

---

**Thank you for choosing EdenPURE®**

# IMPORTANT INSTRUCTIONS

## WARNING

IMPROPER USE OF THIS FAN COULD RESULT IN RISK OF FIRE, ELECTRIC SHOCK,  
AND INJURY TO PERSONS

---

## WARNING

ANY REQUIRED SERVICE OTHER THAN ROUTINE CLEANING SHOULD ONLY BE  
PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE AND ANY  
OTHER REPAIRS ATTEMPTED BY ANYONE OTHER THAN AN AUTHORIZED  
SERVICE REPRESENTATIVE WILL VOID THE WARRANTY.  
FOR AUTHORIZED SERVICE, CALL 1-800-225-6595 OR VISIT  
[WWW.EDENPURESUPPORT.COM](http://WWW.EDENPURESUPPORT.COM)

---



**WARNING**  
RISK OF ELECTRICAL SHOCK DO NOT OPEN  
NO USER-SERVICEABLE PARTS INSIDE



## READ AND SAVE THESE INSTRUCTIONS BEFORE USING THIS FAN

**When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:**

- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Remove the unit from its packaging and check to make sure it is in good condition before using.
- Do not let children play with parts of the packaging (such as plastic bags).
- Close supervision is necessary when the product is used by or near children or persons with reduced physical, sensory or mental capabilities. Do not allow children to use it as a toy.
- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Contact Customer Service for repair or replacement.
- Before unplugging the power cord, be sure to turn the power off. When touching the unit, be sure your hands are dry to prevent electrical shock.
- Never install the unit where it is exposed to direct sunlight, excessive moisture/rain, dust and lack of ventilation near any heat sources.
- Avoid making contact with moving parts. Never insert fingers, pencils or any other objects through the guards whenever the power plug is connected, especially while the unit is working.
- Always place the fan on a stable, level surface when operating to prevent the

fan from overturning. Do not run the power cord under carpet. Do not cover the power cord with throw rugs or runners. Route the power cord away from walking paths so that nobody can trip over it. The cable should be kept away from heat, sharp edges and oil.


- To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
- This product should not be used in the immediate vicinity of water, such as bathtub, sink, swimming pool etc., where the likelihood of immersion or splashing could occur.
- Switch off and unplug from outlet when not in use, and before cleaning. Remove by grasping the plug - do not pull on the cord.
- Be sure that no other high current appliances are plugged into the same circuit as your fan, as an overload can occur.
- Avoid the use of an extension cord as the extension cord may overheat and cause a risk of fire.
- Do not use the appliance for other than its intended use.
- Do not use outdoors. FOR INDOOR USE ONLY.
- Do not leave the appliance unattended when switched on.
- Do not cover the grill, or operate in close proximity to curtains etc.
- The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
- This product is intended for normal domestic/household use only.
- Never leave a working appliance unattended, even for a short period of time – always switch it off. Please unplug the appliance from the power supply when not in use.
- Use this fan as described in this manual. Any other uses not recommended by the manufacturer may cause fire, electric shock, or injury to persons and may void the warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the fan running unattended.
- **WARNING:** If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This product has not been designed for any uses other than those specified in this booklet.


- **CAUTION:** Never insert your fingers or any other objects (hair, clothes, utensils, knives, screw drivers etc.) into the openings of the guard or close to the blade when the appliance is connected to the power supply.
- **CAUTION:** DO NOT COVER the appliance in any way in order to avoid overheating and fire.
- **CAUTION - RISK OF ELECTRIC SHOCK:** To reduce the risk of electric shock do not open this device: there are no serviceable parts for customers. Please contact Customer Service.

## BEFORE FIRST USE

Before use, remove all packaging materials and inspect the appliance for any damage. If there appears to be any damage, please take the unit back to place of purchase for a replacement.

## PARTS & FEATURES

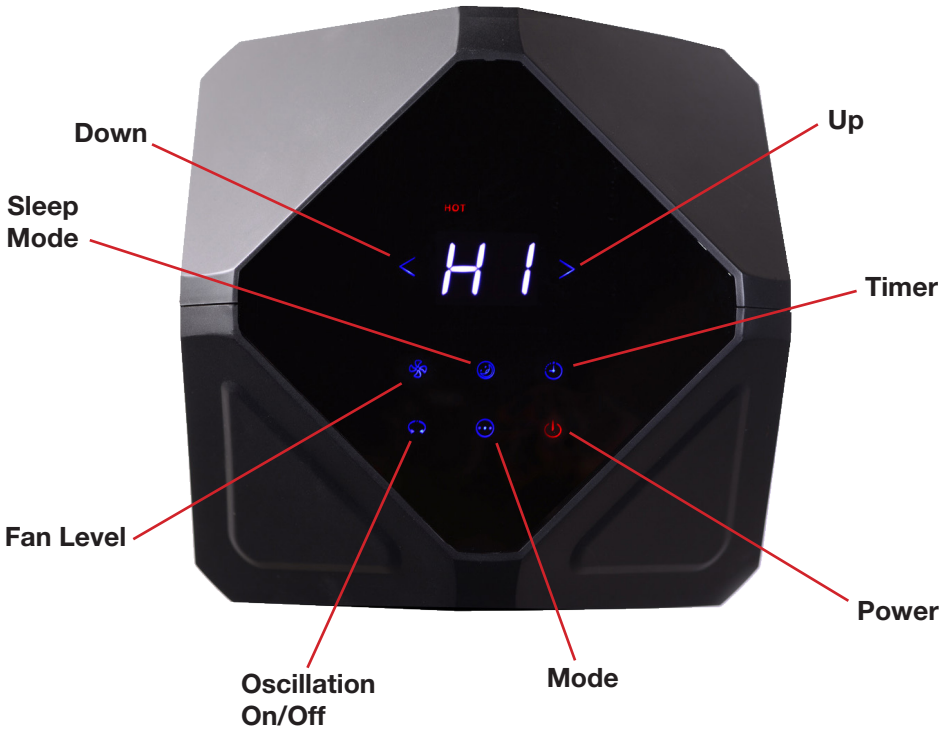

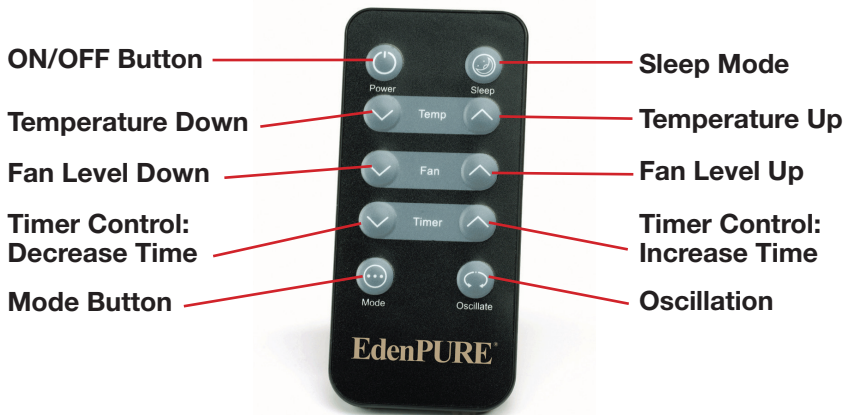

## OPERATING INSTRUCTIONS

**NOTE:** Before inserting the plug into a power outlet, make sure that the correct voltage being used, corresponding to what is indicated on the rating label.

**CAUTION:** Select a suitable location for the fan. Always choose a safe location in accordance to the safely recommendations outlined.

1. Place the heater/cooler on a firm level surface free from obstructions and at least 3 feet away from any combustible materials such as furniture, pillows, bedding, papers, clothing and curtains.
2. Plug the unit into a grounded 120V 60 Hz outlet.
3. Press the main power switch located on the back of the unit to turn it on.
4. Then press the Power Button on the control panel to turn the control panel on.
5. Press the Mode Button to select the mode of the heater/cooler. It will default to HH (high heat), which is 1500W. Press the Mode Button again to change to LH (low heat), which is 900W. Press the Mode Button again to switch the unit to Cool Mode. The LED display will show the cool setting between F1 and FF.
6. In heat mode, press the temperature up or down buttons to set it to the desired temperature (between 40-90 degrees F).
7. Fan Settings:
  - a. In HH mode, press the Fan Level Buttons to set the fan level between F1 and FF.
  - b. In LH mode, press the Fan Level Buttons to set the fan level between F1 and FF.
  - c. In cool mode, press the Fan Level Buttons to set the fan level between F1 and FF.
8. Timer Settings: When the unit is powered on or on standby, press the Timer Button to set the timer from 1-9 hours. The display will show 1H-9H.
9. Press the Oscillation On/Off Button to turn the oscillation on or off.

10. Sleep Mode: Press the Sleep Mode Button to turn the sleep mode on or off. The backlight of the display will be 50% dimmer, the power of the heater will be from low to 800W and the fan speed will be on the F3 setting.
11. Remote Control: The included remote control has the same functionality as on the control panel.

**NOTE:** To change the temperature reading between Celsius and Fahrenheit, hold the Mode Button for 2 seconds until you hear a beep. The display will blink. While the display is blinking, press the TIMER Button to change between Celsius and Fahrenheit. Then press the MODE Button to confirm the setting or it will automatically set in 5 seconds

**CAUTION:** The fan should always be switched off when making any adjustments to the fan head angle, or before moving the unit to a different location.

Adjust the fan to the desired angular air output direction.

## CARE & CLEANING

NOTE: If the power cord set of this appliance becomes damaged, discontinue use. Repairs should be undertaken only by a qualified technician. Contact Customer Service.

### CAUTION:

- To avoid of electric shock, you must always switch off and unplug the fan before cleaning.
- Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the plastic components and the paint finish.
- Your appliance must be switched OFF via the main power supply and unplugged, and allow it to cool down before proceeding with any cleaning.
- Clean the housing with a damp cloth, a vacuum cleaner or a dusting brush.
- We recommended lightly running a vacuum cleaner brush nozzle over the fan grille to remove any dust or dirt that may have accumulated.
- DO NOT use the product in oily or dirty areas (i.e. the kitchen, smoky places, etc), as air vents may become blocked.
- DO NOT use gasoline, paint thinner, solvents or abrasive cleaners on this appliance.
- DO NOT immerse the fan in water or liquid and never allow water to drip into the motor housing.
- To clean the air inlets you can use a vacuum cleaner with a corresponding attachment.

For storage, clean the fan carefully as instructed. Store the fan in the original packaging or cover the fan to protect it from dust.

**NOTE:** If the power cord set of this appliance becomes damaged, discontinue use. Repairs should be undertaken only by a qualified technician. Contact Customer Service.

## **DISPOSAL**

### **Environmental Protection**



Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.

## **SPECIFICATIONS**

Model: A5934

Power Input: AC 120V 60Hz

Power Usage: 1500W/800W

## **CUSTOMER SERVICE**

For repairs or service, please visit your place of purchase, call 1-800-225-6595 or visit [www.edenpuresupport.com](http://www.edenpuresupport.com).

To place an order call 1-800-360-1070 or visit [www.edenpure.com](http://www.edenpure.com).

---

### **WARNING**

**ANY REQUIRED SERVICE OTHER THAN ROUTINE CLEANING SHOULD ONLY  
BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE**

---