

# Bio SpeedCLEAN™ VX200

 
Model No. A5969

## Owner's Manual

---

PLEASE READ  
AND SAVE THESE  
INSTRUCTIONS

---

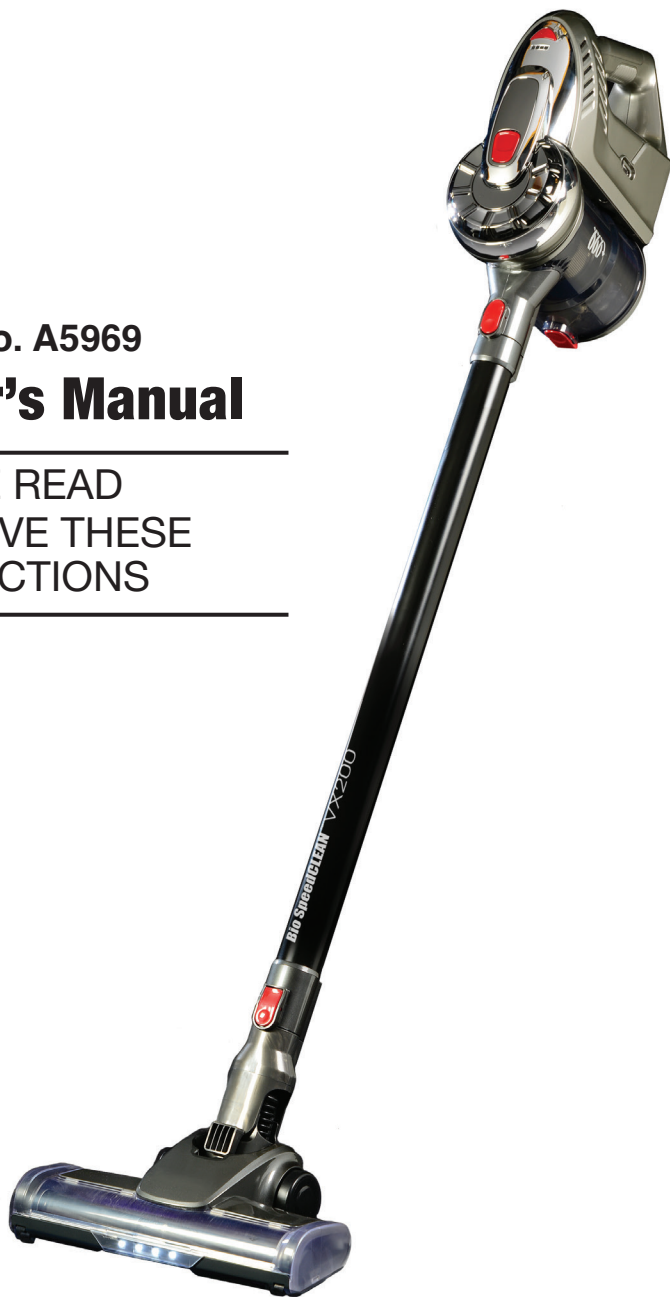

# **INSTRUCTIONS**

## **PLEASE CAREFULLY READ THIS MANUAL BEFORE OPERATING THIS MACHINE**

Do not use this vacuum to clean up liquids such as water, detergent or other wet fluids.

Do not use this vacuum to clean up dense granules such as cement or plaster powder or objects such as balls of hair or paper. This unit is not designed to pick up heavier objects such as rocks, coins, etc. This will cause the vacuum to become blocked and/or overheat.

Use a damp cloth with mild detergent to clean the outside of this machine. Make sure it is unplugged from the wall outlet before cleaning it.

Do not store this vacuum in very high or low temperatures. Do not let it sit in the sun. Store it in a cool, dry spot.

Charge the batteries fully before using it the first time. If this unit is stored a long time, you may need to recharge the batteries before using it again.

When the usage time is becoming shorter as the batteries weaken, it may be necessary to replace the battery pack.

Charge the battery pack only with the adaptor that is provided with this machine. Do not disassemble the battery pack or get it close to liquids. Do not place the battery pack near high temperatures. Do not disassemble the battery pack.

If this vacuum is not working properly, contact [custserv@edenpure.com](mailto:custserv@edenpure.com). Do not try to repair the unit yourself.

Do not let children play with or use this machine or the battery pack.



**WALL  
MOUNT  
HANDLE**

**BATTERY  
UNIT**

**DUST CUP  
RELEASE**

**ON/OFF  
BUTTON**



**MINI MOTORIZED BRUSH**



**2-IN-1 UPHOLSTERY BRUSH**



**CHARGING CORD**



**LONG CREVICE TOOL**

## **PARTS ASSEMBLY**

### **◆ Battery Unit**

Insert the battery unit into the bottom of the motor. When it is locked into the motor, you will hear it click.



 
### **◆ Dust Cup**

Insert the lower plastic clip into the hole on the motor. Then snap the upper cover with the upper release button on the motor. Snap the Dust Cup in place, then press down on the upper and lower release button to lock the cup into place.



◆ **Connection of Vacuum Tube and Motorized Floor Brush**

Insert the upper end of the Motorized Floor Brush into the lower connection of the Vacuum Tube until you hear it click in and lock into place.

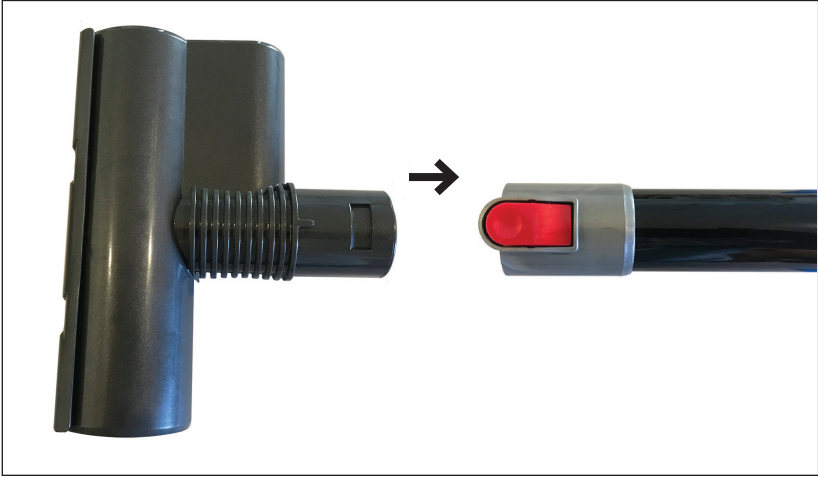

◆ **Connection of the Motor and the Vacuum Tube**

Insert the upper end of the Vacuum Tube in to the main hole of the Motor below the Dust Cup until you hear it click in and lock into place.



◆ **Connection of the Mini Motorized Brush and the Motor**

Insert the upper part of the Mini Motorized Brush into the main hole of the Motor below the Dust Cup until you hear it click in and lock into place.




◆ **Connection of accessory pieces to the Motor**

Insert the accessory brushes into the main hole of the motor below the Dust Cup until you hear them click in and lock into place.



## ◆ Connection of the Vacuum Tube with the accessory pieces

 Insert the accessory brushes into the bottom of the Vacuum Tube until you hear them click and lock into place.

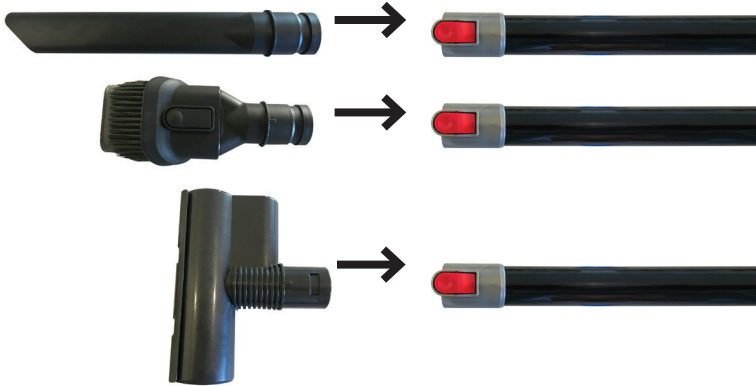

## WALL MOUNT

Attach wall mount to a wall using the screws and anchors that are included. Flip the wall mount handle on the main vacuum unit down to allow the unit to hang onto the wall mount.





# USES

## ◆ Low Speed, High Speed, ON/OFF

Press the ON/OFF Button once to turn the unit on. Press it again to turn the unit off. Use the Speed Control Button to switch the speed between low and high by touching the + or – on the button.

## ◆ Use of 2-in-1 Upholstery Brush

1. Insert the 2-in-1 Upholstery Brush into the hole below the Dust Cup Assembly, then push out the brush head of the 2-in-1 Upholstery Brush by pressing the button and pushing the brush out at the same time. You can then clean furniture, home appliances, book shelves, wardrobes, vanity tables, PC keyboards and many other places.
2. Pull the brush head back by pressing the button and pushing the brush back in at the same time. You can then clean beds, curtains, sofas and many other places.

## ◆ Use of Motorized Floor Brush

Insert the Motorized Floor Brush into the end of the lower Vacuum Tube or into hole below the Dust Assembly. You can then clean carpet, tile and other flooring.

## ◆ Use of Mini Motorized Brush

Insert the Mini Motorized Brush into the end of the lower Vacuum Tube or into the hole below the Dust Assembly. You can then clean upholstered chairs, couches and also beds.

## ◆ Charging the Unit

Use the included adaptor to charge the battery. Plug the adaptor into the Charging Port on the Motor and plug the other end into a wall outlet. When charging, the light will be red. When it is fully charged, the light will turn blue and you can remove the adaptor.

You can also charge the battery when it is outside the unit by plugging the adaptor into the Charging Port on the battery and plugging the other end into the wall.

# CLEANING THE UNIT

## ◆ Clean Dust Cup after each use

Press the upper button on the Motor to release the Dust Cup Assembly Unit.

 


## ◆ Dust Cup Cleaning and Reassembly

- Press the button at the bottom of the Dust Cup to release the Lower Cover of the Dust Cup to empty it over a trash can.
- Hold the Dust Cup with one hand, and use your other hand to open the top of the Dust Cup counterclockwise and take the upper part off the Dust Cup.
- Take the filters out as shown below to clean them. Run them under water to clean and let them air dry.



A.

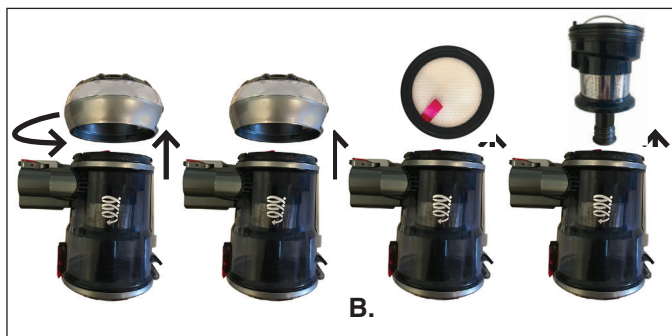

B.



C.

Reassemble the dust cup by making sure the tabs are all the way down in the Dust Cup. Put the lid back on so the arrows lineup and rotate it to lock into place (b).

## ◆ Cleaning the Power Brush



1. Take your finger and pull the tab down to unlock it.



**2. Pull the lever up.**



**3. Pull the roller brush out so you can get all the debris off the brush.**



**Make sure you remove all of the debris from both sides.**



**You will need to remove the one end that has the flat side on it.**



**This way you can pull remove the debris that is built up and pushed down on the inside of the metal piece.**



**Also remove any debris from the end piece. If all of the debris is not removed, the build-up can make it harder for the roller brush to rotate. This will result in the unit turning itself off to protect the motor.**

## TROUBLESHOOTING TIPS

- ◆ If there is no power/the machine doesn't turn on, it will need to be charged.
- ◆ If the bristles are not rotating, they will need to be cleaned.
- ◆ If you are charging the battery and the charging light isn't on, the cord may not be inserted properly into the charging port. Try pushing it in farther.
- ◆ If the battery won't hold a charge, you may need a replacement battery. Go to [www.edenpure.com](http://www.edenpure.com) to purchase one.

## PRODUCT SPECIFICATIONS

<b>Model Number</b>	<b>A5969</b>
<b>Volts</b>	<b>22.2Vdc</b>
<b>Power</b>	<b>120W</b>
<b>Input</b>	<b>100-240V – 50/60Hz 0.5A</b>
<b>Output</b>	<b>26Vdc, 650mA</b>

This vacuum comes with a 1 year limited component warranty. If your unit does not appear to be working properly, please contact our service center by calling 1-800-225-6595.

To place an order:  
Call 1-800-360-1070 or go to [www.edenpure.com](http://www.edenpure.com).

**EdenPURE®**  
**7800 Whipple Avenue NW**  
**N. Canton, OH 44720**  
**[custserv@edenpure.com](mailto:custserv@edenpure.com)**