

EdenPURE® Classic Heater

EASY START-UP GUIDE

- 1. Plug the power supply cord into a grounded wall outlet. (120VAC, 60Hz)**

Important: This heater is for use on 120 volts. This heater comes with a grounded (three-prong) plug. The grounded plug must be used with a grounded outlet. Do not use an adapter in a two-slot wall outlet.

- 2. TURNING THE HEATER ON**

To turn the heater ON, press the MODE button, the heater will wait in ECO Mode.

- 3. HEATING MODES**

Press the MODE button to toggle between the different modes: ECO, HIGH, LOW and STANDBY. Exit from any mode to stand-by mode by pressing the STANDBY button.

- 4. ECO MODE – 1500W/1000W**

ECO mode is a computerized mode to optimize energy efficiency. It will programmatically select between HIGH and LOW power mode to heat up the room to the desired temperature in the most effective way. Once the desired temperature is achieved, the heater will maintain the room to the set temperature. ECO mode is the environmental friendly operating mode.

- 5. HIGH POWER MODE – 1500W**

HIGH mode will control the heater to operate at high power until the room reached the set temperature. The heater will stop heating and initiate component cooling process before turning off the fan. Once the desired temperature is achieved, the heater will maintain the room to the set temperature.

- 6. LOW POWER MODE – 1000W**

LOW mode will control the heater to operate at low power until the room reached the set temperature. The heater will stop heating and initiate component cooling process before turning off the fan. Once the desired temperature is achieved, the heater will maintain the room to the set temperature.

CONTINUES ON REVERSE SIDE

7. SETTING THE TEMPERATURE

Choose the desired Mode: ECO, HIGH, or LOW. To set the desired temperature:

Press the **+** button once until the numeric temperature starts flashing.

Press the **+** button again to increase the temperature or the **-** button to decrease the temperature.


Once the temperature is set, the heater will warm up the room using the selected Mode. The heater will sample the room temperature every 4 minutes after the desired temperature is reached.

8. Display the room temperature

The display shows the set temperature all the time, press and hold the MODE button and then press the **-** button. The room temperature will display for 30 seconds. It will return to set temperature after 30 seconds.

9. Night Mode

Night mode is designed for quiet operation during the night. When the room is dark, the night mode will be on automatically. When the heater reaches the set temperature in night mode, it will test the temperature of the room less frequently (every 30 minutes). When the heater detects light, it will automatically return to the ECO Mode.

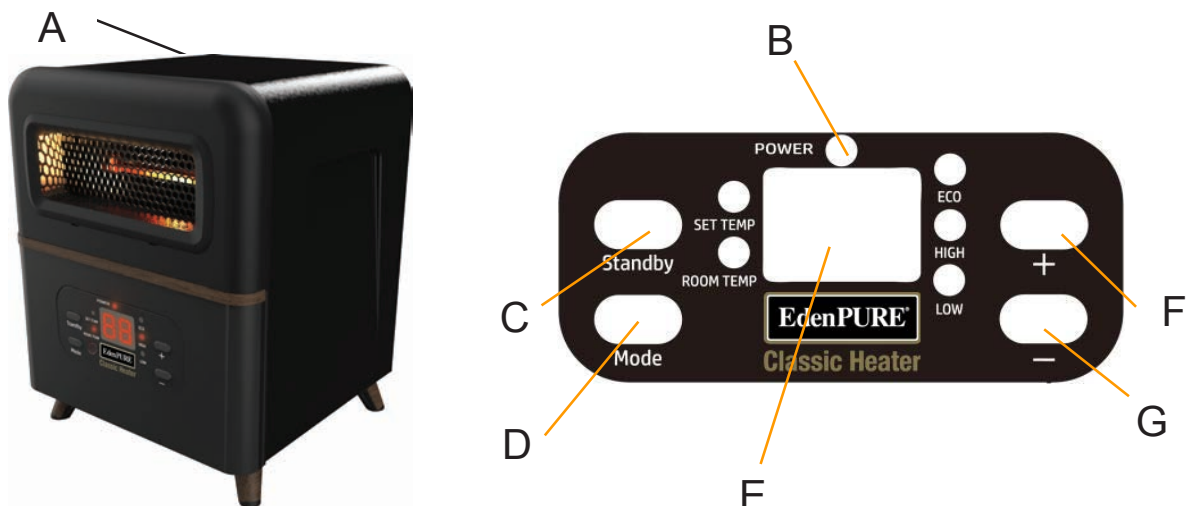

Features

- A. "Cool-Touch" cabinet
- B. POWER LED light
- C. Standby ON/OFF button
- D. MODE button

- E. LED temperature display
- F. Increase temperature button
- G. Decrease temperature button