



Model 1 Fireplace
OWNER'S MANUAL Model No. A5903



**IMPORTANT
SAVE THESE
INSTRUCTIONS**

To ensure you get the best results, please read this manual first and keep it for future reference. For additional information, please contact your place of purchase or call 1-800-225-6595.

Thank you for choosing EdenPURE®



Thank you for choosing the EdenPURE® Model 1 Fireplace. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new heater.

IMPORTANT INSTRUCTIONS

WARNING

**IMPROPER USE OF THIS HEATER COULD RESULT IN RISK OF FIRE, ELECTRIC SHOCK,
AND/OR PERSONAL INJURY**

WARNING

**ANY REQUIRED SERVICE SHOULD ONLY BE
PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE AND ANY
OTHER REPAIRS ATTEMPTED BY ANYONE OTHER THAN AN AUTHORIZED
SERVICE REPRESENTATIVE WILL VOID THE WARRANTY.**

FOR AUTHORIZED SERVICE, CALL 1-800-225-6595 OR VISIT WWW.EDENPURESUPPORT.COM

WARNING



**RISK OF ELECTRICAL SHOCK. DO NOT OPEN.
NO USER-SERVICEABLE PARTS INSIDE.**



1. Read ALL instructions before using this unit.
2. CAUTION: Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
3. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater.
4. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft. from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
5. Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
6. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
8. DO NOT touch the control panel or plug with a wet hand.
9. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
10. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.

12. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
13. Always plug heaters directly into a wall outlet receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip)
14. To avoid fire or shock hazard, plug the unit directly into a 120VAC electrical outlet.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug, DO NOT unplug by pulling on the cord.
16. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
17. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
18. Always use on a dry, level surface. Use on floor only.
19. DO NOT use outdoors.
20. WARNING: To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
21. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Only qualified personnel should perform all servicing.
22. Save these instructions.

 
SPECIFICATIONS

Voltage Rating	120 V (60Hz)
Power Consumption	1000W
Unit Size	13.5 in. (W) x 6.7 in. (D) x 9.8 in. (H)
Unit Weight	10.5 lb.

SAFETY FEATURES

Overheat Safety Feature

This heater is equipped with a overheat safety feature. When the heater's internal components reach a certain temperature that could cause overheat and possible fire, the heater will automatically shut off.

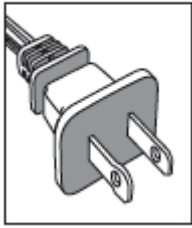

CONSUMER SAFETY INFORMATION

THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

DO NOT ATTEMPT TO MODIFY THIS PLUG OR OVERRIDE THIS SAFETY FEATURE IN ANY WAY.

WARNING: It is normal for the power cord to feel warm to the touch; however, a loose fit between the outlet and the plug may cause overheating of the plug. If this occurs, try inserting the plug into a different outlet. Contact a qualified electrician to inspect the original outlet for damage.



The heater may emit a slight, harmless odor when first used. This odor is a normal condition caused by initial heating of internal heater parts and will not occur again.

 
IN THE BOX

- EDENPURE® MODEL 1 FIREPLACE
- INSTRUCTION BOOKLET
- QUICK START GUIDE

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.


PRODUCT DIAGRAM

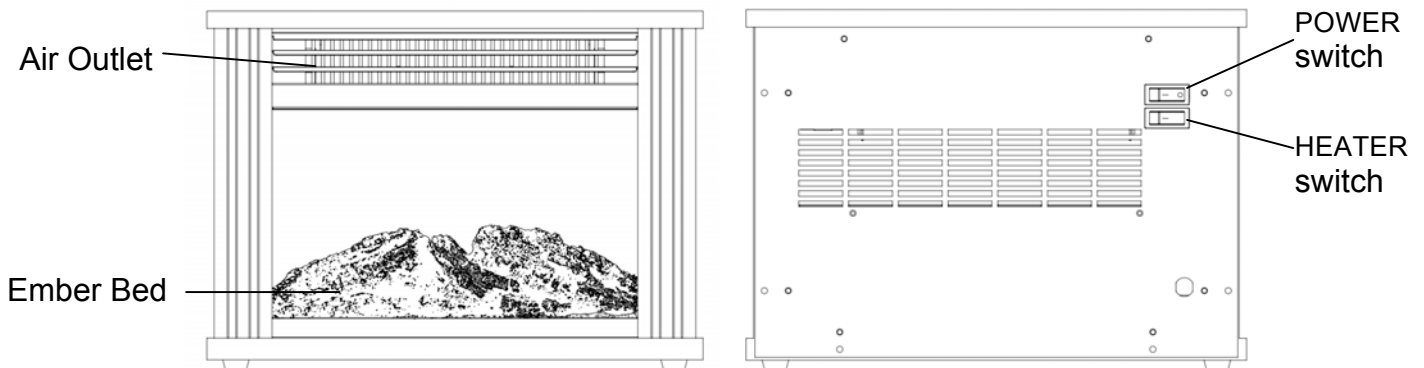


OPERATING YOUR HEATER

Place the heater on a firm, level surface and plug into a 120V 60Hz power outlet. Once the Electric Fireplace has been properly assembled and connected to an electrical outlet, it is ready to operate.

 1. Power switch “— O”

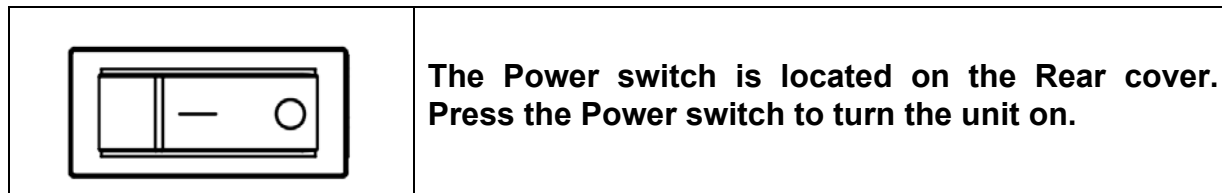

 2. Heater switch “—”

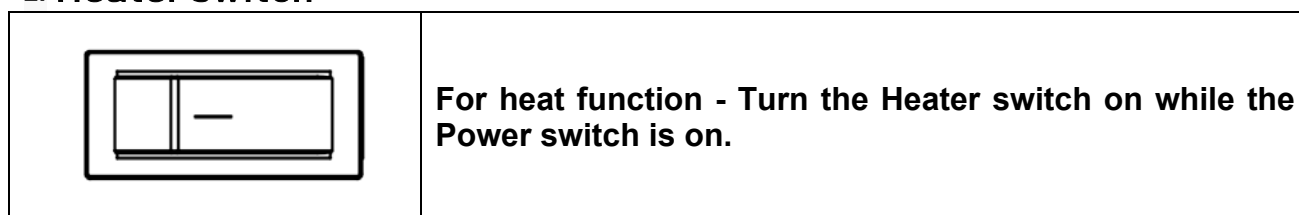

MAINTENANCE

1. Glass Information

- * Under no circumstances should this product be operated with missing or broken glass.
- * Do not strike the glass.
- * Do not use abrasive cleaners to clean the glass.
- * Replacement glass is available from the manufacturer and replacement should be carried out by a qualified service person.

2. Cleaning

- *To clean the unit, first turn off controls on unit and unplug unit from power source.
- *To clean the glass door: remove dust with clean dry cloth or to remove finger prints and other marks clean glass with clean damp cloth. Do not use abrasive cleaners or spray liquids on glass door surfaces.
- *Metal and metal painted parts should be cleaned with clean damp cloth only. Do not use abrasive cleaners or spray liquids on this surface.

TROUBLE SHOOTING

If the heater will not operate, please check the following before seeking repair or service:

1. Check if the power cord is plugged into an electrical outlet, if not, plug in.
2. Check if electricity to the outlet is working.

STORAGE

Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

SERVICE

For repairs or service, please visit your place of purchase, call 1-800-225-6595 or visit www.edenpuresupport.com.

WARNING: Any required service should only be performed by an Authorized Service representative.

Follow us/Like us



facebook.com/Edenpure



[instagram.com/
edenpureproducts](https://instagram.com/edenpureproducts)



[twitter.com/
edenpure_](https://twitter.com/edenpure_)



[pinterest.com/
Edenpure](https://pinterest.com/Edenpure)