


EdenPURE[®] Model 2 Fireplace

EASY START-UP GUIDE

1. Plug the power cord into a grounded wall outlet (120v, 60Hz)
2. Start and select working mode:
 - a. Turn the heater on by pressing the Power button on the control panel or on the supplied remote control. Turn the heater off by pressing the Power button a second time. The lights will go into a sleep mode after 60 seconds and will come back on when the user touches the display again. Once the power is off, the heating element will stop working right away. The fan will continue to run for 3 minutes to emit residual heat inside of the unit.
 - b. Select a heat setting. Press the Heater button to toggle between high and low heat settings.
 - c. The High light will light up when the high mode is on. The Low light will light up when the low heat mode is on. High heat mode uses 1500W. Low heat mode uses 1000W.
3. Setting desired temperature:
 - a. Adjust the thermostat by pressing the up and down arrows on the control panel or remote control.
 - b. The temperature can vary from 59° F to 95° F. Once you have chosen the desired temperature, the heater will remain on until the room temperature increases to the temperature on the digital display. The heater will cycle on and off to maintain the desired room temperature.
4. Setting the Ember Bed color:
 - a. Press the Ember Bed button to switch between 10 colors of embers.
 - b. Press the Ember Bed button for 5 seconds and the ember colors will go into an automatic color cycle. This function can only be operated on the control panel.
5. Setting Flame color:
 - a. Press the FLAME button to switch between 10 flame colors.
 - b. When you press the FLAME button for 5 seconds, the flame colors will go into an automatic color cycle. This function can only be operated on the control panel.
6. Setting the timer when the power is off
 - a. When the power is off, press the TIMER button on the control panel or remote control.
 - b. Adjust the time by pressing the up and down arrows on the control panel or remote control.
 - c. The digital display turns the timer on so it can be set. Press the UP or DOWN button more than once, and the time will vary from 0 to 12 hours in 1 hour intervals.
7. Setting the timer when the power is on
 - a. When the power is on, press the timer button on the control panel or remote control.
 - b. Adjust the time by pressing the up and down arrows on the control panel or remote control.
 - c. The digital display turns the timer on so it can be set. Press the UP or DOWN button more than once, and the time will vary from 0 to 12 hours in 1 hour intervals.
8. Locking the Control Panel
 - a. Lock the control panel to keep children from tampering with it. It can be locked in both power-on and power-off modes. This function can only be operated using the control panel.
 - b. Press both the UP and DOWN buttons at the same time and hold for 3 seconds. The control panel is locked when the buzzer rings. When locked, the control panel and remote control will not work.
 - c. To unlock the control panel, press both the UP and DOWN buttons at the same time for 3 seconds. The control panel is unlocked when the buzzer rings. The control panel and remote control will now work.

9. Flame brightness adjustment
 - a. There are 5 flame brightness settings.
 - b. Press the Light button to switch the brightness of the flame and ember bed colors at the same time.
10. Maintenance
 - a. Glass Information: Under no circumstances should this product be operated with missing or broken glass. Do not strike the glass. Do not use abrasive cleaners to clean the glass. Replacement glass is available from the manufacturer and replacement should be carried out by a qualified service person.
 - b. Cleaning: To clean the unit, first turn off the controls on the unit and unplug the unit from the power source. The clean the glass door, remove dust with a clean dry cloth or remove fingerprints and other marks using a clean damp cloth. Do not use abrasive cleaners or spray liquids on glass door surfaces. Metal and metal painted parts should be cleaned with a clean damp cloth only. Do not use cleaners or spray liquids on this surface.

Control Panel

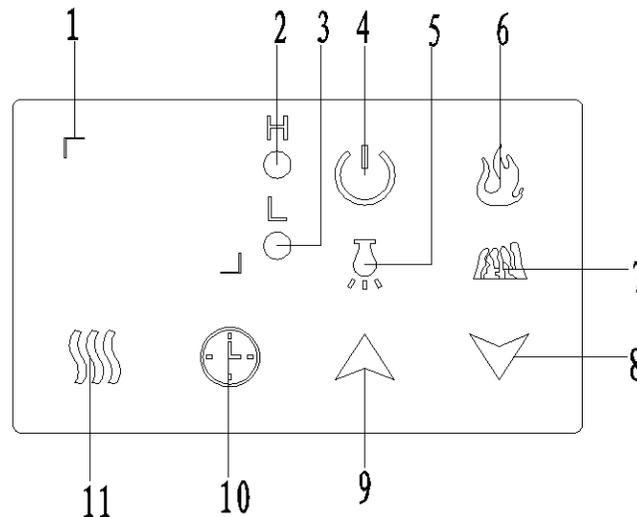

1. **Digital display:** Indicates the temperature that was set or the amount of time the unit will run.
2. **High Fan Mode Button:** Speeds up the fan.
3. **Low Fan Mode Button:** Slows down the fan.
4. **Power button:** Turns the power on and off.
5. **Light button:** Adjusts the flame and the brightness of the embers.
6. **Flame button:** Turns the flame on and off and changes the color of the flame.
7. **Ember Bed Button:** Adjusts the color of the ember bed.
8. **Down button:** Decreases the temperature or timer.
9. **Up button:** Increases the temperature or timer.
10. **Timer button:** Sets the timer.
11. **Heater button:** Turns the heat on and switch between high and low fan speed.