

EdenPURE[®]

Bringing Home Better Living

Thank You for Your Purchase!

PERFORMANCE RECOMMENDATIONS

To assure maximum performance, please follow the recommendations below:

1. For best results, do not locate the heater in an area with a high rate of air movement, as the warm air will be pushed out of the intended area.
2. Try placing the heater near a warmer inside wall and direct the output toward a cooler outside wall. The cooler outside wall will tend to draw the heat toward itself, which will encourage more efficient heating.
3. Do not place the heater next to a cold air return, as this will draw the heat away from the area to be heated. This will allow for more efficient heating. Experiment with the placement of the heater to see what works best for you.
4. To ensure maximum efficiency, a 40% (minimum) relative humidity should be maintained in the heated environment.
5. The heaters are designed to operate for maximum efficiency in a room temperature range from 48° to 90° F.
6. Try lowering your central heating system to a lower temperature and placing the heater in the area you spend the majority of your time. Now set the heater to your desired comfort level. After all, there is no point in heating multiple rooms when they are not in use.
7. When heating larger areas, place the heater in a central location. If a ceiling fan is nearby, try using it at the same time to help distribute the heat evenly.

**IMPORTANT:
SAVE THESE
INSTRUCTIONS**

To ensure you get the best results from your portable heater, please read this manual first and keep it for future reference. For additional information please contact your place of purchase or call **1-800-225-6595**

IMPORTANT SAFETY INSTRUCTIONS

WARNING

IMPROPER USE OF THIS HEATER COULD RESULT IN RISK OF FIRE, ELECTRIC SHOCK, AND INJURY TO PERSONS

WARNING

ANY REQUIRED SERVICE OTHER THAN FILTER MAINTENANCE SHOULD ONLY BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE AND ANY OTHER REPAIRS ATTEMPTED BY ANYONE OTHER THAN AN AUTHORIZED SERVICE REPRESENTATIVE WILL VOID THE WARRANTY.

FOR AUTHORIZED SERVICE, CALL 1-800-225-6595 OR VISIT WWW.EDENPURESERVICE.COM




WARNING
RISK OF ELECTRICAL SHOCK DO NOT OPEN
NO USER-SERVICEABLE PARTS INSIDE



READ ALL SAFETY INSTRUCTIONS BEFORE USING THE HEATER

1. This heater's grill is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and the rear.
2. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
3. Always unplug heater when not in use.
4. Do not operate any heater with a damaged cord or plug, or after it has been dropped or damaged in any manner. In such cases, return the heater to an authorized service facility for inspection/repair.
5. Do not use the heater outdoors or on construction sites.
6. The heater is not intended for use in bathrooms, laundry areas and similar indoor locations, areas with standing water, a shower or swimming pool. Never place the heater where it may fall into a bathtub or other water container.
7. Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Arrange the cord away from traffic areas and where it will not be tripped over.
8. To disconnect the heater, turn the unit off, then remove the plug from the outlet once it has stopped running.
9. Do not plug the heater into any other cord-connected device such as a power strip, surge protector, multiple outlet adapter, grounding adapter or outlet-type air fresheners. **Plug into a 3-prong 120v 15amp or higher grounded circuit receptacle only.** Do not plug the heater into a loose-fitting or broken receptacle. The heater is for use on 120 volt outlets. The cord has a plug as shown at "A" in Figure below.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, do not block, or place anything in the front or rear of, the heater.
12. When performing filter maintenance, do not force the filter to dry using alternative methods. Doing so could damage the filter.
13. Do not use in areas where gasoline, paint or flammable liquids are used or stored.
14. Some EdenPURE® heaters contain a button battery for the remote. If swallowed, it could cause severe injury or death in just two hours. Seek medical attention immediately.
15. Use this heater only as described in the manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons and may void the warranty.
16. Manual restart maybe required if power to this unit is interrupted.

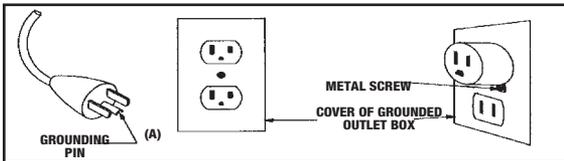

GETTING STARTED

READ ALL INSTRUCTIONS BEFORE USING THE HEATER

1. We recommend keeping the packaging for off-season storage and for any transportation needs.
2. Find a level and unobstructed location to place the unpackaged heater.
3. Do not plug in or run any appliances on the same circuit while the heater is running.
4. Plug the power-cord directly into an unused, grounded receptacle.
5. **FIRST TIME QUICK START UP** - Push the POWER button to turn the unit on. "Factory Settings Restored" will appear on the display upon initial use or when power has been lost for an extended period of time. Press NEXT to continue. The unit is factory set on "Heat" mode at 72°F. Press ▲ or ▼ to adjust the desired temperature.

IMPORTANT: If "Factory Settings Restored" is displayed as described above, the unit will require 5 to 10 minutes to acclimate to the room and display an accurate room temperature. Feel free to use the unit during this time but realize that it will not properly sense and react to the real room temperature for 5 to 10 minutes. If, after 5 to 10 minutes, the temperature is not the same as your wall thermostat, use the "Temp Calibration" (described on the next page) to calibrate the unit.

6. **Customize your Heater set up: Press SETTINGS**
SETTINGS – the following options are found when pressing the SETTINGS button.
Set Time – used to set the correct day and time on the display of the unit. Setting the time is necessary for schedule or timer usage.

Press ▲ or ▼ to the correct day of the week – then touch NEXT

Press ▲ or ▼ to the correct hour – then touch NEXT

Press ▲ or ▼ to the correct minutes – then touch NEXT

Press ▲ or ▼ for AM/PM – then touch SET

Sleep/Wake Timer – enables you to set a time for the heater to turn on or off.

Sleep Time – while the heater is running in your desired mode, set the time you would like the heater to turn off (can be set in 15 min. intervals).

Press ▲ or ▼ to the correct hour – then touch NEXT

Press ▲ or ▼ to the correct minutes – then touch NEXT

Press ▲ or ▼ for AM/PM – then touch SET

Once the timer is set, the heater will run at your selected mode until it reaches the selected turn off time. "Sleep in (the amount of time left)"

will appear on the screen and count down when this feature is set.

"Cancel Timer" will now also appear on screen. If desired, press to cancel timer.

Wake Time – Set the time you would like the heater to turn on (can be set in 15 min intervals).

While the heater is running in your desired mode, set the next time you would like the heater to turn on for use.

Press ▲ or ▼ to the correct hour – then touch NEXT

Press ▲ or ▼ to the correct minutes – then touch NEXT

Press ▲ or ▼ for AM/PM – then touch SET

Once the time is set, turn the unit off. "Wake timer in (the amount of time left)" will be displayed on the non-lit screen, counting down the time left.

To cancel timer, press the power button to turn the heater on then press "Cancel Timer".

*These are one-time-only functions and the heater will not retain this information after the timer duration is completed or cancelled. If you would like the heater to turn off and on at the same times daily, please see the "Set Schedule" function described later in this manual.

Temperature Display – options to change display to degrees in Fahrenheit or Celsius

Press ▲ or ▼ for Fahrenheit or Celsius then select

Back Light – changes the back lighting on the display

Press ▲ or ▼ for the following choices then select

Always on – the display stays bright always

Dim after delay – A few seconds, after the last press of a button, the display will dim slightly

Always off – display will not light at all

LCD Contrast – adjust the contrast of the text shown on the display

Press ▲ or ▼ to adjust the display to the preferred contrast

****Especially useful when the unit is being viewed at an angle.**

Temp Calibration – compare the room temperature indicated in the left corner of the display with the temperature reading on your wall thermostat. If the temperatures do not match, you will need to adjust the heater reading accordingly.

Press ▲ or ▼ to adjust the temperature difference, as much as plus or minus 7° then hit SET.

Filter Life - Select "Filter Life" to reveal the Filter Status of how many hours of use are left before the filter needs cleaned. Once 200 hours of use have passed, the unit will beep and shut off. After cleaning the filter: power the unit on, press the SETTINGS button, scroll to "Filter Life" and press the SELECT button. Then, press and hold "Reset" for 5 seconds to reset the filter life and resume use.

*****CLEANING THE FILTER OFTEN IS RECOMMENDED. IF THE AREA OF USE IS PARTICULARLY DUSTY, FEEL FREE TO CLEAN THE FILTER MORE OFTEN.**

7 **Heater Modes** – select MODE

Press ▲ or ▼ to choose the desired mode from the following choices:

HEAT – once Heat is selected, use the ▲ or ▼ to select your desired temperature. The unit will start heating and cycle on and off to maintain the selected room temperature. If you desire the Heat to stay on constantly and not cycle on and off, adjust the desired temperature to be several degrees higher than the displayed room temp.

****the heater will not cycle on if the selected temperature setting is lower than the room temperature displayed in the left-hand corner of the display.**

PURIFY ONLY – if your unit is equipped with an Air Purifier, selecting this mode will run the Purifier and Fan only.

HEAT+PURIFY - the heater will Heat (as listed above) along with the Air Purifier function (if the unit is equipped with a purifier.)

FAN ONLY – select "Fan only" to use the unit to circulate air in your room without heat.

OFF – selecting "Off" will turn the heat function off but does not power down the unit.

8 **REMOTE** – if using an optional remote control, insert battery into the compartment on the remote. Choose a mode by pressing the MODE button on the remote, then Press ▲ or ▼ to desired mode, press MODE again to select. If a heating mode is chosen, press ▲ or ▼ to adjust to the desired temperature. The remote can also power the unit on or off.

*Settings and Scheduling features cannot be accessed by using the remote control.

9 **SCHEDULE** – select this button when desiring to set scheduled times when the unit will be turning on and off. There are separate times for weekdays (M-F) and weekends. Both schedules are designed to have 4 on/off times during the day. In order to schedule times, you must go through the entire program and set all times for the whole program. If you do not want the heater coming on more than once a day or you do not desire a weekend and/or weekday schedule, simply select the Mode "OFF" each time no other setting is desired when setting the program.

*this mode is separate from the "Sleep/Wake timer", which is an individual one-time-only timer, not a daily timer. If a timer is currently on, it must be cancelled for the "Schedule" menu to appear.

Press schedule

Set Schedule:

To set your Wake, Leave, Return and Sleep times, the Modes associated with them and the temperature (when a heating mode is selected), follow the series of steps below, for each window of time, until you reach the "Schedule Set Successfully" screen.

• **Time** – set a time for the unit to perform a function (ie. turn on/off) every weekday (M-F) at the same time. Press the ▲ or ▼ buttons to the desired hour, then press NEXT to set the desired minutes, then NEXT to set A.M. or P.M. Once the correct time is achieved select "Set". Choose the mode that you desire at this time. If "Heat" or "Heat+Purify" are selected, you will then be prompted to choose the desired temperature setting by adjusting the ▲ & ▼. After the final setting for that time is completed, you will be directed to the next period of time to repeat the above process.

• **Once you have set all times, modes and temperatures for both weekday and weekend, "Schedule Set Successfully" will appear. Press NEXT. "Schedule On" will appear on the display.**

***The heater should retain the schedule if unplugging the unit for a short period of time; for example, to move it to a different room. If the unit is unplugged for a longer period of time, the schedule may be cleared.**

When the SCHEDULE is on, the options below will be in the "Settings" menu.

Edit Schedule - may be selected by hitting the SCHEDULE button and the same procedure for setting should be followed.

Cancel Schedule – select "Cancel" under the "Schedule" menu to turn the schedule off.

When the schedule is off, the options below will be in the "Settings" menu.

Set Existing Schedule: Select "Set Existing Schedule" under the schedule menu to turn the schedule on.

Edit Schedule: Same as above...

IMPORTANT: If you would like to use your heater in a different way than is currently scheduled, simply press the **MODE** button and select the mode you would like. If in a heating mode, use the **▲** and **▼** arrow buttons to change the desired temp.

Hold: When a change is made to the mode, or the desired temperature, while the schedule is on, a hold button will momentarily appear. If you press the **HOLD** button, it will be replaced with a **CANCEL HOLD** button and "HOLD" will flash on the screen. The requested Mode/Temperature change will remain in effect indefinitely until the **CANCEL HOLD** button is pressed. At that time the unit will revert to its scheduled settings.

If you don't press the **HOLD** button, it will disappear and "HOLD" will be continuously displayed (Not flashing) on the screen. The requested Mode/Temperature change will remain in effect until the next change in the schedule. At that time the unit will revert to its scheduled settings.

IMPORTANT: To turn the heater off, press the "POWER" button; the fan will continue to run until all of the heat has been expelled. This could take up to 3 minutes in some cases. **DO NOT UNPLUG WHILE RUNNING.**


WASHABLE FILTER SYSTEM

EdenPURE® heaters come with a washable filter that is easy to clean.

IMPORTANT INFORMATION: If you have allergies and/or are sensitive to dust, you will want to use this filter. Filter installation instructions can be found in the "To clean the filter" section below. When choosing to use the filter, it must be cleaned regularly; a clogged filter will prevent the heater from working to its fullest capacity. If the heater is used in a dirty or dusty area, the filter must be cleaned more frequently to keep it from clogging.

To clean the filter:

1. Press the tab on the top of the filter cover to release the filter. (See picture).
2. Run warm tap-water over the filter in the opposite direction of air flow, until the water runs clear. The filter might excrete some filtered residue so be cautious not to drip on any stainable surfaces such as carpeting. You can also soak the filter in water mixed with a small amount of mild dish soap. Don't forget to dry the filter after it has been rinsed.
3. Shake the filter over a sink until excess water is removed and allow it to dry completely before reinstalling. **DO NOT** force the filter to dry using alternative methods.
4. Reinstall the filter to the rear of the unit by positioning the filter back in place and securing the filter cover back into the locked position.

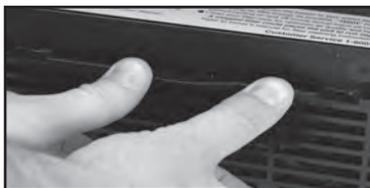

FAQs

1. Q: How do I get the filter cover off?

A: See "To Clean Filter" section of this manual.

2. Q: How do I get the remote cover back on?

A: Line up the cover so that it's resting along the track along the back of the remote. Apply slight pressure to keep it on the track and slide the cover until it won't go any further. Keeping the cover in place, slightly slide the front under the lip that caused it to stop. Once under, continue pushing it along the track until it snaps into place. See diagram below

2. When the cover can slide forward no further, carefully push the ball-like tab under the outside plastic while pushing forward until it snaps into place.



1. Line up cover with track and slowly slide forward.

3. Q: Where do I find the model and serial number?

A: On the back of the heater, there is a large, white, rectangular sticker. Toward the middle of the sticker is the serial number.



4. Q: What does the red light that comes on when I plug the unit in mean?

A: The light simply indicates that the unit is plugged in and that it can be turned on for use at any time.

5. Q: Can I move the heater around while it's running?

A: No. It is not recommended to move any portable heater when it is operating. We recommend moving the heater only after it has been powered off and the fan has completely stopped.

6. Q: What is the life expectancy of the infrared, quartz heating elements?

A: The average life span of a quartz heating element is 20,000 hours. To replace a heating element, please call Customer Service at 1-800-225-6595 or visit www.edenpureservice.com.

7. Q: Can I use the heater and other appliances at the same time?

A: Yes, as long as they are not running off of the same circuit. Zone heaters are considered an appliance and you should never run more than one appliance on a single circuit-breaker. Your freezer, refrigerator, microwave, washing machine, dryer, heaters and other such appliances should not share a circuit-breaker.

8. Q: Can I use an extension cord, surge protector, power strip or cord adapter with my heater?

A: No. It must be plugged directly into a grounded outlet. If you don't have a grounded outlet, contact a licensed electrician to have one installed. Removing the grounding prong or altering any part of the unit will void the warranty.



DO NOT RETURN TO STORE

**PLEASE CONTACT OUR
CUSTOMER SERVICE TEAM AT:**

1-800-225-6595

Please have your receipt handy when calling.

TROUBLESHOOTING

Problem

Solution

Heater continues to run after I turn it off.	This is just a normal part of the cooling process. It can sometimes take up to 3 minutes. DO NOT UNPLUG UNIT WHILE RUNNING.
Heater turns itself on and off.	In order to maintain the selected temperature, in the most efficient manner possible, this heater will shut itself down when it gets to the temperature setting to which it was set. Don't worry. The heater will come back on when the room temperature begins to drop or if a higher temperature setting is selected.
The air-flow seems diminished.	Most issues, including air-flow, can be resolved by cleaning the filter. See Filter Section of manual.
When I turned the heater on, it started emitting a strange smell.	When the unit is first turned on, some users may notice a smell for the first few minutes. This smell is the result of various internal components coming into contact with elevated heat levels for the first time. The smell will dissipate after the unit has run for a few minutes.
The heater doesn't seem to produce as much heat as it once did.	First, try cleaning the filter (See Filter Section of manual). If cleaning the filter does not solve the problem, one or more of the heating elements might not be operating properly. To replace a heating element, please call Customer Service at 1-800-225-6595 or visit www.edenpureservice.com .
The heater blew a fuse in my home.	The heater is an appliance. It's never recommended to run more than one appliance on the same circuit. Make sure the heater is plugged into a grounded, 3-prong outlet and that it does not share a circuit-breaker with any other appliances.
The heater has stopped working and it will not come back on.	The heater is equipped with a safety feature that keeps it from getting too hot. First make sure the air-flow is not restricted by cleaning the filter (See Filter Section of manual), making sure nothing is covering the front or the back of the heater and that there is adequate space between the wall and the back of the heater. Then, unplug the unit and let it cool down for approximately 30-45 minutes before plugging it in and trying again. If this does not solve the problem, please call Customer Service at 1-800-225-6595.
The display says there are purify options but I can't get them to work.	The SpaceSAVER Plus was designed for future air-purification upgrade capabilities. Until EdenPURE® releases an air-purification upgrade, the air-purification functions will not operate on the SpaceSAVER Plus.

WARNING

ANY REQUIRED SERVICE OTHER THAN FILTER MAINTENANCE SHOULD ONLY BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE