

EdenPURE® GEN40 Super Heater-Cooler

EASY START-UP GUIDE

1. Press the on/off switch on the base of the unit. The unit will be in stand-by mode.
2. Touch the POWER button on the top of the unit or on the remote control and you will hear a click. The unit will turn on in high heat mode. The indicator light will be red. Touch the POWER button again to turn the unit off. It will continue to run for several seconds to purge the warm air out of it.
3. After turning the unit on, you can change modes by touching the “MODE” button on the remote. The modes are High Heat, Low Heat and Fan.
4. If you want the unit to oscillate, touch and hold the “⊕” button on the unit for 2 seconds or touch the “⊕” button on the remote. The unit will then oscillate left and right. To turn the oscillation off, touch and hold the “⊕” button on the unit for 2 seconds or touch the “⊕” button on the remote.
5. To have the unit swing back and forth, touch and hold the “⊙” button on the top of the machine for 2 seconds or touch the “⊙” button on the remote. The unit will then swing back and forth. To turn the swing function off, touch and hold the “⊙” button on the top of the unit for 2 seconds or touch the “⊙” button on the remote.
6. The timer can be set for either 2, 4 or 8 hours. To set the timer, touch the “⌚” button on the top of the unit once for 2 hours, twice for 4 hours and three times for 8 hours. A red light will indicate the amount of time you’ve selected. Or, touch the “⌚” button on the remote to toggle between 2, 4 and 8 hours.
7. If the unit is on without a timer being set, it will automatically shut off after being on for 24 hours.
8. If the unit is set to turn off from the timer function, it will automatically remember the timer length from the last time it was turned on and will revert to that time period.
9. The panel on the unit and the remote control can be used interchangeably, as they are synchronized.

