

EdenPURE[®] 360 Super Climater[®]

EASY START UP GUIDE

1. Make sure the master switch on the back of the unit above the plug is in the “I” position.



2. When you plug in the Climater, you will hear one beep and see a red light next to the power button indicating the unit is getting power.
3. Press the **power button** to turn the Climater on or use your remote control to turn the Climater on.



4. Mode Key Functions:



- a. Press the mode key one time to get to HH (Heat High). You can adjust your temperature with the **arrow keys** above the **mode button**. The temperature will then display.
- b. Press the **mode key** two times to go to HL (Heat Low). You can adjust your temperature with the **arrow keys** above the **mode button**. The temperature will then display.
- c. Press the **mode key** another two times to go to F1-9 (fan mode). You can adjust the fan speed to levels 1 through 9 with the **arrow keys** above the **mode button**.


Cooling Mode Wind Noise

The high-tech impeller fan runs very quiet. It has 10 speeds. The higher noise levels you hear at the high speeds are not due to the fan but to wind velocity. This is unavoidable if you want high wind chill cooling. A ceiling fan at top speed only produces a wind velocity right under the fan at floor level of about 300 ft. per minute. This only produces -7.3° wind chill. When you get out from under the fan, the wind velocity drops dramatically. The Super Climater Fan produces a wind velocity near the unit of 600 ft. per minute at a top speed which produces -14.7° wind chill. But the wind at that velocity will create a higher noise level. You can get a good -10° wind chill at lower speeds and have a relatively quiet wind velocity.

Extension Cord


You may want an extension cord to get the Super Climater in desired positions in the room due to your electrical outlet locations. If an extension cord is necessary, use the shortest possible heavy-duty cord of 14-gauge wire or larger. 3 prong, 15-amp, 125-volt, 1875 watt cord. Be sure it is UL listed.

- d. To adjust the brightness on the LED screen:

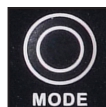

- i. Hold the **mode button** down until it beeps and the LED screen flashes.
- ii. Press the **arrow keys** above the **mode button** to adjust the brightness of the LED screen.


- e. To change the temperature display from Fahrenheit to Celsius:

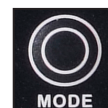

- i. Hold the **mode button** down until it beeps and the LED screen flashes.
- ii. Press the **timer button** one time to change it to the opposite of what it is already on.
- iii. Fahrenheit temperature range is 40-90. Celsius is 1-32.

f. Timer Button: 

- i. While the heater or fan is running, you can set it to turn off after your choice of 1-24 hours.
 - ii. While the heater or fan is plugged in but not running, you can set the heater to turn on after your choice of 1-24 hours.
 - iii. You set the timer by adjusting it with the **arrow keys** until you get to the desired number of hours.
5. You can adjust all functions of your Climater with the remote except adjusting LED brightness and switching from °F to °C. See manual for full list of functions.
6. When in heat mode, always make sure the EdenPURE® Climater is set at least four degrees higher than your house thermostat to ensure the unit is at its most effective.

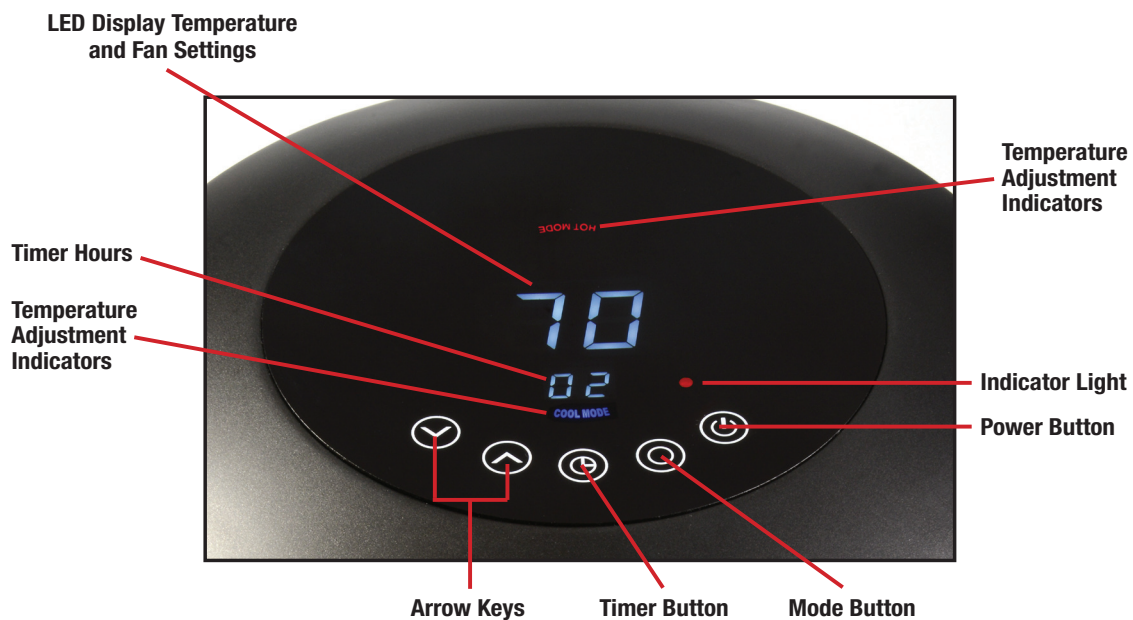

How to get the best performance from your Climater:

- Align with return air vent for maximum circulation

