


EdenPURE[®] CordFree Vac

Instruction Manual

High performance cordless handheld Vacuum Cleaner

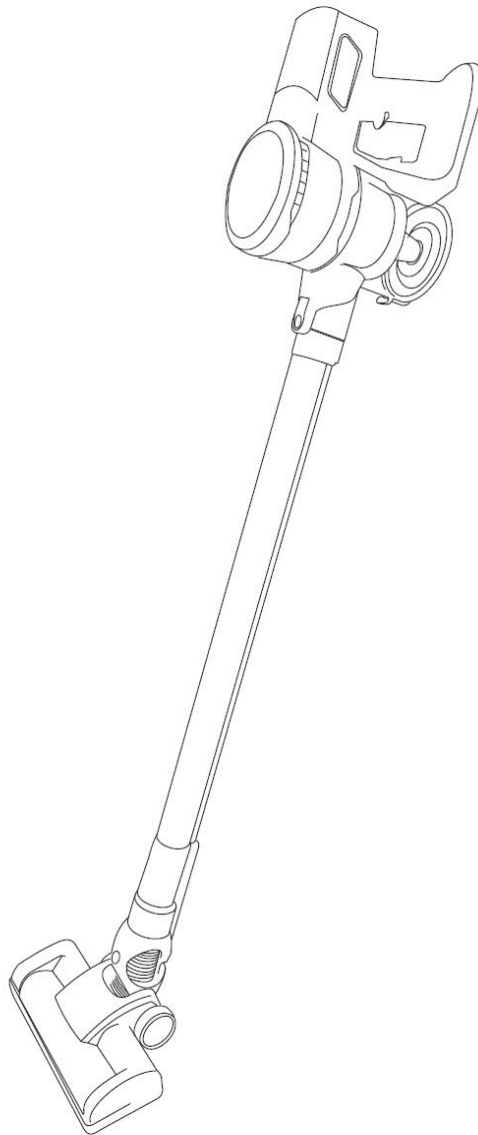

IMPORTANT SAVE THESE INSTRUCTIONS

To ensure you get the best results from your CordFree Vac, please read this manual first and keep it for future reference. For additional information, please contact your place of purchase or call 1-800-225-6595

Thank you for choosing EdenPURE[®]

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE.

RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

Do not use in rain or leave outdoors when it's raining

WARNING: Basic safety precautions should always be observed when using an electrical appliance, including the following to reduce the risk of fire, electrical shock, or injury.

Personal Safety:

1. Store indoors in a dry place out of the reach of children.
2. Always use responsibly. This appliance can be used by children age 10 years and older and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
3. Don't let children play with the appliance; supervise children using the appliance.
4. Use only manufacturer's recommended attachments as described in this manual; misuse or use of any accessory or attachment other than those recommended may present a risk of personal injury.
5. Take extra care when cleaning stairs.
6. Keep the appliance and accessories away from hot surfaces.
7. Do not block the appliance's openings or hinder airflow; keep openings free of any objects including dust, lint, clothing, fingers (and all parts of the body).
8. Particularly keep hair away from openings and moving parts.

Electrical Safety:

1. Only use batteries and chargers supplied by the manufacturer.
2. Never modify the charger in any way.
3. The charger has been designed for a specific voltage. Always check that the main's voltage is the same as that stated on the rating plate.
4. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
5. Before use, check the charger cord for signs of damage or aging. A damaged or tangled charger cord increases the risk of fire and electric shock.

6. Do not abuse the charger cord.
7. Never carry the charger by the cord.
8. Do not pull the cord to disconnect from a socket, grasp the plug and pull to disconnect.
9. Don't wrap the cord around the charger when storing.
10. Keep the charger cord away from hot surfaces and sharp edges.
11. The supply cord cannot be replaced. If the cord is damaged the charger should be discarded and replaced.
12. Do not handle the charger or the appliance with wet hands.
13. Do not store or charge the appliance outdoors.
14. The charger must be removed from the socket before removing the battery, cleaning or maintaining the appliance.

Battery safety:

1. This appliance includes Li-ion batteries, **do not incinerate batteries or expose to high temperatures**, as they may explode.
2. Liquid ejected from the battery may cause irritation or burns.
3. In an emergency situation seek professional help immediately.
4. Leaks from the battery cells can occur under extreme conditions. Do not touch any liquid that leaks from the battery. If the liquid gets on skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Wear gloves to handle the battery and dispose of it immediately in accordance with local regulations.
5. Shorting the battery terminals may cause burns or fire.
6. When the battery pack is not in use, keep it away from paper clips, coins, keys, nails, screws or other small metal objects that could make a connection from one terminal to another.
7. When you dispose of the appliance, remove the battery and dispose of the battery safely in accordance with local regulations.

Service:

1. Before using the appliance and after any impact, check for signs of wear or damage and repair as necessary;
2. Do not use the appliance if any part is damaged or defective.
3. Repairs should be carried out by a service agent or a suitably qualified person in accordance with relevant safety regulations. Repairs by unqualified persons could be dangerous. **For repairs or service, please call 1-800-225-6595.**
4. Never modify the appliance in any way as this may increase the risk of personal injury.
5. Only use replacement parts or accessories provided or recommended by manufacturer.



Intended use:

1. This appliance has been designed for domestic dry vacuum cleaning only.
2. Do not pick up liquids or use on wet surfaces.
3. Do not pick up anything that is flammable, burning or smoking.
4. Use only as described in this manual.
5. Don't use on concrete, pavement or other rough surfaces.

WARNING:


1. Do not use water, solvents, or polishes to clean the outside of the appliance; wipe clean with a dry cloth.
2. Never immerse the unit in water and do not clean in a dishwasher.

Introduction of components:

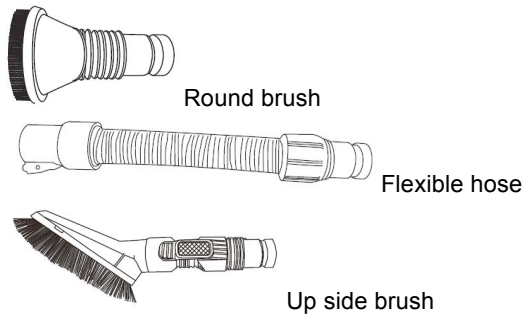
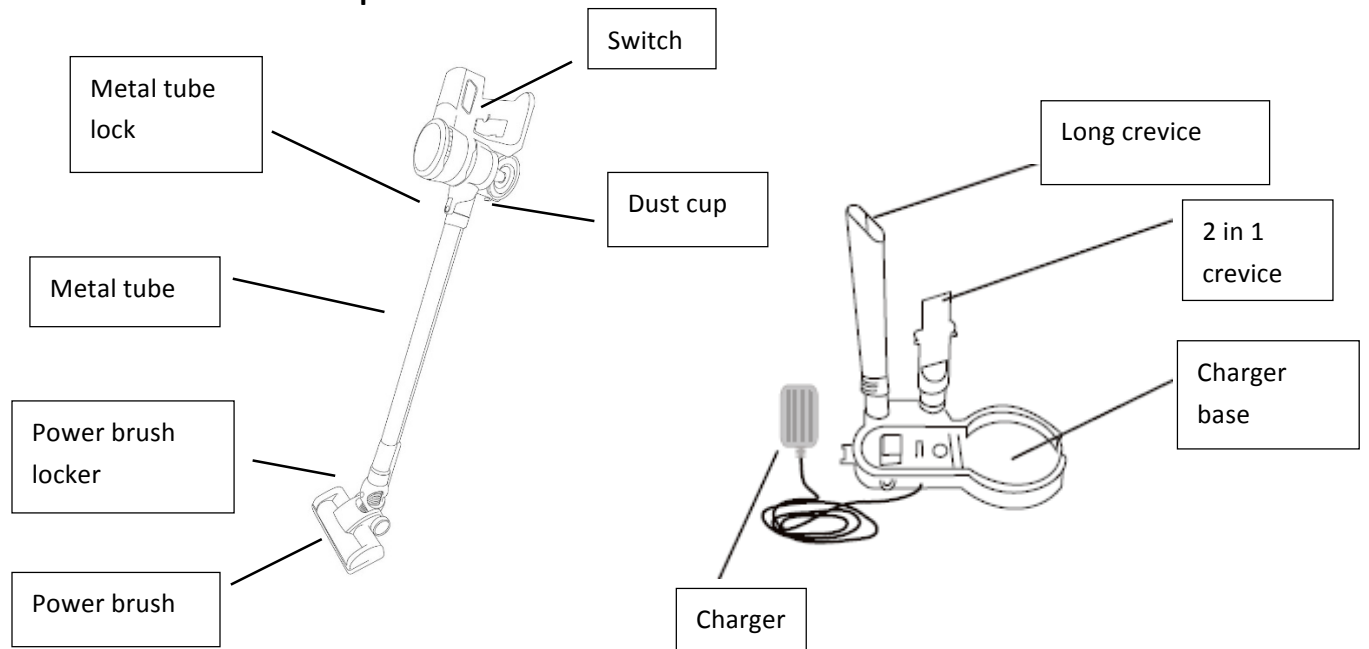


I. Use as a stick vacuum cleaner

- Assemble the dust cup in counter-clockwise direction.

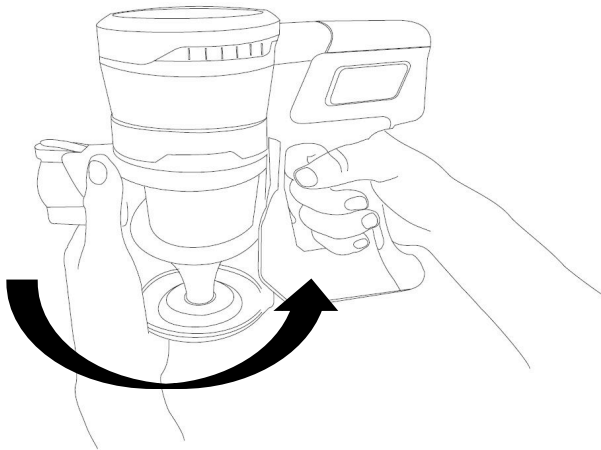


- b) Attach the metal tube to the body as shown below until you hear a clicking sound.

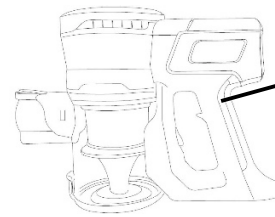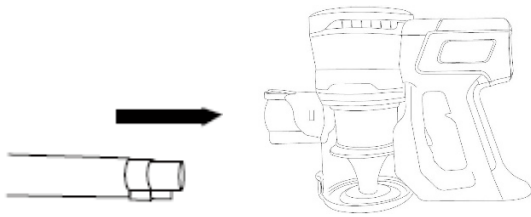

Switch/Speed
control

- c) Attach the brush to the other end of metal tube as shown below.

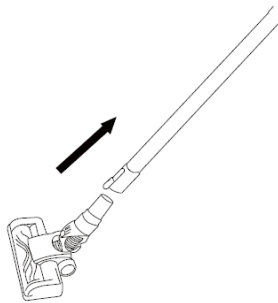


A. Low power

Push the button once for low power.

B. High power

Push the button a second time for high power.




Push the button a third time to turn the unit off.

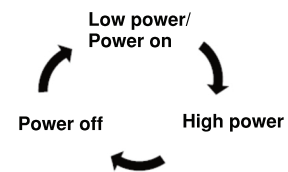

- d) Press the switch to start.


II. How to use as a hand vac

- a) Insert the accessory (2-in-1 crevice, long crevice or round brush) to body as shown below.

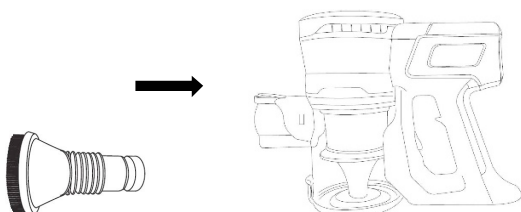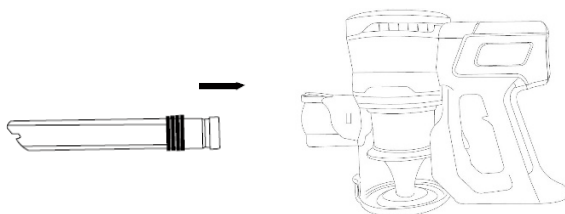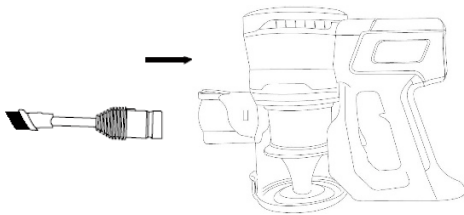

b) Using the flexible hose


Insert the flexible hose into the main unit and connect the accessories to the other end of the flexible hose.

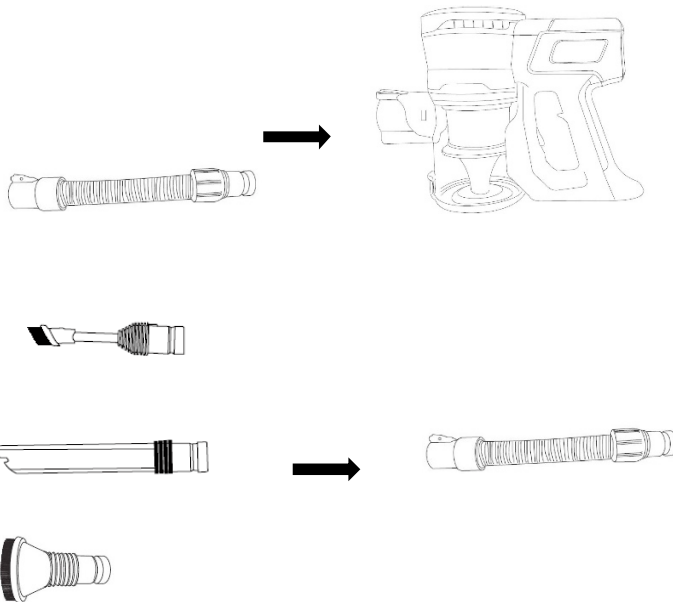


c) Using the top side brush



Connect the top side brush to the metal tube.

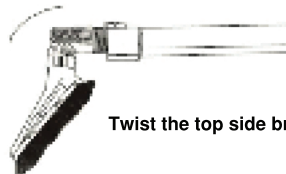

Twist the top side brush (90 degrees at most).

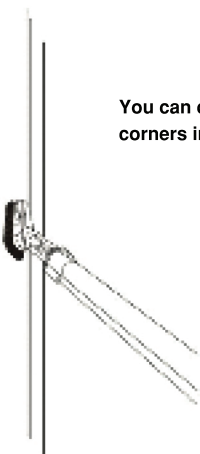



You can clean high walls or corners in high places.



You can clean on top of the appliances or furniture with the top side brush.


Charging the battery

When the battery power indicator is blinking red, please power off then put back on charge base for charging (as shown on the right).

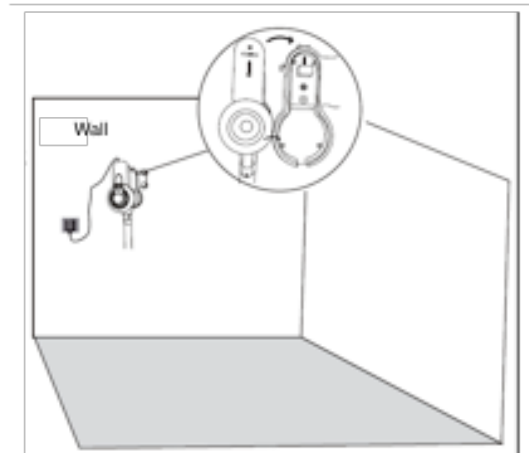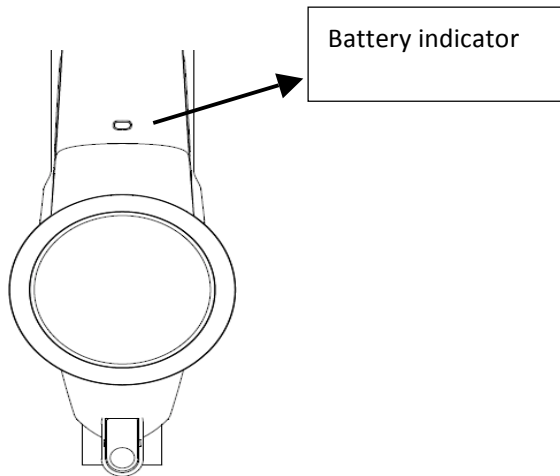


How to empty the dust cup


1. Press the metal tube lock then take out the metal tube

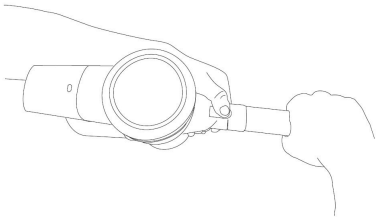

2. Unlock the dust cup lock

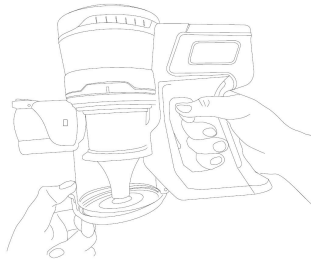


3. Empty the dust cup


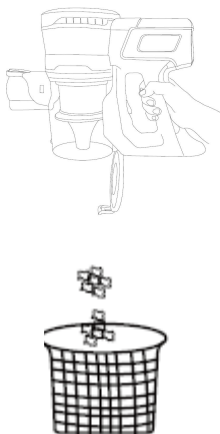


How to maintain the filter

1. Press the dust cup lock and turn it in a clockwise direction.

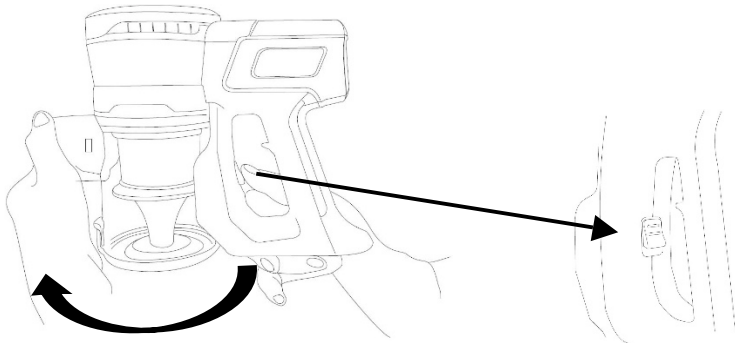


2. Take out the filter case, then remove the filter.
3. Wash the filter case and HEPA filter.

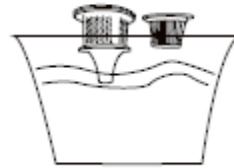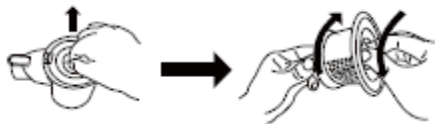


4. Please dry the HEPA filter and filter case completely before reassembling.




5. After drying, reassemble the filter to the case.

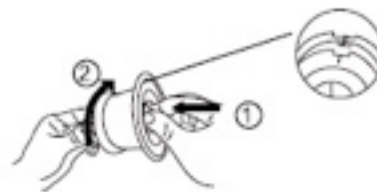

6. Put the filter case back in the dust cup.

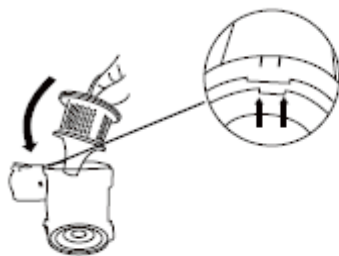

7. Assemble the dust cup in a counter-clockwise direction.

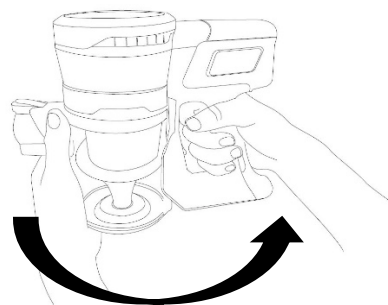

Troubleshooting:

| | |
|-------------------------|--|
| Not cleaning well | 1. Empty the dust bin 2. Check dust bin is correctly fitted 3. Check the filter is correctly fitted 4. Clean the filter |
| Stops or won't work | 1. Charge battery 2. Clear debris from brush bar |
| Battery will not charge | 1. Check connections 2. Check wall socket |

TECHNICAL SPECIFICATION:

| | |
|------------------------|---------------------------------------|
| Battery | 22.2V/2200mA |
| Charging period | 4 hours |
| Battery charger output | 26.5V/500mA |
| Net Weight | 2.3kg |
| Usage time | 35min (low speed), 20min (high speed) |
| Power | 160W |
| Vacuum | 14Kpa |
| Airflow | 15 dm ³ /s |

WARNING

ANY REQUIRED SERVICE OTHER THAN FILTER MAINTENANCE SHOULD ONLY BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE

SERVICE – For repairs or service, please call 1-800-225-6595 or visit www.edenpuresupport.com.