


CORDLESS **BAMBOO SHADE**

Check Components

| Bamboo Shade Components | | Shade Width Up to 40 in | Shade Width 41 in and up |
|-----------------------------------|----------------|-----------------------------------|--------------------------|
| Mounting Bracket | | x 2 | x 2 |
| Wing Nut | | x 2 | x 2 |
| Screws | ()emmmo- | x 8 | x 8 |
| Anchors | GENERAL | x 8 | x 8 |
| | | | |

Prepare necessary tools

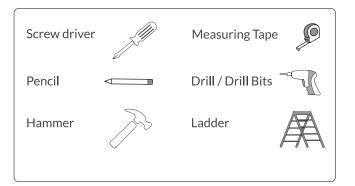


STEP 1: DETERMINE INSIDE/CEILING, FLUSH, WALL OR OUTSIDE MOUNT

a. Inside/Ceiling or Flush Mount

(A minimum 3/4 inch depth is required or 2-3/4 inch depth for flush mounts.)


- 1) Position brackets approximately 1 inch from the ends of the headrail.
- 2) Mark the bracket locations upward through the holes with a pencil.
- 3) Use the screws and anchors in the top bracket holes to attach your brackets.

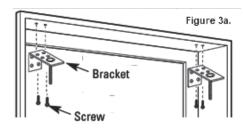

b. Wall or Outside Mount


(A minimum 3/4 inch flat wall space is necessary)

- 1) Position brackets approximately 1 inch from the ends of the headrail. If your shade had a third bracket provided, position middle brackets to align with predrilled holes in the headrail.
- 2) Mark the bracket locations through the rear holes with a pencil.
- 3) Use the screws and anchors in the rear bracket holes to attach your brackets refer to Figure 3b.

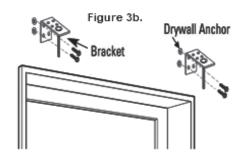

STEP 2: MOUNT THE SHADE IN BRACKET

- a) Make sure the shade is level.
- b) Hold the shade so that the screw posts on the brackets fit through the slots on the headrail and re-attach the wing nut and screw to hold the headrail firmly.

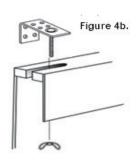


STEP 3: HOW TO OPERATE

To lower the shade: grip the bottom rail and slowly pull straight down. Refer to Figure 5a.

To raise the shade: put one hand at the bottom rail (palm facing up) and lift slowly until the desired height is reached.

Important Note:

Always push and pull at the center of the shade to assure that the bottom of the shade remains even (i.e. parallel to the top of the shade). If the shade becomes uneven, slowly pull it all the way down, and then lift to the desired position. If your shade is stuck, carefully look at the back of your shade and untangle any cords that appear tangled.

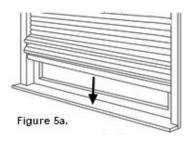

CLEANING & CARE

To clean your shade, use a feather duster, microfiber cloth or vacuum lightly using the soft brush attachment

Chicology Ready-Made Blinds Warranty Limited One Year Warranty from the Date of Purchase

What is Covered:

All of our shades are warranted against manufacturer defects in materials or workmanship provided that you are the original purchaser of the product, and the product was installed according to our instructions.

What is Not Covered:

- · Normal wear and tear
- Consumer damages caused by accidents, alternations, abuse of the product, exposure to salt air, misuse, or damages from pets or insects.
- Damages resulting from removal and reinstallation in the same or any other window or application, or failure to follow instructions, such as measurement, installation, cleaning, and maintenance.
- Any products that, with the passage of time, has yellowing or cracking of plastic parts.
- Wrong measurements are not covered by the warranty and are not refundable.

To Report Shipping Damages:

If damage occurred during shipping, please email us & call us immediately and report within **14 calendar days** or else you may be denied for your damaged product.

To Obligations to the consumer:

The obligations of Chicology are limited to the repair or replacements of parts or products found to be defective. Chicology will determine if the product is defective or not and may replace the product. If the product is found to have manufacture defects, we will repair or replace the product. Colors do vary from lot to lot, and may not match original product exactly. Discontinued items will be replaced with the most current product of the same price.

Your Rights under State law:

This limited warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

Defective Product:

If you believe your shade has a manufacturing defect, please email us & call us.

Need Further Assistance?

Website: www.chicology.com/help Email: support@chicology.com Phone: 1 (866) 999-6188