

CD Operation



Start up

Fit drain upstands, wash pump filters and scrap trays.
 Shut doors and turn wall and machine power switches on.
 Power light glows red and machine fills automatically.
 Ready light glows amber when machine is full and at temperature.

Operation

Press Start button to operate machine - Green Cycle light glows

When Ready light is on racks can be fed into the machine.

With autostart option pumps and conveyor will start automatically and then stop operating after several minutes if racks are not fed into the machine

Shut down every night

Press Stop button.
 Turn machine and wall power switches off.
 Remove scrap trays and rinse clean.
 Remove drain upstands to drain tanks.
 Remove wash pump inlet filters and rinse clean.
 Replace drain upstands, filters and scrap trays.
 Refer cleaning instructions in Care section

Performance

Pre-rinsing

Pre-scraping of dishes is required by Food Hygiene Regulations. The best method is to pre-rinse with warm water with a Fisher Pre-rinse Unit - or alternatively by scraping or dunking in water.

Cutlery should be pre-soaked in warm water, preferably containing cutlery pre-soak compound - refer your chemical supplier.

Racking

Do not overload racks or cutlery containers - minimise the overlap of cutlery and crockery. Wash cutlery unsorted handles down

Speed

For multi-speed machines use the slowest cycle whenever possible. Switch to the faster cycle only when necessary.

Chemicals

Use of correct type and quantity of detergent and rinse fluid is essential to the performance of the machine. Use good quality chemical and dispensers and regularly check containers.

Drying

Do not pull racks from the exit of the machine – leave them on the exit roller table for several minutes to allow wash ware to dry before putting it away.

Daily Cleaning

The machine MUST be drained and cleaned at the end of every day and left empty overnight. Drain the machine then remove, clean and replace scrap trays and filters. Regularly check the wash and rinse jets and clean them daily or as necessary.

Care

Cleaning

Remove upstand 1 to drain each tank
 Flush tank clean if necessary.
 Remove scrap trays 2 and wash pump inlet filter 3
 Rinse filters clean and brush if necessary to clean mesh.
 Lift and withdraw lower wash arm 4
 Withdraw upper arm 5 after raising catch 6
 Remove rinse arms 7 & 8 after lifting catch 9
 Check all wash and rinse jets and flush clean.
 End caps 10 may be removed if necessary to flush arms clear.

Weekly - remove curtains from hooks, place each one in a dishrack and wash through the machine. Replace curtains short side toward inlet and short curtain before rinse zone – as per labels on machine front.

Maintenance

Regular servicing of the dishwasher is essential for high performance, efficient operation and long machine life. Contact us for information on maintenance contracts.

