

# Wireless Dog Doorbell User Manual



IP55  
Waterproof



55  
Ring-tones



150-300M  
ControlDistance



0-110dB  
5 Levels

## Product Overview

The wireless dog doorbell consists of the receiver and transmitter, the receiver with plug is AC powered, the transmitter is powered by Alkaline batteries, without wiring, and simple and flexible installation.

## Specification

WorkingTemperature	-30°C to +70°C
TransmitterBattery	23A12V battery(inc uded)l
ACReceiverVoltage	AC110-260V(widevoltage)

## Product Features

- LED Indicator
- IP55 Waterproof Transmitter
- 55 Ringtones
- Level 5 Volume Adjustable,0-110 dB
- Memory Function
- 500-950Ft Working Range

## Installation

- For Receiver: Plug the receiver into a socket and switch th socket on.

- For Transmitter: Pull out the white insulating strip of the transmitter.

Put the transmitter in where you intend to place with double-sided velcro.

Check the receiver whether sound when you touch the transmitter button,if the doorbell receiver does not sound, please to reposition the transmitter or receiver.

## Product Model

### Transmitter



CB02



CB03



CB04

 


CB05

### Receiver



CC03



CC15

## Volume Adjustments

5 Levels volume can be set (0-110db).

PRESS the Volume Button on the receiver to increase the volume by one level,the doorbell will sound to indicate the selected level.

If the max. volume is already set, the next level will switch to the min. volume,i.e. Silent Mode.

## Change the Ring-tone/Pairing

The default ring-tone is Ding Dong,users can change it easily, please refer to the following steps.

Step 1: PRESS the Backward or Forward Button on the receiver to select your favorite music. The receiver will ring the selected music.

Step 2: HOLD the Volume Button on the receiver for about 5s,until it makes Ding sound with LED light flashing.

Step 3: Press the button on the transmitter quickly within 8s after step 2, then the receiver will makes Ding Ding sound with LED light flashing,the setting is

completed. This learning mode lasts only 8s,then it will automatically exit.

Remark: This method is suitable for changing ring-tone, adding new transmitters or receivers,and rematch.

## Clear Settings

HOLD the Backward Button on the receiver for about 5s, until it makes Ding sound with LED light flashing, all the settings will be cleared,that means the ring-tone you have set and the transmitters/receivers you have paired will be cleared.

When you press the transmitter button again,only the first transmitter will be automatically paired with the receiver, and the others need to be rematch.

## Troubleshooting

If the doorbell does not work,the following are possible causes:

1. The battery in the transmitter may be run down, please replace the battery.
2. The battery may be inserted the wrong way round, polarity reversed. Please insert the battery correctly, but be aware the reverse polarity may damage the unit.
3. Ensure that the receiver is switched on at the mains.
4. Check that neither the transmitter nor the receiver is near to possible sources of electrical interference, such as a power adapter, or other wireless devices.
5. The range will be reduced by obstacles such as walls, although this will have been checked during setup.
6. Check that nothing,particularly a metal object,has been placed between the transmitter and the receiver. You may need to reposition the doorbell.

## Cautions

1. The doorbell receiver is for indoor use only. Do not use it outside or allow it to become wet.
2. There are no user-serviceable parts. Do not attempt to repair either the transmitter or the receiver by yourself.
3. Avoid sitting the transmitter in direct sunlight or rain.
4. Use only high quality batteries.

## Warranty

The warranty covers the product to be free from the defects in materials and workmanship for a period of one year from the date of original retail purchase. The warranty does not cover damage, defect, or failure caused by, or resulting from, accidents, external damage, alteration, modification, abuse, misuse, or attempted self-repair. Please keep the purchase receipt.

## Packing List

- |                          |                             |
|--------------------------|-----------------------------|
| - Transmitter            | - Receiver                  |
| - 23A12VAlkaline Battery | - Double SidedAdhesive Tape |
| - Mini Screw Driver      | -User Manual                |