

# 7.5x7.5cm

### Wireless Caregiver Pager User Manual

**NOTE :**

1. Please fully charge all of the devices before use.
2. Please test the working range before first using.
3. All devices in the same packages have been paired. If you need additional receivers or transmitters, you need to pair the new device with the original one.

### 1. Product Overview

1 Screen	8 Call Button
2 Vibration	9 Indicator 2
3 Power	10 Charging Port
4 Ringtone	11 Lanyard Hole
5 Volume	12 Battery
6 Pairing	13 Belt Clip (Detachable)
7 Indicator 1	

### Specification

Ringtones	10 Ringtones
Volume	5 levels of volume, 0-110dB
Frequency	433MHz
Battery	Lithium polymer battery, non rechargeable
Battery Capacity	Receiver: 500mAh;
Working Range	Transmitter: 300mAh
	2000 feet / 600 m
Battery Life	Receiver :5 days,
	Transmitte: 60 days.
	It depends on actual frequency of use.
Waterproof	Without waterproof

### 2. Functions

#### 2.1 Power on

Long press ③ "Power" for 3 seconds until the screen shows 00.

#### 2.2 Charging

Connect the USB cable on the ⑩ Charging Port of the receiver or transmitter to the

5V 1A/5V 2A power adapter. The built-in battery will recharge in about 3 hours.

**A. Low Power:**

⑦ "Indicator 1" flashes red & blue light every 5 seconds to remind users to charge the device.

⑨ "Indicator 2" flashes blue light every second to remind the user to charge the device.

**B. During Charging:** ⑦ "Indicator 1" and ⑨ "Indicator 2" turn red.

**C. Fully Charged:**

⑦ "Indicator 1" turns blue.

⑨ "Indicator 2" goes out.

### 2.3 Working range test

The receiver will ring when you press ⑧ "Call Button", and ① "Screen" will show the transmitter number. The default ringtone is ding-dong.

### 2.4 Power off

Long press ⑤ "power" for 3 seconds, the receiver will make a sound and then turn off. The screen will show "-.-".

### 2.5 Pairing (Two Modes)

(1) Mode 1: one to one  
Step 1: Choose your favorite ringtone,  
Step 2: Mode 1: one-to-one  
Long press ⑥ "pairing" for 3 seconds until the receiver sound a "ding" to enter the pairing mode. Quickly press the transmitter, the receiver will sound "ding" twice to pairing and auto-exit the pairing mode.

(2) Mode 2: one-to-all  
Press ② "vibration" and ⑥ "pairing" for 3 seconds simultaneously, with a "ding", the receiver enters the one-to-all pairing mode. In this mode, the receiver does not auto-exit. You can press the transmitter to pair with the receiver, the receiver will sound "ding" twice when pairing is successfully.  
Then you can press the next button to pair until all buttons are paired.  
Press any button (except ringtone button) to exit the one-to-all pairing mode.  
Step 3: Press ⑧ "Call Button" of the paired transmitter to confirm the pairing result,

if the receiver will ring the ringtone you want, then the pairing is successful.

※ The transmitter number that shows on the receiver screen is not selectable, it is listed in sequence.

### 2.6 Ringtone Setting

Press ④ "Ringtone" to choose your favorite ringtone.

### 2.7 Volume Setting

Press ⑤ "Volume" to select the volume level you need.

### 2.8 Vibration Setting

Turn on: Press ② "Vibration" and the receiver will vibrate once to turn on.  
Turn off: Press ② "Vibration" to turn off.

### 2.9 Reset Setting

A. Stop working: Short press ③ "Power" to pause all receiver button work.  
B. Code clearing: Long press ④ "Ringtone" and ⑥ "Pairing" for 3 seconds simultaneously until the receiver make a sound "ding", the receiver will clean all paired transmitters.  
※ After cleaning all paired transmitters, the receiver will enter the pairing mode automatically, once you press any transmitter, they will auto-pairing. If you want to pairing more transmitters, please follow the pairing steps.

### Frequently Questions

A. The receiver has no sound when the transmitter is pressed.

1. Make sure that both units are fully charged and the receiver is turned on.
2. Please check the pairing between two units. If they are not paired, please refer to [2.5. Pairing] for pairing.
3. Please adjust the distance between the receiver and transmitter. The signal may be shielded by wall or the distance is too far.
4. If still no solve the problem, please check whether the receiver is mute. Press ⑤ "Volume" to adjust the volume level.

B. How many transmitters can be pairing with one receiver?  
One receiver can be paired with up to 20 transmitters, and one transmitter can be paired with up to 99+ receivers.