

Caregiver Pager System User Manual



Receiver model: CC28

Transmitter model: BT009



A Good Life in Old Age Monitoring and Improving Quality in Long-term Care

As a growing number of frail old people in need of home care, delivering quality long-term care services, which are effective and responsive in time, has become a priority for every family.

"Call to You" is determined to provide perfect solutions that enable your loved ones to retain their independence and dignity in daily life, so they can live on their own and release your burden with peace of mind.

We "CallToU" fucus on professional home caregiver pagers for more than a decade, and have helped and cared for millions of ELDERLY and those in need to help timely.

"Call to you" gives more care for the elderly You Need. We Here!

For FAOs and more information, please visit:





www.calltou.com

service01@calltou.com

CallToU Brand Product Introduce

Anywhere in The Home

Connected Care

Deliver users' help signal to their family or caregivers



ON/OFF Volume Setting ransmitter low lattery light indicator Receiver low battery light indicator LED Display Ringtone Switch Loudspeaker

Receiver



Feature

1, ON/OFF

①Power on: Hold ① for 5 second, receiver will beep with number 00" on the display

②Power on: Hold ① for 5 second, receiver will beep with number "--" on the display.

2. Adjust the volume

Press $_{\odot}$ once to adjust the volume (default from level 1). There are 5 levels from 0-120dB.

Note: When power off, all setting will remain the same for the Memory Function.

3. Ringtone switch

Push $\frac{1}{2}$ to switch from 2 ringtones, "Ding-dong" and Alarm sound When triggered, will ring for 90 second before it stops, or you can press any key on the receiver to stop ringing.

4、Vibration

 
When triggered, the receiver will vibrate 10 times, and stop for 3 seconds, then vibrate again then stop, lasting 90 seconds 90 second before it stops, or you can press any key on the receiver to stop it.

5. Low battery warning

When voltage is low, the receiver will flash red or blue. Red means the receiver needs battery changing, and the Blue light means the transmitter need battery changing.


Operating Instructions

1) How To Use? (Paired Before Delivery)



- 1. Firstly, put the batteries in the receiver.
- 2.Hold for 5 seconds to turn on the receiver, and you will have 00 on the display screen.

 (2) How To Pair? (Paired Before Delivery)




Step 1

 Hold Setting button for 5 seconds, and there will be a "Ding", meaning it's under pairing mode.







Operating Instructions



Step 3

 
Press the transmitter once to pair with receiver. If the pairing is successful, there will be a "DingDing" from receiver, the number appears on the display screen.

%Pair to more transmitter/ receivers

If you want to pair more transmitter/ receivers, just repeat step 1-3 one by one.

One receiver can work with 20 transmitters. One transmitter can pair to one number on the receiver.

3Clearing All Settings



Hold Volume button for 5 seconds to reset receiver to default mode. The receiver will ding with number "01" on the screen, meaning clearing is done. If you want to pair the them again, just repeat step 1-3 one by one.

Battery Replacement



- 1. Push the Backclip down.
- 2. You need a screw driver to remove the cover.



3.Replace 3AAA batteries in the slot, pain attention to the right terminal ends. Then put the cover back and secure with the screws.

Receiver

 




Transmitter

 1.You need a screw driver to remove the cover from the back.
 2.Replace 12v23A batteries in the slot, pain attention to the right terminal ends. Then put the cover back and secure with the screws.

Install



1.Fix the transmitter of the button to certain place.

Tape up the back clip with 3M tape, or fix it with screws.



2.Then place the transmitter on the back clip.

Transmitter lanvard mounting

Remove the

Slide the tip of landyard through landyard hange

Slipping the other end to tie it up.

How is looks with Landyard

Specifications

	Receiver	Transmitter
Power	4.5V	12V23A Battery
Frequency	433Mhz	433Mhz
Working Range	500ft/150m	500ft/150m
Waterproof Level	N/A	IP55
Operating Temperature	-30°C-70°C/-22°F-158°F	

O&A

Q: Why does the receiver does't work?

- A1:Press volume button to check if receiver works probably. it's might be under the mute mode. If it worked, meaning the receiver is ok. If not, refer to the customer service problem with receiver.
- A2:Press transmitter to check if light indicator works probably.

 If it worked, meaning the transmitter is ok. If not, try to replay batteries and check again. If still not working, refer to the customer service problem with transmitter

A3:If receiver and transmitter are ok, try pairing again by repeating Step 1-3.