

Under F3-1, press "DOWN" & "UP" & "MOVE" to choose the number from "00" to "29".

**Note:** default setting "00" means no rolling.

#### **F3-2 Set Display Time (The display time for each calling)**

Under F3-2, press "DOWN" & "UP" & "MOVE" to choose the number from "00" to "99". **Note:** default setting "10" means display each calling for 10s, then display the next calling. **F3-3 Set**

#### **Cancel Time (The time to cancel calling)**

Under F3-3, press "DOWN" & "UP" & "MOVE" to choose the number from "00"to "99". **Note:** default setting "99" means the current calling will cancel automatically after 99s and show the next calling.

#### **F--4 Set 1 key / Multi Key Mode (Default setting: 4)**

Under F4-1, choose 1 or 4, then press "ENT".

"1" ----- 1 key mode    "4"-----Multi key mode

For example, when CT-R350 works with CT-T301 3-key call button :

Under 1 key mode, 1pcs CT-T301 will be programmed to 3 individual buttons with different numbers.

Under multi key mode, 1pcs CT-T301 will be programmed as one button with one number.

#### **F--5 Set Volume / Ring Tone**

F5-1 Volume Adjustment (30 grades, from 00 to 30, 00=mute)

Under F5-1, press "DOWN" or "UP" to choose the number from "00" to "30" for volume.

F5-2 Ring Tone Adjust

Under F5-2, press "DOWN" or "UP" to choose the number from "0" to "1".

Note: 0--- Ring tone without English reporting

1--- Ring tone with English reporting (default setting)

F5-3 Reporting Number Times

Under F5-3, press "DOWN" or "UP" to choose the number from "1" to "9" Note: default setting "1" means report only once.

#### **F-6 Restore Factory Setting**

F6-1 Delete all the saved call buttons

Under F6-1, showing "-d- ", then press "ENT". F6-

2 Restore factory settings

Under F6-2, showing "-d-", then press "ENT".

#### **F-7 Set Current Time & Date**

Under F7-1, choose the time & date, then press "ENT".

### **III. Technical Specifications**

Model number: CT-R350

Frequency: 433.92MHZ

Working voltage: DC12V

Working Current: ≤1A

Audio output: 2W

Sensitivity: ≥-105dB

Size: 200x130x30mm

# User Manual for Wireless Receiver

## I. System Introduction

### 1. Features:

- (1) Display 3 callings of 4-digit number at one time from 0000 to 9999 beginning with "AbCdEF" letter
- (2) Work with 400pcs of call buttons in max
- (3) Cancel ways : press " Cancel " key on call buttons / automatically cancel /press "ENT" key on display
- (4) Rolling display last 30 pending calls in max
- (5) Display current time & date when stand-by
- (6) Different indication for different service types
- (7) Adjustable ringtone & volume
- (8) Installation : Desktop type / Wall mounted
- (9) Support External speaker

### 2. Sketch



## II. Function Introduction

### (1) Function Key:

#### FUN:

Function setting key --- enter function setting / exit function setting

#### ENT:

- under Function setting status: to confirm the setting
- under working status: to cancel the pending calls

#### DOWN:

- under Function setting status: to select digit down
- under working status: to check the next pending call

#### MOVE:

Adjust digit

#### UP:

- under Function setting status: to select digit up
- under working status: to check the previous pending call

### (2) Function List

- F--1 Save / Delete Call Buttons
- F--2 Save / Delete Remote Control
- F--3 Set Display Mode
- F--4 Set 1 Key / Multi key Mode
- F--5 Set Volume / Ring Tone
- F--6 Restore Factory Setting
- F--7 Set Current Time & Date

### (3) Function Setting

#### F--1 Save/ Delete Call Buttons

##### F1-1 Save Call Buttons

1. Press "FUN" key to enter function setting status, showing "F -- 1".
2. Press "ENT" key and it displays "F 1 - 1".
3. Press "ENT" key and it displays "0001".
4. Press "DOWN" & "UP" & "MOVE" to choose the call button number to save, then press "ENT".

**Note:** The first digit can be named with letter ( AbCdEF). For example, A001, b002. 5. Press "CALL" key on call button for 2s till the number goes to the next one.

For example, choose "0001", when the setting is successful, it will show "0002" automatically.

6. Press "CALL" key on the next call button to save.

**Note:** When the receiver displays "EE-R", it means this call button has been saved already.

7. Press "FUN" key to exit the function setting.

##### F1-2 Delete Call Buttons

1. Press "FUN" key to enter function setting status, showing "F-- 1".
2. Press "ENT" key and it displays "F1- 1".
3. Press "DOWN" key and it displays "F1- 2".
4. Press "ENT" key and it displays "0001".
5. Press "DOWN" & "UP" & "MOVE" to choose the number to delete, then press "ENT".

**Note:** If want to delete all the saved numbers, please set under F 6-1

6. Press "FUN" key to exit the function setting.

#### F--2 Save / Delete Remote Control

1. Under F2-1, press "ENT" key and it displays "00- ".
2. Press "ENT" key on the Remote Control and it displays "00b ", which means this remote control has been saved already.
3. Press "FUN" key to exit the function setting.

**Note:** If want to delete the saved remote control, under F2-1, press "DOWN" & "UP" & "MOVE" to choose the number to delete, then press "ENT".

#### F--3 Set Display Mode

- F3-1 Set Rolling Numbers (The numbers of rolling calling)