### EC-680P Watch Receiver User Manual



### Features

- 1.OLED display with touch screen operation
  - (Working life: 50,000 touches)
- 2.Flexible wearing types: watch type & pin type
- 3.Patent design: Copy function between 2 watches or watch & PC
- 4.Capacity: 400pcs Aidbell call buttons in max
- 5.Can work as emergency call button to call other Rceivers or Watches.
- 6.Different service types are available:
  - CALL, SOS, AID, ORDER, DRINK, WATER, PARK and etc
- 7.Show 3 calling records with service type, calling time & time called
- 8.Store up to 99 call records
- 9.Easy to assemble watch belt or pin belt
- 10.Rechargeable 3.7V Li-ion battery with 12 hours working time
- 11.Easy to replace battery if broken
- 12. Two colors are available: Black & White

# Key Operation


| Power on            | Long press "<" Key  |
|---------------------|---|
| Power off           | Long press "<" to choose "Turn off" and<br>Long press "< " & ">" Key at same time |
| Wake up             | Short press "<" Key   |
| Enter setting       | Long press "<" to choose "Enter Menu" and Press                                   |
|                     | "<" & ">" Key at same time to input password "98"                                 |
| Exit setting        | Long press "<" Key  |
| Enter next menu     | Short press "<" Key   |
| Confirm menu choice | Press "<" & ">" Key at same time  |
| Page up             | Short press "<" Key   |
| Page down           | Short press ">" Key   |
| Digit choice        | Short press "<" & ">" Key at same time  |
| Adjust number       | Short press "<" or ">" Key  |

# Menu List

| General         | Button define / Button word /<br>Back light time / Prompt times |
|-----------------|---|
| Pair buttons    | General mode / 9999 mode  |
| Prompt mode     | Vibration / Buzzer / Vibration & Buzzer                         |
| Display mode    | Single / List Display   |
| Auto clear time | Set auto clear time   |
| Copy Data       | Copy watch A setting to watch B                                 |
| Date & Time     | Set current Date & Time   |
| Remind mode     | Prompting times / Time interval                                 |
| Restore default | Delete Caller / Delete calling record / Restore all             |

Note: Charge the watch to power on when first used.

### Enter Function Setting

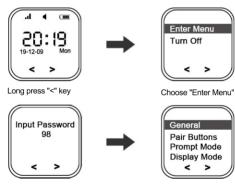

Press "<" & ">" Key at same time, Press "<" twice to input Password "98".

Enter Function setting.

## **Detail Function Setting**

#### 1.General Setting



1) Button Define ( Default setting): CAN: D0 A:D3 B:D1 C:D2 D:D0+D1

 
To define each key on Aidbell call button to have specific service type. Press each key on Aidbell call button to match " A , B , C , D , CAN " types if necessary. Normally, no need to set this function.






- 2) Button Word ( Set Service Type ):
- A: Call
- B: Bill
- C: Order
- D: Low

Short press "<" key to choose other service types for "ABCD" keys from Call / Pay / Order / Park / SOS / Aid / Bill / Drink / Low / Water / (Blank)




  Back Light time: To set Back Light Time from 5s to 15s ( Default setting:10s )



 Prompt Time: To set Prompt Time from 1s to 15s ( Default setting:10s )

 
2.Pair Buttons: edit call buttons with letters & numbers



1) General Mode: Edit call buttons with letters & numbers

Short press "<" or ">" to choose number from "0-9" & "A-Z". Short press "<" & ">" key together to choose next digit. After editing, press any key on Aidbell call button for "3s" to pair. (400pcs call buttons in max) Long press "<" key to exit.

 Note: EC-680W & EC-680P can work as emergency call button. Press "<" & ">"key at same time on other EC-680W & EC-680P or other wireless receiver to pair under "Pair Buttons".



2) 9999 Mode: Edit call button with numbers only

Short press "<" or ">" to choose number from "0-9" only. Short press "<" & ">" key together to choose next digit. After editing, press any key on Aidbell call button for "3s" to pair (400pcs call buttons in max) Long press "< " key to exit. 3. Prompt Mode: Vibration / Buzzer / Vibration & Buzzer



Short press "<" or ">" key to choose Prompt Mode. Long press "< " key to exit.

#### 4.Display Mode: Single / list display



Short press "<" or ">" key to choose Single or List. Long press "< " key to exit.

 
#### 5.Auto Clear Time: 00-99s



Short press "<" or ">" key to choose Auto Clear Time from 00 to 99s Long press "<" key to exit.

Note: "00" means need to cancel the callings via cancel key on each Aidbell call button. It will not support the cancel on EC-680W or EC-680P itself.

#### 6.Copy data: Copy / Be Copied



1) Copy between watches: Copy data from Watch A ( "Copy" ) to Watch B ( "Be copied" )

In Watch A, short press "<" & ">" key to enter "Copy" status. In Watch B, short press "<" & ">" key to enter "Be copied" status.

Backup via PC:
Copy data from Watch A to PC via Aidbell software.
Then, download the copied data to Watch B via Aidbell software.



When copy is completed, it will show as follows:




Watch A

Long press "<" key to exit.



Watch B

#### 7.Date & Time

 

1) Time:


Short press "<" & ">" key to enter "Time" setting Short press "<" & ">" key to choose current Hours & Minutes Long press "<" key to exit.



2) Date:

Short press "<" & ">" key to enter "Date and Week" setting Short press "<" & ">" key to choose current Year-Month-Day & Week Long press "<" key to exit.


#### 8 Remind Mode

 

Remind Times (Default setting: 00)

Short press "<" or ">" key to choose Remind Times from 00 to 09s.

 Long press "<" key to exit.




2) Time Interval ( Default setting: 60 ) Short press "<" or ">" key to choose Time Interval from 10 to 99s. Long press "<" key to exit.

#### 9.Restore Default



 1) Delete Caller Short press "<" or ">" key to enter "Delete Caller" Long press "<" key to exit.



2) Delete Record Short press "<" or ">" key to enter "Delete Record" Long press "<" key to exit.



3) Restore All Short press "<" or ">" key to enter "Restore All" Long press "<" key to exit.

# **Technical Parameters**

| Working Voltage     | 3.3 V   |
|---------------------|---|
| Working Battery     | 3.3V rechargeable Li-ion battery                |
| Working Current     | <10mA   |
| Standby Current     | <500µA  |
| Standby Time        | 30 hours  |
| Radio Frequency     | 433MHz  |
| Power Level         | 20dBm   |
| Sensitivity         | -120dBm   |
| Working Temperature | -20 °C ~ 55 °C                                  |
| Working Range       | 300 meters (open air)                           |
| Dimension           | 40(W) x 45(H) x 14(D)mm (Strap is not included) |