




INSTRUCTIONS: THE PURRFECTION PLAYTENT

INCLUDED PARTS:


- | | |
|---|-----------------------------|
| (1) Purrfect Playtent Indoor/Outdoor Pet Tent | (4) Ground Stakes |
| (1) Carry Bag | (1) Removable Weather Cover |

+ OPENING THE PURRFECTION PLAYTENT

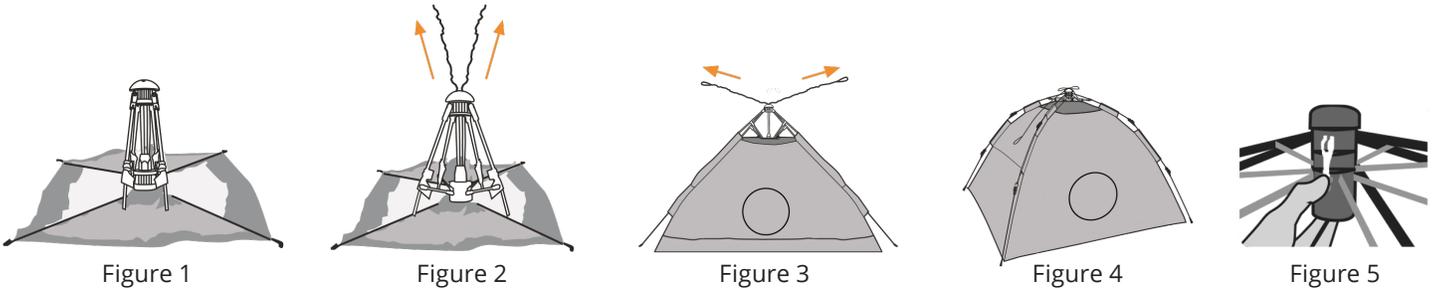

1. Remove the Purrfect Playtent from the carry bag. Once removed, the arms of the tent will fall to the ground when you hold the tent by the hub. Spread the playtent evenly on the ground and organize them in an "X" formation. **(Figure 1)**
2. With one hand firmly in place over the top of the hub, use your other hand to slowly pull the two cords at the same time in an upward direction. The Purrfect Playtent bottom will join the upper half. **(Figure 2 & 3)** *It is important not to force this process as it can damage the hub opening functionality. If you find that the Purrfect Playtent is not opening, release the cord, shake the tent and start the process over.*
3. Once the upper portion of the hub joins the lower, the Purrfect Playtent will now be fully functional. **(Figure 4)** *Be sure to engage the hub lock **(Figure 5)** at the top and tie a bow with the cords to prevent the tent from collapsing.* Provided plastic stakes are for added security. The stakes are placed at each of the four corners of the Purrfect Playtent and secured into the ground.

- PACKING AWAY THE PURRFECTION PLAYTENT

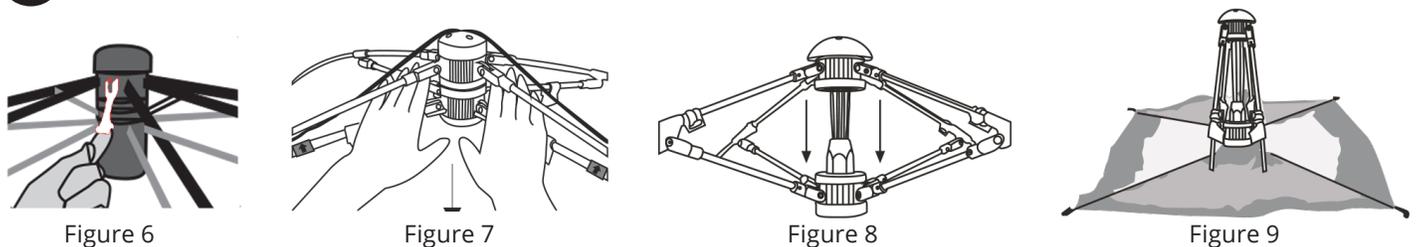

1. Disengage the hub lock **(Figure 6)**, untie the bow tie of the cords and remove any stakes.
2. Placing your hands on opposite sides of the lower hub poles, gently push down until the Playtent collapses and the upper poles are vertical. **(Figure 7 & 8)** *It is important not to force this process. It is also important to only use the lower poles where they connect to the hub. Failure to follow this process may lead to damage of the hub.*
3. Once collapsed, fold each lower pole up to the hub. **(Figure 9)** Then carefully roll the excess fabric around the folded poles, removing air. Once complete, slide it in to the provided carry bag.

* ATTACHING THE WEATHER GUARD



Orient the rain guard so the long side is facing the entry door of the tent. Pull each corner quick snap buckles below the pole hinge and snap in place.



Repeat on all four corners so that the rain guard is securely fastened to the Purrfect Playtent.



Once secure, you may now roll up or down each side to strategically block sun, rain, or views for your pet.

It is recommended that the Purrfect Playtent not be used in high winds or inclement weather. It is also recommended that if your pet is to spend any prolonged period of time inside the Playtent in the sun or rain, that you use the included weather cover.



Watch a short video on how to open and close your Purrfect Playtent at: PurrfectFence.com/playtent