



PURRFECT PLAYPEN ASSEMBLY INSTRUCTIONS


ANY QUESTIONS, PLEASE CALL US AT
1-888-280-4066

PLAYPEN INCLUDES: CARRYING BAG,
TENT, 2 POLES AND 4 SPIKES.




1

UNFOLD TENT
AND LAY FLAT
ON GROUND
WITH LOGO
FACING UP.

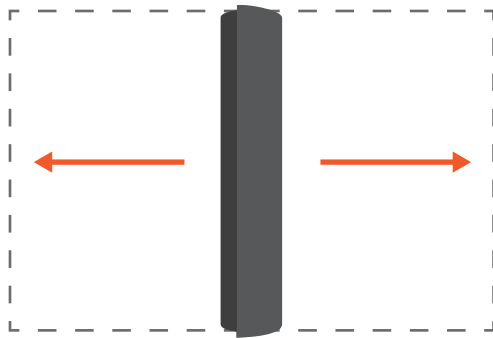


2

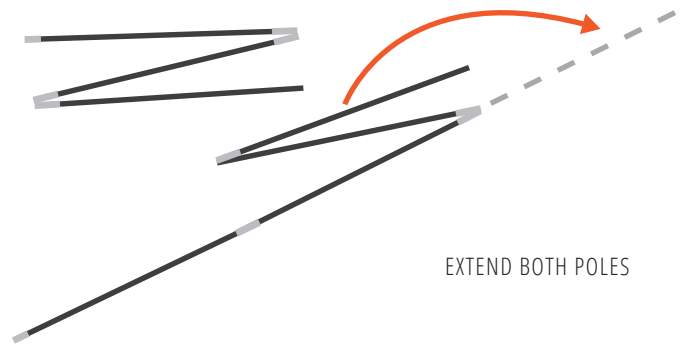

EXTEND BOTH POLES


3

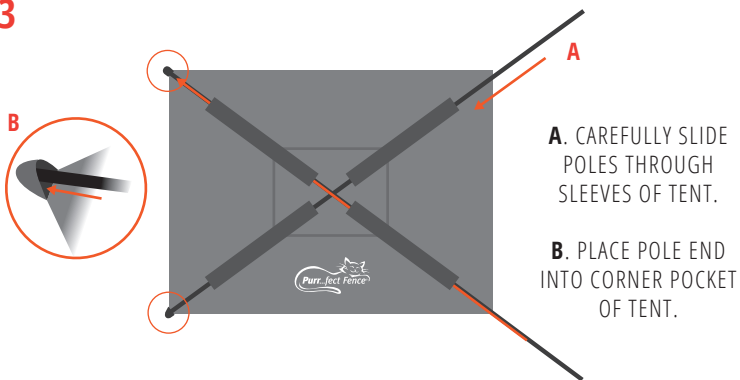

A. CAREFULLY SLIDE
POLES THROUGH
SLEEVES OF TENT.


B. PLACE POLE END
INTO CORNER POCKET
OF TENT.

4

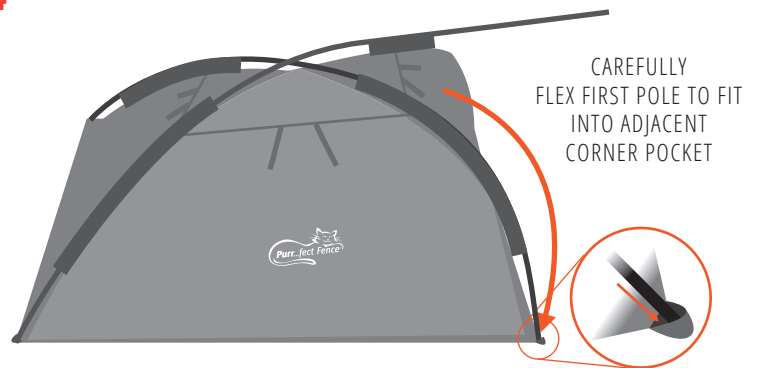

CAREFULLY
FLEX FIRST POLE TO FIT
INTO ADJACENT
CORNER POCKET

5

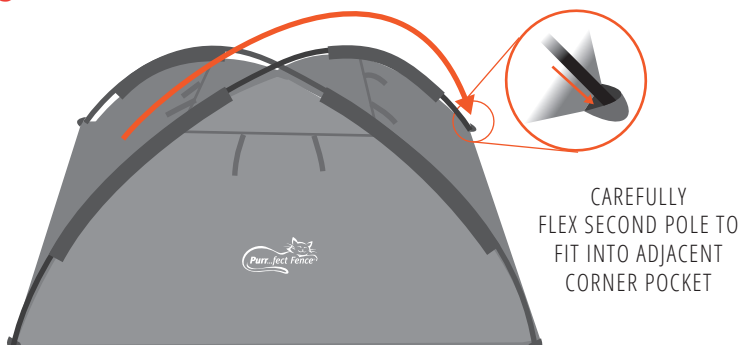

CAREFULLY
FLEX SECOND POLE TO
FIT INTO ADJACENT
CORNER POCKET


6

IF OUTDOORS, USE
MALLET TO DRIVE
STAKES THROUGH
TENT LOOPS INTO THE
GROUND.



7

ROLL UP AND
TIE TENT SIDES
FOR ACCESS.

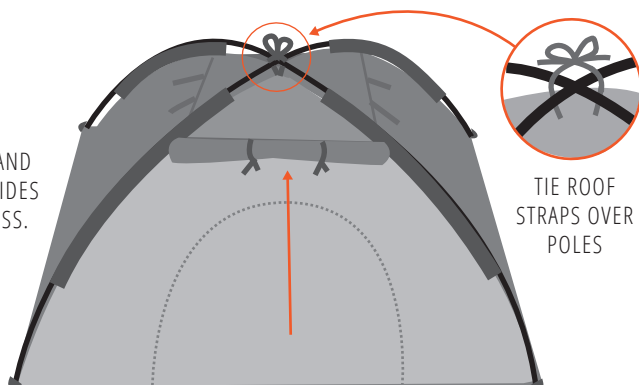

TIE ROOF
STRAPS OVER
POLES

8

UNZIP DOOR
AND ENJOY!

