 


bissell[®]
PROFESSIONAL

BOLT[®]
LITHIUM MAX
PROFESSIONAL
2-in-1 Cordless Vacuum

USER GUIDE
2023 SERIES

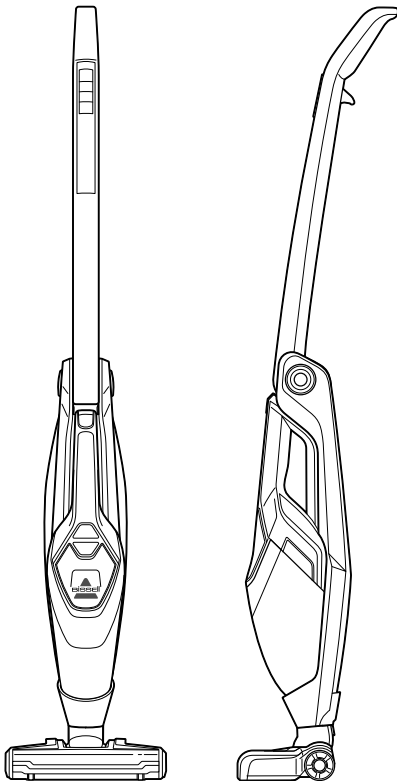

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR VACUUM.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- » Children should be supervised to ensure that they do not play with the appliance.
- » If charger supply cable is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified person in order to avoid a hazard.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- » Unplug from electrical socket when not charging.
- » Do not allow to be used as a toy.
- » Use only as described in this user guide.
- » Use only BISSELL recommended attachments.
- » Do not use with damaged cable or plug for charger.
- » Do not immerse in water or liquid.
- » If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and return it to a service center.
- » Do not pull or carry charger by cable.
- » Keep charger cable away from heated surfaces.
- » Do not unplug charger by pulling on cable.
- » To unplug charger, grasp the plug, not the cable.
- » Do not handle charger plug or appliance with wet hands.
- » Do not put any object into openings.
- » Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- » Use extra care when cleaning on stairs.
- » Do not use to pick up flammable or combustible liquids, such as petroleum, or use in areas where they may be present.
- » Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.)
- » Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some mothproofing substances, flammable dust, or other explosive or toxic vapours.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- » Use only on dry, indoor surfaces.
- » Keep appliance on a level surface.
- » Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- » Do not use without dust tank and/or filters in place.
- » Do not use outdoors or on wet surfaces
- » Do not leave machine running in the same spot without handle fully upright.
- » Turn off all controls before connecting or disconnecting the TurboBrush® Tool or Pet TurboEraser® Tool.
- » Only use the rechargeable Li-ion battery pack and charging base supplied by BISSELL.
- » If the appliance is to be stored unused for a long period, the battery pack should be removed.
- » Battery pack and charger base output terminals are not to be short-circuited.

SAVE THESE INSTRUCTIONS

FOR CHARGING ON A 220-240 VOLT A.C. 50/60 HZ POWER SUPPLY ONLY.

This model is for household use only. This user guide can also be available on BISSELL official website.

Thanks for buying a BOLT® LITHIUM MAX!

We love to clean and we're excited to share one of our innovative products with you. We want to make sure your vacuum works as well in years to come as it does today, so this guide has tips on using (pages 6-7), maintaining (pages 8-10), and if there is a problem, troubleshooting (page 11).

Your vacuum needs a little assembly before you can put it to work, so flip to page 5 and let's get started!

What's In The Box?

Multi-Surface Brush Roll

Hardwood Expert Brush Roll

Pet Brush Roll (select models)

Pet and Debris Nozzle Tool (select models)

Crevice Tool w/ Dusting Brush

Sweep and Scoop Tool (select models)

High Reach Extension Wand

Charging Adapter

Charging Base w/ Tool Storage

NOTE: Standard accessories may vary by model.

Safety Instructions 2

Product View 4

Assembly 5

Operations 6-7


Maintenance & Care 8-10

Troubleshooting 11

Guarantee 12

Consumer Care 12

 Getting to Know Your BOLT[®] Lithium


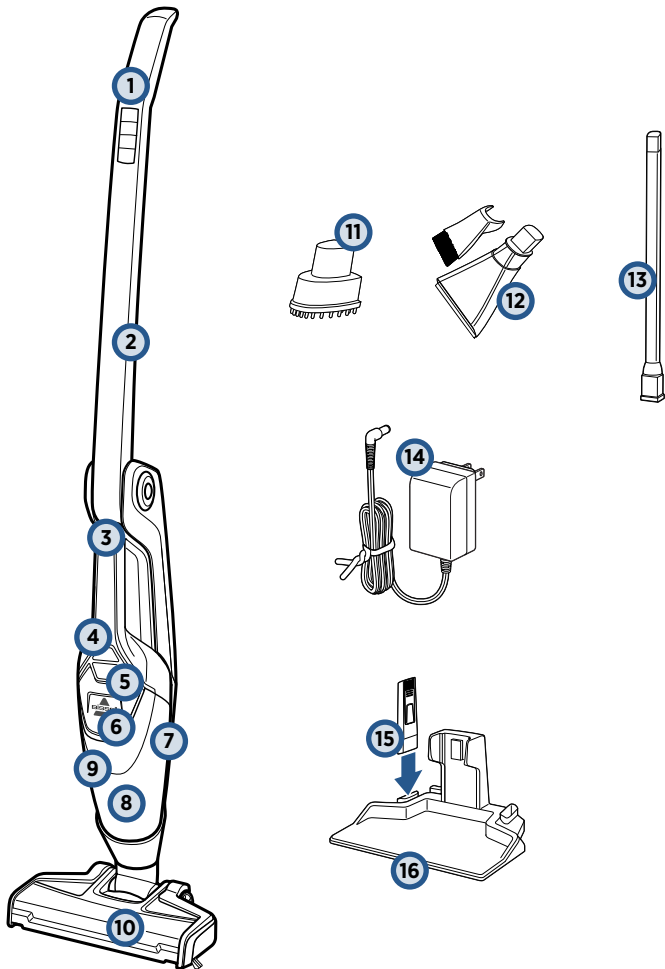


- | | | | |
|---|--------------------------------------|----|--|
| 1 | Fingertip Controls | 9 | Washable Filter Assembly |
| 2 | 2-Way Folding Handle Release Trigger | 10 | Foot |
| 3 | Hand Vac Release Button | 11 | Pet and Debris Nozzle Tool (select models) |
| 4 | Hand Vacuum Power Button | 12 | Sweep and Scoop Tool (select models) |
| 5 | Dirt Cup Release | 13 | High Reach Extension Wand |
| 6 | Charging Light Indicator | 14 | Charging Adapter Plug |
| 7 | Detachable Hand Vacuum | 15 | Crevice Tool with Dusting Brush |
| 8 | Dirt Cup | 16 | Charging Base |



Assembly

⚠️ WARNING

  
Do not plug in your BOLT® Lithium until you are familiar with all instructions and operating procedures.

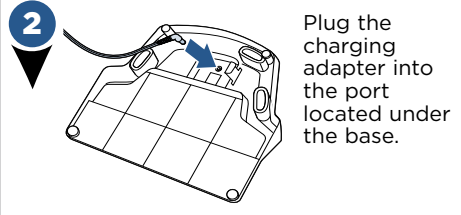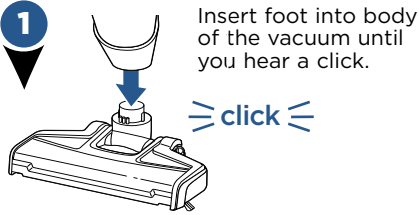

Charging

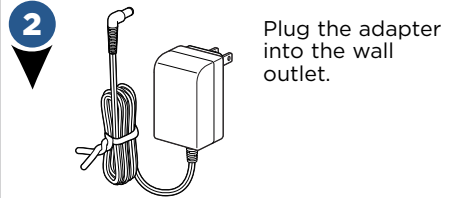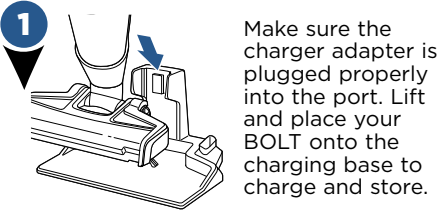  

Control Buttons

 

Power Icon = On/Off



Suction Icon = Suction Control



Brush Icon = Brush Roll On/Off




EdgeReach = Edge Cleaning On/Off

LED Display

Battery Status	LED Color	Light Behavior
100%	Blue	3 solid lights for 10 minutes, then flashes once per minute
66-99%	Blue	2 lights on, 1 light blinking
33-65%	Blue	1 light on, 1 light blinking
1-32%	Blue	1 light blinking
0%	Red	1 light blinking quickly


Using your BOLT® LITHIUM MAX

 1




To start cleaning select the power button to turn the unit on.

 2




Select the +/- button to adjust the suction power.

 3

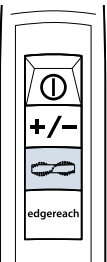

Select the brush button to turn the motorized brush roll off and on.

 4

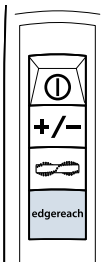


Select the edge reach button to turn the edge cleaning mode off and on.

NOTE: The brush roll will be ON when the stick vacuum is turned ON. Having the brush roll ON may improve cleaning on soft surfaces such as low-pile area rugs.


Operating 2-Way Folding Handle

1




Find the 2-Way folding handle trigger located under the handle.

 2

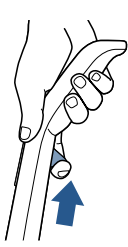


Pull the trigger to fold the handle.

3



Fold the handle back for easy storage.

 
4

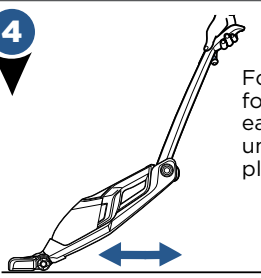

Fold the handle forward to easily clean underneath low places.


Removable Hand Vacuum

 1

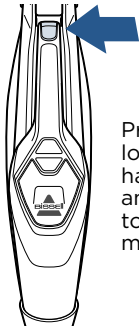


Press the button located on top of the hand vacuum handle and lightly pull out to remove it from the machine.

 2

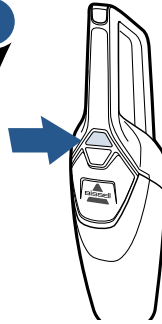


Press the power button to begin cleaning.

 Hand Vacuum Tools

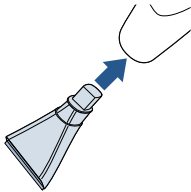

 
Your purchase may come with specially designed tools designed to make pet cleanup easier. To use any of the tools, remove the hand vacuum from the base of the machine and insert the desired tool firmly in to the hand vacuum nozzle.

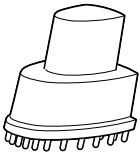

Pet and Debris Nozzle Tool has rubberized teeth to pull and lift up embedded hair and dirt.




 Crevice Tool with Dusting Brush reaches narrow spaces and is delicate on upholstery.

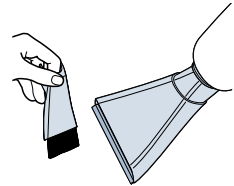

Sweep and Scoop Tool makes it easier to sweep in and vacuum up debris.

 Charging Base Tool Storage

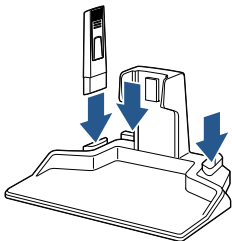

The charging base will recharge your stick vacuum and also store the tools. There are up to three spots to store the tools to your hand vacuum on the charging base.

 
Reminder: The charging port on the base is located underneath.

Maintenance: Emptying the Dirt Cup

WARNING

To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

1

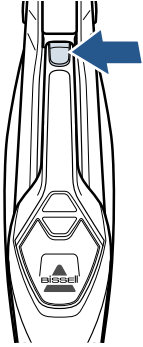


Make sure the vacuum is OFF. Remove the hand vacuum by pressing the release button on its top handle.

2




Find the dirt cup removal button and press to remove the dirt cup from hand vacuum.

 3

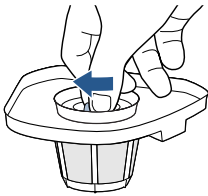

With the dirt cup removed, locate the filter removal tab in the center of the filter assembly. Firmly grasp the tab and turn clockwise (to the right) to operate the Clean-Turn feature. As you turn the tab, the filter will turn and help clean off excess dirt and debris.

 4

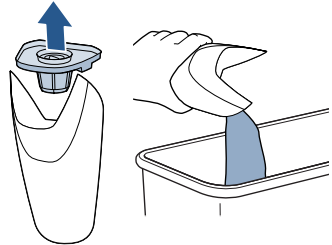


Firmly grasp the tab and pull up to remove the filter from the dirt cup. Empty the dirt cup into a waste receptacle.

WARNING

Do not operate your BOLT® Lithium with damp or wet filters or without filters in place.


Maintenance: Filters

 TIP: It may be helpful to turn the filter assembly over and view the underside locking parts before completing steps 1 - 6.

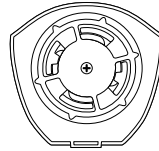


underside view of filter

 1

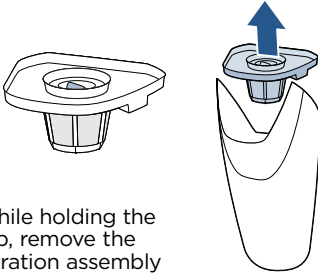


While holding the tab, remove the filtration assembly from the dirt cup.

 2

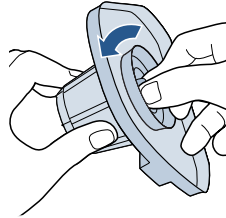


To disassemble for thorough cleaning, firmly grasp the filter assembly tab with one hand and the mesh filter frame with the other. Turn the tab to the left (counterclockwise) to unlock from the mesh filter frame.

 3

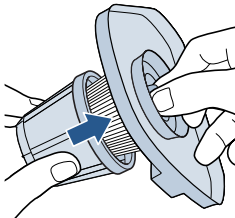

To re-assemble the filter, insert the pleated filter into the mesh filter frame.

 4

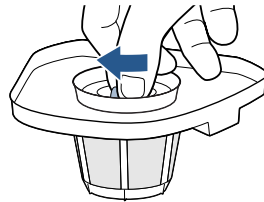


While firmly holding the mesh filter frame, turn the tab to the right (clockwise) to lock the pieces together.

NOTE: You may rinse the filter and frame in warm water to clean. The filter and frame need to be 100% dry before reuse. The key to maximum performance is having a clean filter. Cleaning the filter after each use will help your vacuum operate at peak efficiency.


Maintenance: Brush Roll

WARNING

 
Do not operate your BOLT® LITHIUM MAX with damp or wet filters or without filters in place.

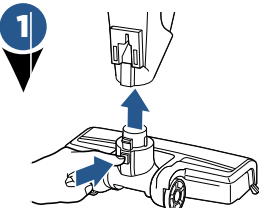

 
1 Make sure the vacuum is OFF. Press the foot release button to disconnect it from the vacuum.

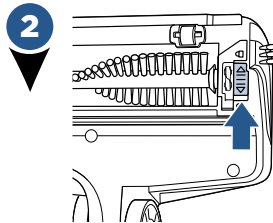

 
2 Turn the foot over and locate the brush roll cover tab.

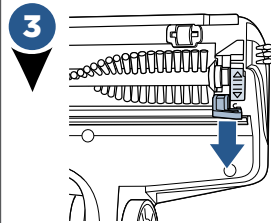

 3 Slide the tab down to un-lock and lift the corner cover piece.

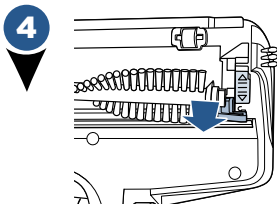

 4 Grasp the brush roll and remove from the foot window area.

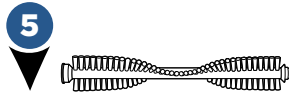

5 Clean your brush roll as needed and place back into foot. Make sure the brush roll cover tab is locked back into place to prevent breaking or faulty brush roll operation.

 
BRUSH ROLL RESET:

If larger debris becomes lodged in the foot and the brush roll shuts off, turn the unit off and remove the obstruction. Wait approximately 15 seconds for the motor to cool down before turning back on. Brush will function again after allowing time to cool down.

Maintenance: Disposal of Batteries

NOTICE

Disconnecting the battery will destroy the appliance and invalidate the warranty.

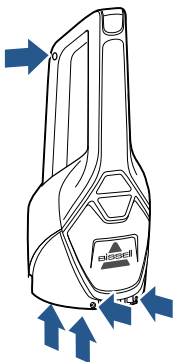

- Unplug the charger.
- Remove hand vac from unit and remove dirt cup from handle.
- Remove (2) Phillips head screws and remove the lens from the hand vacuum.
- Remove (2) Phillips head screws from the hand vacuum cover.
- Lift off the hand vacuum cover and take out the push rod.
- Remove (5) Phillips head screws from the side of the hand vacuum.
- Remove the entire battery assembly from the cover.
- Cut wires from the PCB and wrap the wire ends with insulation tape.
- Keep Battery Pack together - DO NOT separate individual batteries. For specific disposal instructions of batteries, please follow local regulations.
- Hand in remainder of product at an official collection point for recycling.

Troubleshooting

WARNING

To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

Problem	Possible causes	Remedies
Vacuum won't turn on	Battery isn't fully charged	Charge battery. Follow charging battery instructions on page 5
	Wrong charger being used	Be sure to use only the charger supplied with your product. The label on the detachable hand vacuum will list which charger can be used.
Brush roll not turning	Brush roll is jammed	Remove obstruction. Follow instructions on page 10
	Brush roll needs to be reset	Follow instructions on page 10
	Broken brush roll belt	Visit www.bissell.com
Vacuum cleaner has low suction	Dirt container is full	Empty dirt container
	Dirt container is not installed properly	Position container correctly and snap firmly into place
	Foot is loose	Make sure foot is fully inserted into body of unit
	Filters need cleaning	Follow filter instructions on page 9
	Filters need replacing	Visit www.bissell.com
	Clog or obstruction in foot area	Detach foot from main body and examine and remove clog from ports
Visible dirt escaping from cleaner	Dirt container is full of debris	Empty dirt container
	Filter is missing or installed incorrectly	Check filter for correct installation
	Dirt container installed incorrectly	Position container correctly and snap firmly into place
Vacuum won't charge	Not the correct charger	Use only the charger that comes with the machine

Please do not return this product to the store.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Consumer Guarantee

This Guarantee only applies outside of the USA and Canada. It is provided by BISSELL International Trading Company BV ("BISSELL").

This Guarantee is provided by BISSELL. It gives you specific rights. It is offered as an additional benefit to your rights under law. You also have other rights under law which may vary from country to country. You can find out about your legal rights and remedies by contacting your local consumer advice service. Nothing in this Guarantee will replace or lessen any of your legal rights or remedies. If you need additional instruction regarding this Guarantee or have questions regarding what it may cover, please contact BISSELL Consumer Care or contact your local distributor.

This Guarantee is given to the original purchaser of the product from new and is not transferable. You must be able to evidence the date of purchase in order to claim under this Guarantee.

Limited Two-Year Guarantee

Subject to the "EXCEPTIONS AND EXCLUSIONS" identified below, BISSELL will for two years from the date of purchase by the original purchaser repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge, any defective or malfunctioning part or product. BISSELL recommends that the original packaging and evidence of the date of purchase be kept for the duration of the Guarantee period in case the need arises within the period to claim on the Guarantee. Keeping the original packaging will assist with any necessary re-packaging and transportation but is not a condition of the Guarantee.

If for your product is replaced by BISSELL under this Guarantee, the new item will benefit from the remainder of the term of this Guarantee (calculated from the date of the original purchase). The period of this Guarantee shall not be extended whether or not your product is repaired or replaced.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE GUARANTEE

This Guarantee applies to products used for personal domestic use and not commercial or hire purposes. Consumable components such as filters, belts and mop pads, which must be replaced or serviced by the user from time to time, are not covered by this Guarantee.

This Guarantee does not apply to any defect arising from fair wear and tear. Damage or malfunction caused by the user or any third party whether as a result of accident, negligence, abuse, neglect, or any other use not in accordance with the User Guide is not covered by this Guarantee.

An unauthorised repair (or attempted repair) may void this Guarantee whether or not damage has been caused by that repair/attempt.

Removing or tampering with the Product Rating Label on the product or rendering it illegible will void this Guarantee.

SAVE AS SET OUT BELOW BISSELL AND ITS DISTRIBUTORS ARE NOT LIABLE FOR ANY LOSS OR DAMAGE THAT IS NOT FORESEEABLE OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT INCLUDING WITHOUT LIMITATION LOSS OF PROFIT, LOSS OF BUSINESS, BUSINESS INTERRUPTION, LOSS OF OPPORTUNITY, DISTRESS, INCONVENIENCE OR DISAPPOINTMENT. SAVE AS SET OUT BELOW BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

BISSELL DOES NOT EXCLUDE OR LIMIT IN ANY WAY ITS LIABILITY FOR (A) DEATH OR PERSONAL INJURY CAUSED BY OUR NEGLIGENCE OR THE NEGLIGENCE OF OUR EMPLOYEES, AGENTS OR SUBCONTRACTORS; (B) FRAUD OR FRAUDULENT MISREPRESENTATION; (C) OR FOR ANY OTHER MATTER WHICH CANNOT BE EXCLUDED OR LIMITED UNDER LAW.

FOR AUSTRALIAN CONSUMERS ONLY:

OUR GOODS COME WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER THE AUSTRALIAN CONSUMER LAW. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAILURE AND FOR COMPENSATION FOR ANY OTHER REASONABLY FORESEEABLE LOSS OR DAMAGE. YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE.

THIS GUARANTEE IS IN ADDITION TO OTHER RIGHTS OR REMEDIES UNDER LAW. NOTHING IN THIS GUARANTEE EXCLUDES, LIMITS OR MODIFIES ANY LIABILITY OF BISSELL WHICH IS IMPOSED BY LAW, OR LIMITS OR MODIFIES ANY REMEDY AVAILABLE TO THE CONSUMER WHICH IS GRANTED BY LAW. TO MAKE A CLAIM UNDER THIS GUARANTEE CONTACT BISSELL AUSTRALIA PTY LTD (DETAILS ABOVE). CONTACT BISSELL PRIOR TO RETURNING ANY GOODS. WHERE AGREED, BISSELL WILL REIMBURSE REASONABLE POSTAGE / HANDLING COSTS (IF ANY) FOR RETURNING GOODS TO BISSELL.

Consumer Care

If your BISSELL product should require service or to claim under our Limited Two-Year Guarantee, please contact us as follows:

Website:

www.BISSELL.com

Email:

consumer@bissell.com

Write:

BISSELL AUSTRALIA PTY LIMITED
42 Rocco Dr.
Scoresby 3179
Victoria
Australia

Telephone:

Australia: 1300-247-735
New Zealand: 0800-247-735

Replacement parts and accessories are available for purchase. To purchase visit www.BISSELL.com

Visit the BISSELL website: www.BISSELL.com

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____ Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of the date of purchase in the event of a Guarantee claim. See Guarantee for details.



©2016 BISSELL Homecare, Inc
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 161-0166 08/16 Rev C
Visit our website at: www.BISSELL.com