

Deep Clean Essential
9585 1210 8852 Series

Leaking

- 1) Are the triggers being depressed? If no...
- 2) Verify that the water tank lid is on securely.
- 3) Make sure the front nozzle is securely in place.
- 4) If none of these steps work, please take your machine to a BISSELL Authorized Service Center to have a Quality Technician inspect your machine.