

CLEANVIEW™ PROHEAT® **USER GUIDE**

MODEL 46L5-F

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR DEEP CLEANER.

When using an electrical appliance, basic precautions should be observed, including the following.

WARNING

ALWAYS CONNECT TO A PROPERLY EARTHED ELECTRICAL SOCKET.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Unplug from electrical socket when not in use and before servicing.
- » This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory and mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- » Children should be supervised to ensure that they do not play with the appliance.
- » If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- » Do not leave appliance when plugged in.
- » Do not modify earthed plug.

WARNING

TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK - USE INDOORS ONLY. DO NOT IMMERSE. USE ONLY ON SURFACES MOISTENED BY THE CLEANING PROCESS. USE ONLY BISSELL CLEANING PRODUCTS INTENDED FOR USE WITH THIS MACHINE.

- » Use indoors only.
- » Do not allow to be used as a toy.
- » Use only as described in the user guide.
- » Use only manufacturer's recommended attachments.
- » Do not use with damaged cable or plug.
- » Do not immerse in water or liquid.
- » If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- » Liquid must not be directed towards equipment containing electrical components.
- » Do not pull or carry by cable, use cable as a handle, close door on cable, or pull cable around sharp edges or corners.
- » Do not run appliance over cable.
- » Keep cable away from heated surfaces.
- » Do not unplug by pulling on cable.
- » To unplug, grasp the plug, not the cable.
- » Do not handle plug or appliance with wet hands.
- » Do not put any object into openings.
- » Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- » Turn off all controls before unplugging.
- » Use extra care when cleaning on stairs.
- » Do not use to pick up flammable or combustible liquids, such as petrol, or use in areas where they may be present.
- » Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.)
- » Do not use appliance in an enclosed space filled with vapors given off by oil base paint, some mothproofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- » Keep appliance on a level surface.
- » Do not carry appliance while in use.
- » Unplug before attaching the TurboBrush™ tool.

WARNING

TO REDUCE THE RISK OF ELECTRIC SHOCK, ALWAYS INSTALL FLOAT BEFORE ANY WET PICK-UP OPERATION.

FOR OPERATION ON A 220-240 VOLT A.C. 50/60 HZ POWER SUPPLY ONLY.

This model is for household use only.

SAVE THESE INSTRUCTIONS FOR FUTURE USE


Thanks for buying a BISSELL deep cleaner

We're glad you purchased a BISSELL deep cleaner. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL deep cleaner is well made, and we back it with a limited two-year guarantee. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL deep cleaner.

Thanks again, from all of us at BISSELL.

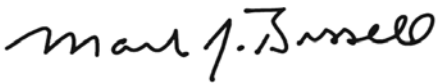





Mark J. Bissell
Chairman & CEO

Safety Instructions	2
Product View	4
Assembly	5
Operations	6-11
Maintenance & Care	12-15
Troubleshooting	16
Replacement Parts	17
Accessories	17
Notes	18-19
Guarantee	20
Consumer Care	20

TIPS

- » Deep cleaning stairs and high-traffic areas on a regular basis helps prolong carpet life.
- » Deep cleaning carpeting regularly can reduce dust and allergens in your home.

	WARNING	AN ACTION OR ATTENTION IS NEEDED TO THIS AREA IN ORDER TO REDUCE THE RISK OF ELECTRIC SHOCK, FIRE, OR INJURY
	GUIDE	READ USER GUIDE FOR COMPLETE SAFETY AND USER INSTRUCTIONS
 	WEEE	DO NOT THROW THE APPLIANCE AWAY WITH THE NORMAL HOUSHOLD WASTE AT THE END OF ITS LIFE, BUT HAND IT IN AT AN OFFICIAL COLLECTION POINT FOR RECYCLING. BY DOING THIS YOU WILL HELP TO PRESERVE THE ENVIRONMENT.



Product View



- | | | | | | |
|---|------------------------------------------------|----|--------------------------|----|------------------------------------------------------------|
| 1 | Handle Assembly | 8 | Removable Nozzle | 17 | Ready-to-Use Hose |
| 2 | Heat Indicator Light/Built-in Hot Water Heater | 9 | EdgeSweep™ Brushes | 18 | 2-in-1 Water Tank™ Includes built in formula measuring cup |
| 3 | Heater Switch: Turn heat on or off as needed | 10 | DirtLifter™ PowerBrush | 19 | Handle Release |
| 4 | Lower Body Assembly | 11 | Spray Trigger | 20 | Power Switch |
| 5 | Integrated Carry Handle | 12 | Cord Clip | 21 | Large, Easy-To-Manuever Wheels |
| 6 | ReadyTools™ Dial | 13 | Tough Stain Tool | | |
| 7 | Belt Access Door | 14 | Hose Secure Latch | | |
| | | 15 | Quick Release™ Cord Wrap | | |
| | | 16 | Power Cord | | |

Assembly

Your deep cleaner comes in four easy-to-assemble components:

- Handle assembly**
- Upper hose rack**
- Lower body assembly**
- Lower hose rack**


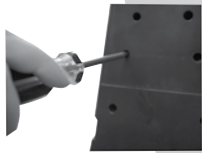








Four Phillips head screws are included, 2 long and 2 short. They can be found taped to the handle assembly.

The only tool you will need to assemble your cleaner is a Phillips head screwdriver.

1. Slide handle assembly onto lower body and secure with two long screws.
2. Attach upper hose rack to back of handle assembly by pushing into open slots and sliding down until it snaps into place.
3. Attach lower hose rack by sliding in place on lower body assembly and securing with 2 short screws.
4. Attach Tough Stain tool to end of hose.
5. Wrap flex hose around hose rack and secure it into notched out holder as shown.
6. Keep flex hose locked in place with hose secure latch.

WARNING

Do not plug in your deep cleaner until you have completely assembled it per the instructions and are familiar with all instructions and operating procedures.

1.  
2.  
3.  
4. 
5.  
6.  Hose Secure Latch

Cleaning fluid

Keep plenty of genuine BISSELL 2X formula on hand so you can clean and protect whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas. Non-BISSELL cleaning solutions may harm the machine and will void the guarantee.

WARNING

To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner.



24oz. 2X Wash & Protect PRO Professional Stain & Odour Formula w/ Scotchgard® Protector **#78H6E**



24oz. 2X Wash & Protect PET Pet Stain & Odour Formula w/ Scotchgard® Protector **#99K5E**



24oz. 2X Wash & Protect Stain & Odour Formula w/ Scotchgard® Protector **#62E5E**



24oz. 2X Wash & Refresh Blossom & Breeze Fragrance Formula w/ Febreze® Freshness **#1248E**



24oz. 2X Wash & Refresh Cotton Fresh Formula w/ Febreze® Freshness **#1249E**



24oz. 2X Wash & Refresh Natural Orange Formula **#83P3E**



16 oz. 2X Wash & Shine Hard Floor Solutions **#56L9E**



22oz. Stain Pretreat **#1147E**



www.BISSELL.com


Operations

Special features

Your BISSELL deep cleaner is a home cleaning system that uses a combination of heat, BISSELL cleaning formula, brush agitation and suction to safely clean carpets.

Built-In-Heater

BISSELL ProHeat® models all feature a patented built-in heater which will heat the hand hot tap water you put in it to safely optimise cleaning effectiveness. The heater will never allow the temperature to exceed 82°C degrees. The heater switch, which is located on the side of the machine, controls the heater so you have the option to turn off the heat if you are cleaning delicate wool or oriental rugs.

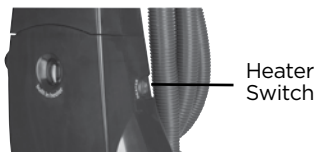


DirtLifter™ PowerBrush

The DirtLifter PowerBrush is designed to enhance cleaning performance. The bristle pattern safely lifts out the deep down dirt while gently grooming carpet fibers. The floating suspension self-adjusts to all carpet heights. When the power is ON and the machine is in the upright position, your carpet is protected because the brushes are lifted up off the carpet.



ReadyTools™ Dial

The ReadyTools feature allows you to choose between FLOOR CLEANING or cleaning with TOOLS simply by turning the dial. The TOOLS setting allows for above floor cleaning of upholstery, stairs, along baseboards, and other hard to reach areas. Simply choose the tool that is appropriate for the job, attach to flex hose and you are ready to go.

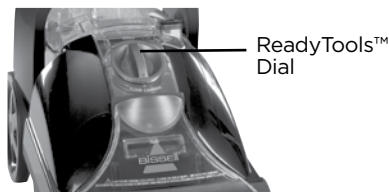

Scotchgard™ Protector

Carpet protection applied at the mill typically wears down over time from heavy foot traffic and everyday cleaning, including deep cleaning. To help restore this important protection, only BISSELL offers cleaning formulas with Scotchgard protector. This offers extra protection against dirt and tough stains to keep your carpets looking good longer.



More than 7 million Australians suffer from asthma and allergies. The Sensitive Choice program has been developed by the National Asthma Council Australia to help Australians and New Zealanders make better lifestyle choices that may help manage asthma and allergies more effectively.

The BISSELL range of deep carpet cleaners and deep carpet cleaning formulas has been approved by the National Asthma Council Australia's Sensitive Choice

program, and carries the Sensitive Choice butterfly logo. The Sensitive Choice blue butterfly symbol is a way of recognising products and services that support asthma and allergy care. Products that carry the blue butterfly may be better choices for people with asthma and allergies.


To learn more about managing asthma and allergies, visit the Sensitive Choice website at www.sensitivechoice.com.au



Operations

Measuring cup

Your deep cleaner is equipped with a measuring cup for adding the proper amount of formula to the 2-in-1 water tank. For convenience the measuring cup is built into the lid of the 2-in-1 water tank.

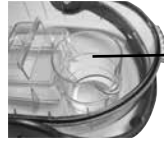

Measuring Cup

2-in-1 water tank

Our 2-in-1 water tank system is designed with a heavy duty bladder inside for clean water. As you clean, the clean water and formula in the bladder will empty. Dirty water pulled out of your carpet will collect around the outside of the bladder so clean and dirty water are always kept separate. This allows the user to maximize tank space, yet only carry one tank to and from the sink for emptying and filling.



Carry Handle

Removable Nozzle

Cleaning up your machine after you're done has never been easier! Nozzle pops off for rinsing in the sink.




Before you clean

1. Plan activities to give your carpet time to dry.
2. Move furniture to another area if cleaning an entire room (optional).
3. Vacuum area with a dry vacuum cleaner before deep cleaning.
4. Plan your cleaning route to leave an exit path. It is best to begin cleaning in the corner farthest from your exit.
5. **Pretreating** (optional)

Pretreating is recommended to improve cleaning effectiveness for heavily soiled carpet in high traffic areas such as entry ways and hallways.

To pretreat:

- a. Using the BISSELL Stain PreTreat, generously spray evenly over soiled area, do not overwet.
- b. Wait 3-5 minutes before deep cleaning.
- c. Clean as normal using your BISSELL deep cleaner.

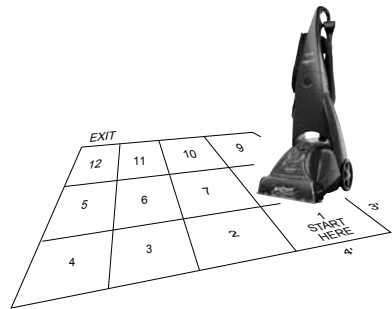

ATTENTION

Some Berber carpets have a tendency to fuzz with wear. Repeated strokes in the same area with an ordinary vacuum or deep cleaner may aggravate this condition.

Operations

Fill the 2-in-1 water tank

1. Remove the tank from the base of the machine by lifting the tank carry handle.
2. Carry like a bucket to the sink. Rotate the handle forward to unlatch the lid. Remove lid, turn over and locate built in measuring cup.
3. Fill with BISSELL 2X formula to the indicated fill line on the built in measuring cup and pour into mouth of the bladder.
4. Fill the bladder with clean hand hot tap water.
***Do not boil or microwave water as it can destroy the bladder.**
5. Replace the top of the tank by matching the lid and tank edges. Handle must be in the forward position in order to replace lid. Rotate the handle to the carrying position to latch the lid.

NOTE: Remember to secure the lid and test to make sure it is secure before picking up the tank.

6. Place tank into machine base, seating firmly in place. Rotate tank handle back into latched position.





Carpet cleaning

1. Plug the deep cleaner into a proper outlet. Set ReadyTools dial to the FLOOR CLEANING setting. Turn the power on by pressing the red power switch on the back of the unit with your foot. Turn heater switch (located on side of unit) to the on position. Allow one minute for the built-in heater to warm up before cleaning.

NOTE: Your deep cleaner will be fully warmed and will provide optimal performance after one minute of continuous heated cleaning.

2. With your foot, press the gray handle release lever located on the back of unit below water tank to detent handle.
3. While pressing the spray trigger, make one slow forward wet pass and another back. Let the built-in heater, BISSELL 2X deep cleaning formula and DirtLifter PowerBrush do the work for you. **Caution: Do not overwet.**
4. Release the spray trigger and make one slow forward and backward pass over the same area to remove any residual dirty water and aid in drying.
5. Repeat cleaning passes until solution being suctioned up appears clean. Continue passes without pressing the spray trigger until you can't see any more water being suctioned up.

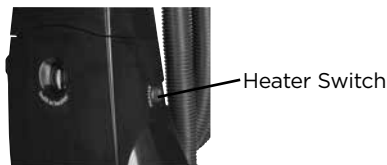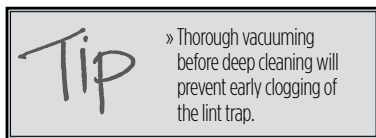

Operations

Empty the 2-in-1 water tank/clean removable nozzle

1. Turn power switch off. Remove the 2-in-1 water tank from the base using the tank carry handle. Carry the tank like a bucket to a utility sink or outside where you will dispose of the collection water. Remove the top of the tank by rotating the handle forward to unlatch lid and lifting lid off tank.

2. Empty collection water from bottom of tank.

3. After each use, remove and rinse the lint screen located on the tank lid.

4. If nozzle needs to be cleaned, remove by grasping handle at the top and pulling forward. Clean removable nozzle by rinsing under running water.

5. When finished, replace nozzle by slightly raising front of machine to line up slots at the base with the hooks on nozzle. Attach at base first and then click nozzle into place.

NOTE: If nozzle is not attached properly loss of suction will occur.


6. To continue carpet cleaning, refer back to page 8, beginning with "Fill the 2-in-1 water tank".

If cleaning is complete, refer to the "Maintenance and care" section on page 12.

1.



2.

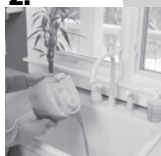

Lint Screen

3.



4.



5.



ReadyTools™

Your deep cleaner comes equipped with a hose and at least one attachment for cleaning stairs, upholstery, and more.

Important! If using the machine to clean upholstery, check upholstery tags.

1. Check manufacturer's tag before cleaning. "W" or "WS" on the tag means you can use your deep cleaner. If the tag is coded with "X" or "S" (with a diagonal strike through), or says "Dry Clean Only," do not proceed. Do not use on velvet or silk. If manufacturer's tag is missing or not coded, check with your furniture dealer.


2. Check for colourfastness in an inconspicuous place.

3. If possible, check upholstery stuffing. Coloured stuffing may bleed through fabric when wet.

4. Plan activities to give upholstery time to dry.

5. Vacuum thoroughly to pick up loose debris and pet hair. Use a vacuum with a brush attachment and a crevice tool to clean in fabric folds and tufts.

6. To begin cleaning with attachments, follow the instructions on page 8 for filling the 2-in-1 water tank.

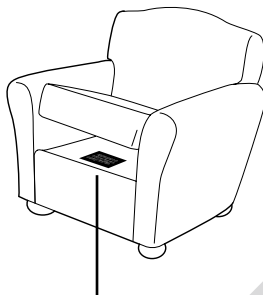

Manufacturer's tag

Operations

7. Set the ReadyTools dial to the TOOLS setting. This will allow spray and suction from the hose.

8. Attach the cleaning tool of your choice to the end of the hose.

9. Clean by pressing the spray trigger to spray solution onto the area to be cleaned. Slowly move the tool back and forth over the soiled surface. Release the spray trigger to suction dirty water. Continue to clean in the area, working in small sections, until dirt is removed.

Caution: Do Not Overwet.

10. When finished cleaning, remove and rinse tool(s) in clean, running water.

11. It is recommended that you suction clean water from the tap to rinse out the hose.

12. Before wrapping hose onto tool rack, lift end of hose and stretch out to ensure all water is cleared from hose.

13. Wrap flex hose around tool rack.

14. Empty 2-in-1 water tank and rinse out, following instructions on page 9.

15. If the ReadyTools dial becomes difficult to turn, the diverter assembly that holds the dial may need to be cleaned. To clean, first remove nozzle and locate screw that holds the diverter assembly in place. With a Phillips screwdriver, remove the screw and set aside.

16. Remove diverter assembly; hold under running water making sure water flows through and around the dial. Turn the dial about 10 times clockwise and 10 more times counter clockwise. This should free up any debris.

17. Wipe diverter assembly with a soft cloth and replace back on machine. Replace nozzle.

18. Return ReadyTools dial to FLOOR CLEANING setting.

7.




11.



12.



15.

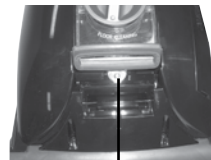

Screw

16.

Run water through here



Operations

Hard Floor Cleaning

Your deep cleaner may have included a hard floor tool and 2X Hard Floor Solutions. The hard floor tool provides effective cleaning for linoleum, vinyl, and tile floors. **Caution: Do not use on unsealed hardwood floors.**

1. Thoroughly vacuum or sweep floor to pick up any debris.

NOTE: Prior to filling with formula and water be sure all carpet cleaning formula is thoroughly rinsed from the 2-in-1 water tank.

2. Pour BISSELL Hard Floor Solutions to the indicated fill line in the built in measuring cup and pour into mouth of bladder.

3. Fill the bladder with clean hand hot tap water and set aside.

4. Attach the hard floor tool to the bottom of the machine by hooking it into the nozzle and swinging it down until it clicks into place.

5. Be sure the ReadyTools dial is set to FLOOR CLEANING.

6. Plug into an outlet and turn the power on.

7. Plan your cleaning route to leave an exit path. Be sure to allow adequate time for floors to dry.

8. While pressing the spray trigger, make one slow forward wet pass and another back.


Caution: Do Not Overwet.

9. Repeat the motion without pressing the spray trigger using the hard floor tool to squeegee and suction up the dirty water.

10. When finished, remove hard floor tool, rinse and let dry before storing. Refer to the Maintenance and care section on pages 12 and 13 for machine clean up and storage instructions.



4.

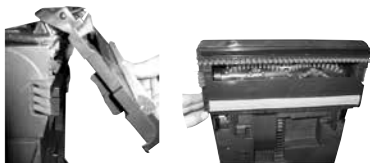

Maintenance & Care

Machine care

For best results, a few simple steps can assure your machine is well maintained after cleaning is complete.

1. Flush your machine of any remaining residual solution.
 - a. Fill the 2-in-1 clean water tank (bladder) with clean hot tap water.
 - b. Plug your machine into a proper outlet and set the ReadyTools dial to the "FLOOR CLEANING" setting. Turn the power on by pressing the power button.
 - c. Recline the handle and press the spray trigger for 15 seconds while making forward and backward passes on carpet. Release the trigger to suction. Repeat for another 15 seconds. Continue without pressing the trigger until there is no more water being suctioned.
2. Turn power switch off. Unplug the machine and wrap the power cord.
3. After emptying the 2-in-1 water tank, rinse with running hot tap water, taking care to clean underneath and around the heavy duty bladder. Clean out red lint screen (located on tank lid). Removable nozzle may be rinsed if necessary.
4. Before you place the 2-in-1 water tank back onto the machine, remove the red solution filter cap (on the base of the machine). Remove the cap by inserting a coin or a flat head screwdriver into the slot on the top. Turn counter clockwise to unscrew.
5.
 - a. Remove the white filter by grasping the post and pulling up and out of the unit. Rinse the filter under cold water.
NOTE: Be careful not to drop the filter into the sink or disposal.
 - b. Replace the white filter back into the filter area. **NOTE: Make sure the white filter is seated properly before replacing the red solution filter cap.**
 - c. Replace the red solution filter cap and turn clockwise to tighten.

WARNING

To reduce the risk of electric shock, push power button  off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

4.



5a.



Maintenance & Care

6. Replace the 2-in-1 water tank on the machine.
7. Any loose hair or debris can be pulled from the brush roll and thrown away.
8. To clean attachments, remove from hose and rinse in clean, running water. Dry before storing. Clean the hose by suctioning clean water from the tap. Before wrapping back on machine, lift end of hose and stretch out to ensure all water is cleared from hose. Refer to page 10, images 11 and 12.
9. Wipe the machine's exterior with a soft cloth.
10. After carpet is dry, vacuum again to remove hair and fuzz.

Machine storage

Put the unit away in a closet or basement for the next use. Store cleaner in a protected, dry area. Since this product uses water, it must not be stored where there is a danger of freezing. Freezing will damage internal components and void the warranty.

Maintenance & Care

Brush belt and brush removal & replacement

Occasional replacement of the brush belt or brush may become necessary. If needed, please follow instructions below.

1. Turn off machine and unplug from outlet. Wrap hose and cord on racks.
2. Remove 2-in-1 water tank and set aside.
3. **IMPORTANT: Fully recline handle.**
4. Locate the belt access door and insert the flat end of a screwdriver into the slots on the belt access door to remove.
5. Flip the unit on its side and use a Phillips head screwdriver to remove the screw on the red belt cover and set screw and cover aside.
6. Remove the screw from the white pivot arm connector and set screw and connector aside.
7. Remove the black pivot arm and brush belt. If worn or damaged, replace with a new brush belt.
8. If necessary, the brush roll can be removed for cleaning or replacement. To remove, rotate the brush out of brush housing and pull brush off axle attached to remaining end cap. The remaining pivot arm can be removed by removing the other pivot arm connector and screw (this will allow for full access to brush chamber for cleaning). Make sure "keyed" end of metal rod is aligned with slot in pivot arm before reassembling. Replace brush on axle, cogged-side last. You may need to rotate brush to allow it to slide all the way down the axle.
9. Reattach brush belt by installing onto toothed pump pulley and then onto toothed end of brush.
10. Reattach pivot arm, white pivot arm connector and screw.
11. Reattach red belt cover and screw.

NOTE: Do not over tighten screws.

12. Reattach belt access door.

If you have any questions or are having trouble removing, replacing or reinstalling your brush belt or brush, please call BISSELL Consumer Care.

3.



4.



5.



6.



7.



8.



9.



Maintenance & Care

Pump belt removal & replacement

Occasional replacement of the pump belt may become necessary. If needed, please follow instructions below.


1. Turn off machine and unplug from outlet. Wrap hose and cord on racks.
2. Remove 2-in-1 water tank and set aside.
3. **IMPORTANT: Fully recline handle.**
4. Locate the belt access door and insert the flat end of a screwdriver into the slots on the belt access door to remove.
5. Flip the unit on its side and use a Phillips head screwdriver to remove the screw on the red belt cover and set screw and cover aside.
6. Remove the screw from the white pivot arm connector and set screw and connector aside.
7. Remove the black pivot arm and brush belt. If worn or damaged, replace with a new brush belt.
8. Remove pump belt and replace with a new belt by attaching to larger red pulley and then to the silver motor shaft.

NOTE: Spinning the red pulley a few times will help center belt and ensure correct assembly.

9. Reattach brush belt by installing onto toothed pump pulley and then onto toothed end of brush.
10. Reattach pivot arm, white pivot arm connector and screw.
11. Reattach red belt cover and screw.

NOTE: Do not over tighten screws.

12. Reattach belt access door.
- If you have any questions or are having trouble removing, replacing or reinstalling your pump belt, please call BISSELL Consumer Care.

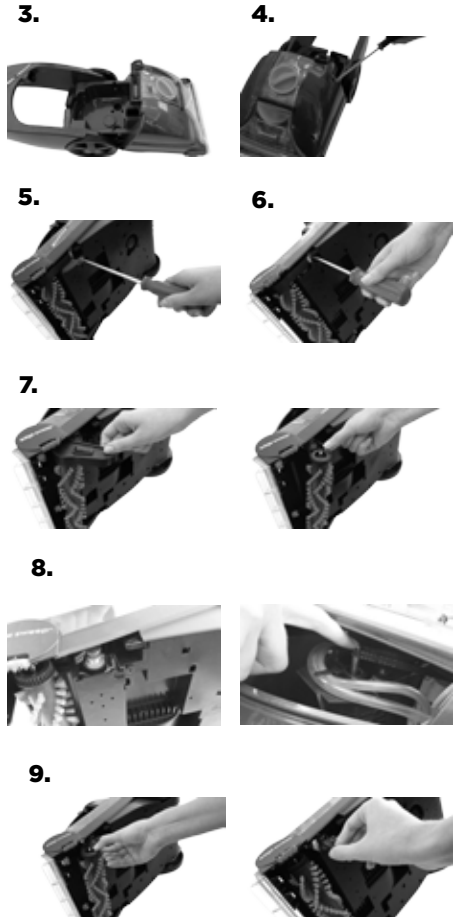

Troubleshooting

⚠️ WARNING

To reduce the risk of electric shock, push power button ① off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

Problem	Possible causes	Remedies
Heat indicator light does not illuminate	The heater switch is not turned on.	Turn on the heater switch located on side of unit.
	The machine power switch is not turned on.	Both switches must be on to activate the heat indicator light.
Reduced spray OR no spray	Bladder may be empty.	Turn power switch off; refill bladder with clean hand hot tap water and formula.
	2-in-1 water tank may not be seated properly.	Turn power switch off; remove tank and reseal.
	Pump may have lost prime.	Turn power switch off; after 1 minute turn on and depress spray trigger.
	Pump belt may be broken.	Press power pedal ① off and unplug from outlet. Follow pump belt removal & replacement instructions on page 15.
DirtLifter PowerBrush does not turn	The brush belt or pump belt is off or broken.	Press power pedal ① and unplug from outlet. Follow brush and pump belt removal & replacement instructions on pages 14 and 15.
Cleaner not picking up solution	ReadyTools dial may be on the wrong setting for the cleaning job.	Set ReadyTools dial to either FLOOR CLEANING or TOOLS.
	Poor tool position. (Hand held attachments only).	Adjust angle; apply more downward pressure.
	Removable nozzle may not be properly attached.	Make sure nozzle is on correctly by slightly raising front of machine to line up slots on the base of the machine with the hooks on nozzle. Attach at base first and then click nozzle into place. Refer to image 5 on page 9.
	2-in-1 water tank lid is not properly installed.	Re-install lid; refer to image 5 on page 8.
	2-in-1 water tank is not properly seated.	2-in-1 water tank must be firmly seated to function; remove and reseal 2-in-1 water tank.
	2-in-1 water tank has picked up maximum dirty water.	Empty 2-in-1 water tank and refill, refer to the Operation section.
	The lint screen may be clogged.	Clean out lint screen. Refer to page 9.







Please do not return this product to the store.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

Replacement Parts

These items are available for your BISSELL deep cleaner.
Visit www.BISSELL.com

PART #	PART NAME		PART #	PART NAME	
203-0104	Tank Assembly Complete		203-0102	Tank Base	
203-0124	Removable Nozzle		215-0628	Replacement Pump Belt (with instructions)	
015-0621	Replacement Brush Belt (with instructions)		203-0105	Lint Screen	

*Not all parts are included with every model.

Accessories

These items are available for your BISSELL deep cleaner.
Visit www.BISSELL.com

PART #	PART NAME		PART #	PART NAME	
203-0149	Hard Floor Tool		203-6651	3" Tough Stain Tool	
203-6653	4" Upholstery Tool		203-6654	6" Stair Tool	
203-6652	Powered TurboBrush™ Hand Tool		203-0116	Spraying 2-in-1 Crevice Tool w/Brush	
203-6655	Spraying Crevice Tool		203-8113	Deep Reach™ Tool	
210-3040	Mesh Tool Storage Bag				

*Not all parts are included with every model.

Cleaning Formula: Refer to bottom of page 5 of this guide for a full selection of cleaning formula available for purchase.



Notes

Notes

Consumer Guarantee

This Guarantee only applies outside of the USA and Canada. It is provided by BISSELL International Trading Company BV ("BISSELL").

This Guarantee is provided by BISSELL. It gives you specific rights. It is offered as an additional benefit to your rights under law. You also have other rights under law which may vary from country to country. You can find out about your legal rights and remedies by contacting your local consumer advice service. Nothing in this Guarantee will replace or lessen any of your legal rights or remedies. If you need additional instruction regarding this Guarantee or have questions regarding what it may cover, please contact BISSELL Consumer Care or contact your local distributor. This Guarantee is given to the original purchaser of the product from new and is not transferable. You must be able to evidence the date of purchase in order to claim under this Guarantee.

Limited Two-Year Guarantee

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, BISSELL will for two years from the date of purchase by the original purchaser repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge, any defective or malfunctioning part or product. BISSELL recommends that the original packaging and evidence of the date of purchase be kept for the duration of the Guarantee period in case the need arises within the period to claim on the Guarantee. Keeping the original packaging will assist with any necessary re-packaging and transportation but is not a condition of the Guarantee.

If for your product is replaced by BISSELL under this Guarantee, the new item will benefit from the remainder of the term of this Guarantee (calculated from the date of the original purchase). The period of this Guarantee shall not be extended whether or not your product is repaired or replaced.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE GUARANTEE

This Guarantee applies to products used for personal domestic use and not commercial or hire purposes. Consumable components such as filters, belts and mop pads, which must be replaced or serviced by the user from time to time, are not covered by this Guarantee.

This Guarantee does not apply to any defect arising from fair wear and tear. Damage or malfunction caused by the user or any third party whether as a result of accident, negligence, abuse, neglect, or any other use not in accordance with the User Guide is not covered by this Guarantee.

An unauthorised repair (or attempted repair) will void this Guarantee whether or not damage has been caused by that repair/attempt. Removing or tampering with the Product Rating Label on the product or rendering it illegible will void this Guarantee.

SAVE AS SET OUT BELOW BISSELL AND ITS DISTRIBUTORS ARE NOT LIABLE FOR ANY LOSS OR DAMAGE THAT IS NOT FORESEEABLE OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT INCLUDING WITHOUT LIMITATION LOSS OF PROFIT, LOSS OF BUSINESS, BUSINESS INTERRUPTION, LOSS OF OPPORTUNITY, DISTRESS, INCONVENIENCE OR DISAPPOINTMENT. SAVE AS SET OUT BELOW BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

BISSELL DOES NOT EXCLUDE OR LIMIT IN ANY WAY ITS LIABILITY FOR (A) DEATH OR PERSONAL INJURY CAUSED BY OUR NEGLIGENCE OR THE NEGLIGENCE OF OUR EMPLOYEES, AGENTS OR SUBCONTRACTORS; (B) FRAUD OR FRAUDULENT MISREPRESENTATION; (C) OR FOR ANY OTHER MATTER WHICH CANNOT BE EXCLUDED OR LIMITED UNDER LAW.

FOR AUSTRALIAN CONSUMERS ONLY:

OUR GOODS COME WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER THE AUSTRALIAN CONSUMER LAW. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAILURE AND FOR COMPENSATION FOR ANY OTHER REASONABLY FORESEEABLE LOSS OR DAMAGE. YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE.

THIS GUARANTEE IS IN ADDITION TO OTHER RIGHTS OR REMEDIES UNDER LAW. NOTHING IN THIS GUARANTEE EXCLUDES, LIMITS OR MODIFIES ANY LIABILITY OF BISSELL WHICH IS IMPOSED BY LAW, OR LIMITS OR MODIFIES ANY REMEDY AVAILABLE TO THE CONSUMER WHICH IS GRANTED BY LAW. TO MAKE A CLAIM UNDER THIS GUARANTEE CONTACT BISSELL AUSTRALIA PTY LTD (DETAILS ABOVE). CONTACT BISSELL PRIOR TO RETURNING ANY GOODS. WHERE AGREED, BISSELL WILL REIMBURSE REASONABLE POSTAGE / HANDLING COSTS (IF ANY) FOR RETURNING GOODS TO BISSELL.

Consumer Care

If your BISSELL product should require service or to claim under our Limited Two-Year Guarantee, please visit:

Website or E-mail:

www.BISSELL.com

For Australian inquiries:

Monday - Friday 9am - 5pm

BISSELL AUSTRALIA PTY LIMITED

42 Rocco Dr.
Scoresby 3179

Victoria
Australia
Telephone: 1-800-811-183

For New Zealand inquiries:

Monday - Friday 9 am - 5 pm

Parex Industries Ltd.

5 Tolich Place
Henderson 0610
Auckland
New Zealand
Telephone: 0800-247-735

Replacement parts and accessories are available for purchase. To purchase visit www.BISSELL.com

Visit the BISSELL website: www.BISSELL.com

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____ Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of the date of purchase in the event of a Guarantee claim. See Guarantee for details.



©2014 BISSELL Homecare, Inc
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 160-5275 Rev 09/14
Visit our website at: www.BISSELL.com
Scotchgard is a trademark of 3M