

SPOTCLEAN AUTO USER GUIDE

4720 SERIES

A**B**

1. A hand is shown lifting the lid of the water tank.
2. The power cord is being inserted into the back of the machine.
3. A hand is shown pouring cleaning solution into the tank.
4. A hand is shown closing the lid of the water tank.

C

- 1a. A hand is shown attaching the motor housing to the back of the machine.
- 1b. A hand is shown attaching the motor housing to the back of the machine.
3. A hand is shown attaching the motor housing to the back of the machine.
4. A hand is shown attaching the motor housing to the back of the machine.

D

2g.



 
Thanks for buying a BISSELL portable spot cleaner

We're glad you purchased a BISSELL portable spot cleaner. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL portable spot cleaner is well made, and we back it with a limited two-year guarantee. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.





My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high-quality homecare products like your BISSELL portable spot cleaner.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman & CEO

Symbol Definitions

	WARNING	RISK OF FIRE, ELECTRIC SHOCK, OR INJURY
	TIP	NOTE OR HINT WHICH IS NOT ESSENTIAL BUT MAY IMPROVE USABILITY
	GUIDE	READ USER GUIDE FOR COMPLETE SAFETY AND USER INSTRUCTIONS
	WEEE	DO NOT THROW THE APPLIANCE AWAY WITH THE NORMAL HOUSEHOLD WASTE AT THE END OF ITS LIFE, BUT HAND IT IN AT AN OFFICIAL COLLECTION POINT FOR RECYCLING. BY DOING THIS YOU WILL HELP TO PRESERVE THE ENVIRONMENT.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR CLEANER.

When using an electrical appliance, basic precautions should be observed, including the following.



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Unplug from electrical socket when not in use and before cleaning, maintaining or servicing the appliance.
- » This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- » Children should be supervised to ensure that they do not play with the appliance.
- » If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.» Do not run appliance over cord.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- » Use only the type and amount of liquids specified under the Operations section of this guide.
 - » Do not leave appliance when plugged in.
 - » Always connect to a properly earthed electrical socket. Do not modify earthed plug.
 - » Do not expose to rain. Store indoors.
 - » Do not allow to be used as a toy.
 - » Use only as described in the user guide.

- » Use only manufacturer's recommended attachments.
- » Do not use with damaged cord or plug.
- » Do not immerse in water or liquid.
- » If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- » Liquid or steam must not be directed towards equipment containing electrical components.
- » Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners.
- » Keep cord away from heated surfaces.
- » Do not unplug by pulling on cord.
- » To unplug, grasp the plug, not the cord.
- » Do not handle plug or appliance with wet hands.
- » Do not put any object into openings.
- » Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- » Turn off all controls before unplugging.
- » Use extra care when cleaning on stairs.
- » Do not use to pick up flammable or combustible liquids, such as petrol, or use in areas where they may be present.
- » Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.)
- » Do not use appliance in an enclosed space filled with vapors given off by oil base paint, some mothproofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- » Keep appliance on a level surface.
- » Unplug before attaching the TurboBrush™ tool.



WARNING

DO NOT EXPOSE TO RAIN. STORE INDOORS. USE ONLY BISSELL CLEANING PRODUCTS INTENDED FOR USE WITH THIS MACHINE.



WARNING

TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, ALWAYS INSTALL FLOAT BEFORE ANY WET PICK-UP OPERATION.

SAVE THESE INSTRUCTIONS

FOR OPERATION ON A 220-240 VOLT A.C. 50/60 HZ POWER SUPPLY ONLY.

This model is for household use only.

A Product View



Do not plug in your cleaner until you have completely assembled it per the following instructions and are familiar with all instructions and operating procedures.

- | | |
|---|--|
| 1 Clean Water/Formula Tank | 10 Secondary Tool Storage Clip |
| 2 Power Button | 11 Hose Grip |
| 3 Dirty Water Tank | 12 BISSELL SPOTCLEAN BOOST Oxygen Boost Formula |
| 4 Hose Clip | 13 BISSELL 2X SPOTCLEAN Spot & Stain Formula |
| 5 Float Stack | 14 BISSELL 2X SPOTCLEAN PET Pet Stain & Odor Formula |
| 6 Flexible Hose | |
| 7 Power Cable | |
| 8 Quick Release™ Cable Wrap | |
| 9 Small Tough Stain Tool
(Tools may vary by model) | |



To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning formulas intended for use with the portable spot cleaner.



Keep spray away from face. Failure to do so may result in personal injury.

B Assembly

1. Slide hose clip into opening on front of machine. You will hear a “snap” when it is locked into place.
2. Snap hose grip bracket into back of machine on clean tank side. Wrap hose around the unit and snap hose grip into bracket. Attach preferred tool to end of hose grip.
3. Snap secondary tool storage clip into back of machine between cord wrap and hose grip bracket. Place preferred tool onto storage clip.
4. Attach cable wrap by snapping it into place on dirty tank side of machine. Wrap power cable around cable wrap.

Cleaning Formula

Always use genuine BISSELL deep cleaning formulas for portable spot cleaners. Non-BISSELL cleaning formulas may harm the machine and will void the guarantee.



Use only BISSELL portable/compact machine formula in your cleaner. Use of cleaning formulas which contain lemon or pine oil may damage this appliance and void the guarantee. Chemical spot cleaners or solvent-based soil removers also should not be used. These products may react with the plastic materials used in your cleaner, causing cracking or pitting.

Getting ready

1. To fill clean water/formula tank
 - a. Remove tank by lifting it straight up and away from unit.
 - b. Pull on black tab to reveal tank opening. The plug rotates out of the way for easy filling.
 - c. Your tank is marked for a large stain or a small stain. Based on your cleaning need, fill with hot tap water to the water fill line. Add Oxygen Boost formula to the OXYgen Boost fill line. Add BISSELL 2X formula to formula fill line. **DO NOT BOIL OR MICROWAVE WATER.**
 - d. Replace plug by rotating into place and pressing gently onto tank.
 - e. Replace tank by lining up tank bottom with indentations on machine. Press down firmly on tank to secure in position.
2. Release hose from hose grip bracket. Unwrap hose completely from around unit.
3. Insert desired tool on end of hose until it clicks into place.
4. Twist the Quick Release™ cable wrap clockwise to unwrap power cable completely.

Pre-treat

Cleaning effectiveness will be enhanced if you pre-treat heavily stained or highly soiled areas. Here's how to do it.

1. Hold cleaning tool just above surface of carpet or upholstery to be cleaned. Press spray trigger to release a spray of cleaning solution directly onto stained or soiled area.
2. Wait 3-5 minutes before cleaning.

Cleaning with your spot cleaner

1. Plug unit in and turn on by pressing power button under handle.
2. Hold cleaning tool approximately 2.5cm above soiled surface. Press spray trigger to apply cleaning solution to soiled area.
3. Using brush on cleaning tool, gently scrub area to be cleaned.
4. For thorough cleaning, spray additional solution while brush and suction are in contact with surface.
5. Apply downward pressure on cleaning tool and pull it toward you. The suction will remove the dirt and cleaning solution. Continue until no more dirt can be removed.
6. As a final step, use "drying strokes" (by not pressing the spray trigger) to remove as much liquid/moisture as possible. Repeat this step as often as necessary.
7. When using Oxygen Boost formula, it will continue to work for the next six to eight hours cleaning your spots and stains all the way to the backing of the carpet & upholstery.

D Care & Storage

Machine care

1. Unplug power cable from electrical socket.
2. Empty and rinse dirty water tank after each use, OR when dirty water reaches indicated maximum fill line.
 - a. Lift tank up and away from base of machine.
 - b. Pull tab to remove plug from tank
 - c. Rinse out tank with clean water after emptying.
 - d. Disconnect cleaning tool from hose grip by pushing down on button lock and pulling straight off. (Do NOT twist cleaning tool to remove it).
 - e. Rinse all cleaning tools used with clean water.
 - f. Check spray nozzle for accumulated dirt or debris. If necessary, clean with soft bristle brush.
 - g. The float stack can be removed from inside dirty water tank for cleaning. Turn locking assembly anti-clockwise to unlock position and pull down and out of tank to remove. Rinse with clean water until all debris is removed. Replace float stack back inside dirty water tank and turn locking assembly clockwise to lock position.

Machine storage

Water and cleaning formula can be left in clean water tank for next use.

1. Wrap power cable around cable wrap on back of machine.
2. Wrap hose around the base of unit and secure the hose grip.
3. Store unit in protected, dry area, at room temperature (4° to 43°C).



To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical socket before performing maintenance or care.



To reduce the risk of electric shock, always install float stack before any wet pick-up operation.

Consumer Guarantee

This Guarantee only applies outside of the USA and Canada. It is provided by BISSELL International Trading Company BV ("BISSELL").

This Guarantee is provided by BISSELL. It gives you specific rights. It is offered as an additional benefit to your rights under law. You also have other rights under law which may vary from country to country. You can find out about your legal rights and remedies by contacting your local consumer advice service. Nothing in this Guarantee will replace or lessen any of your legal rights or remedies. If you need additional instruction regarding this Guarantee or have questions regarding what it may cover, please contact BISSELL Consumer Care or contact your local distributor. This Guarantee is given to the original purchaser of the product from new and is not transferable. You must be able to evidence the date of purchase in order to claim under this Guarantee.

Limited Two-Year Guarantee

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, BISSELL will for two years from the date of purchase by the original purchaser repair or replace (with new or remanufactured components or products), at BISSELL'S option, free of charge, any defective or malfunctioning part or product. BISSELL recommends that the original packaging and evidence of the date of purchase be kept for the duration of the Guarantee period in case the need arises within the period to claim on the Guarantee. Keeping the original packaging will assist with any necessary re-packaging and transportation but is not a condition of the Guarantee.

If for your product is replaced by BISSELL under this Guarantee, the new item will benefit from the remainder of the term of this Guarantee (calculated from the date of the original purchase). The period of this Guarantee shall not be extended whether or not your product is repaired or replaced.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE GUARANTEE

This Guarantee applies to products used for personal domestic use and not commercial or hire purposes. Consumable components such as filters, belts and mop pads, which must be replaced or serviced by the user from time to time, are not covered by this Guarantee.

This Guarantee does not apply to any defect arising from fair wear and tear. Damage or malfunction caused by the user or any third party whether as a result of accident, negligence, abuse, neglect, or any other use not in accordance with the User Guide is not covered by this Guarantee.

An unauthorised repair (or attempted repair) will void this Guarantee whether or not damage has been caused by that repair/attempt. Removing or tampering with the Product Rating Label on the product or rendering it illegible will void this Guarantee.

SAVE AS SET OUT BELOW BISSELL AND ITS DISTRIBUTORS ARE NOT LIABLE FOR ANY LOSS OR DAMAGE THAT IS NOT FORESEEABLE OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT INCLUDING WITHOUT LIMITATION LOSS OF PROFIT, LOSS OF BUSINESS, BUSINESS INTERRUPTION, LOSS OF OPPORTUNITY, DISTRESS, INCONVENIENCE OR DISAPPOINTMENT. SAVE AS SET OUT BELOW BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

BISSELL DOES NOT EXCLUDE OR LIMIT IN ANY WAY ITS LIABILITY FOR (A) DEATH OR PERSONAL INJURY CAUSED BY OUR NEGLIGENCE OR THE NEGLIGENCE OF OUR EMPLOYEES, AGENTS OR SUBCONTRACTORS; (B) FRAUD OR FRAUDULENT MISREPRESENTATION; (C) OR FOR ANY OTHER MATTER WHICH CANNOT BE EXCLUDED OR LIMITED UNDER LAW.

FOR AUSTRALIAN CONSUMERS ONLY:

OUR GOODS COME WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER THE AUSTRALIAN CONSUMER LAW. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAILURE AND FOR COMPENSATION FOR ANY OTHER REASONABLY FORESEEABLE LOSS OR DAMAGE. YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE.

THIS GUARANTEE IS IN ADDITION TO OTHER RIGHTS OR REMEDIES UNDER LAW. NOTHING IN THIS GUARANTEE EXCLUDES, LIMITS OR MODIFIES ANY LIABILITY OF BISSELL WHICH IS IMPOSED BY LAW, OR LIMITS OR MODIFIES ANY REMEDY AVAILABLE TO THE CONSUMER WHICH IS GRANTED BY LAW. TO MAKE A CLAIM UNDER THIS GUARANTEE CONTACT BISSELL AUSTRALIA PTY LTD (DETAILS ABOVE). CONTACT BISSELL PRIOR TO RETURNING ANY GOODS. WHERE AGREED, BISSELL WILL REIMBURSE REASONABLE POSTAGE/HANDLING COSTS (IF ANY) FOR RETURNING GOODS TO BISSELL.

Consumer Care

If your BISSELL product should require service or to claim under our Limited Two-Year Guarantee, please visit:

Website or E-mail:

www.BISSELL.com

BISSELL AUSTRALIA PTY LIMITED

42 Rocco Dr.
Scoresby 3179
Victoria
Australia

For Australian inquiries:

Monday - Friday 9am - 5pm
Telephone: 1-800-811-183

For New Zealand inquiries:

Monday - Friday 9 am - 5 pm
Telephone: 0-800-247-735

Replacement parts and accessories are available for purchase. To purchase visit www.BISSELL.com

Visit the BISSELL website: www.BISSELL.com

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____ Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of the date of purchase in the event of a Guarantee claim. See Guarantee for details.



©2015 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 160-7106 Rev 06/15
Visit our website at: www.BISSELL.com