


My ICON™ Cordless Vacuum is loud | Support

- If the brush roll is bound by debris or the filters are dirty or missing it could cause the machine to be loud

To check the brush roll:

- Turn machine off and remove the foot assembly
- Press the release button at the bottom of the extension wand

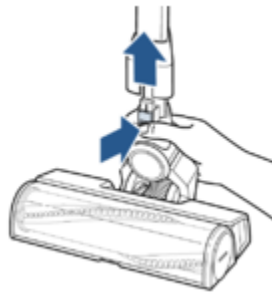

- Remove the brush by unlocking the end using a coin or flat head screwdriver
- Pull brush out - remove all debris from brush and end caps



- Inspect brush, if damaged it should be replaced
- Clear all debris from brush area as well as the suction channel
- You should be able to see through the opening (where the extension wand attaches) into the brush area
- If not, clear channel of all debris
- When all is clear of debris slide brush roll back into place
- Pushing down while turning, using a coin or flat headed screwdriver to lock brush into place
- If the brush roll is not locked securely the brush will not turn


To check the filters:

- Remove the dirt tank

- Grip the top portion of tank and pull up to remove & clean the separator (the bottom ring of the separator will activate to "wipe" debris from screen & deposit into tank)



- Pull the filter frame from the top of the separator to remove & clean the pre motor filter
- Pre motor filter can be rinsed in warm water, allow to completely air dry (24 - 48 hours) before reinstalling

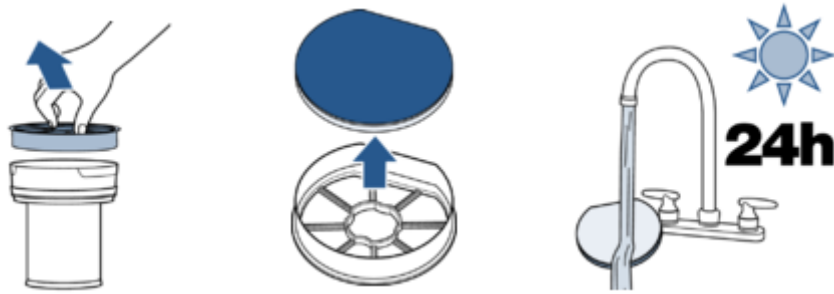

- The tag on the filter should be inserted 1st when returning filter to filter frame
- Insert filter & filter frame into separator
- Put separator into tank
- The post motor should also be cleaned regularly
 - Press the latch on the back of the hand vac to locate the filter
 - Pull filter out to clear of debris
- This filter can be rinsed in warm water, allow to completely air dry (24 - 48 hours) before reinstalling



- Vacuum should not be used without all filters in place
If the machine continues to be loud, please [Contact Us](#)