



WALL LIGHT

 
Product Manual

MODEL: BDB55D-3

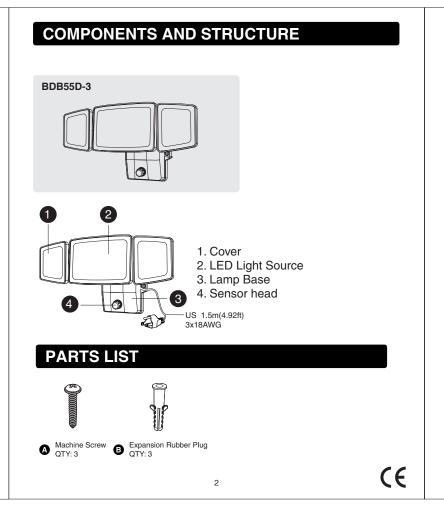

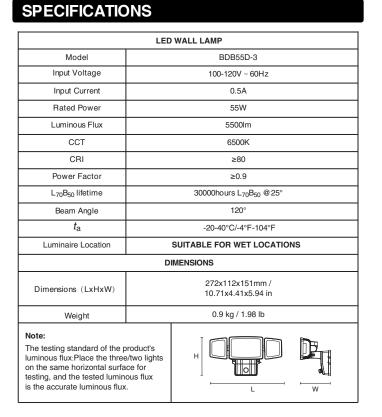

OPERATION INSTRUCTIONS




1. Touch key

Before installing the light, Try to unscrew the transparent cover on the light sensor. You can touch the light sensor by hand to change the light mode.

1. Switch Controlled mode: The light keeps working all day. There is a the weak red light staying

2. Dusk to Dawn mode: The light will automatically turn on at night and stay off during the daytime. The light was defaulted on SUNSET mode (which means the light will be on at 20-40LUX) Note: When switching to dusk to dawn mode, the light will work after a one-minute delay

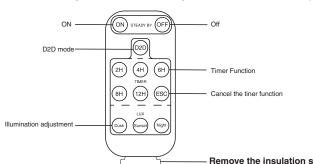

2. Remote control function

NOTE: The light is with a memory function. If the light is NOT turned on by the remote controller (such as turned on the light by the switch at home), it will stay at your last setting mode (such as DUSK to DAWN mode).

If the light is turned on by pressing 'ON' button on the remote control. The light will be SWITCH CONTROLLED mode, which means the light will stay on all day.

before using the remote control

OPERATION INSTRUCTIONS

ON button: Light is turned on, and light will stay on all day. Light will not enter DUSK to DAWN

Off button: Light is turned off D2D mode

1. Press 'D2D' button, the light will flicker one time, then enter the DUSK to DAWN mode, the default mode is the SUNSET mode, without timing function

2. Timer Function

When pressing the 2H button, the light will flicker one time, and the light will automatically turn off

When pressing the 4H button, the light will flicker one time, and the light will automatically turn off

When pressing the 6H button, the light will flicker one time, and the light will automatically turn off after 6 hours; When pressing the 8H button, the light will flicker one time, and the light will automatically turn off

When pressing the 12H button, the light will flicker one time, and the light will automatically turn off after 12 hours;

The timer function automatically work every day after pressing 2H/4H/6H/8H/12H button. It means that the light will turns off after it staying on 2/4/6/8/12 hours every day. no need to

repeatedly set the timing function unless you want to change the timer. Note: Under SWITCH CONTROLLED mode, there is no timing function.

REPLACE THE BATTERIES

3. Cancel the tiner function:

Press the 'ESC' button, and the light will flicker three times, indicating the cancellation of the timer

4. Illumination adjustment:

Press the Dusk button, and the light will flicker one time: it will automatically light up at dusk

Press the Sunset button, and the light will flicker one time: it will automatically light up in the sunset (20-40LUX) every day; Press the Night button, the light will flicker one time: it will automatically light up in the night

(3-10LUX)every day;" Note: Under Dusk to Dawn mode, when the brightness of the external environment reaches more

 
than 100lux, the light will be off. (the light will be turned off after a one-minute delay)

PREPARATION

Check all components for damage, do not use the product if it is damaged.

Estimated Assembly Time: 10-30 minutes

TOOLS REQUIRED (not included)











WARNING:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. RISK OF SHOCK - BEFORE BEGINNING INSTALLATION, TURN OFF ELECTRICITY AT THE CIRCUIT BREAKER BOX OR THE MAIN FUSE BOX.

PREPARATION


CAUTION:


PLEASE MAKE SURE YOUR WALL SWITCH AND POWER AT MAIN CIRCUIT BREAKER BOTH ARE OFF.

IF IN DOUBT ABOUT ELECTRICAL INSTALLATION, CONSULT A LICENSED ELECTRICIAN.

WARNING: INSTALLING THIS LIGHT IN AN UNGROUNDED **ELECTRICAL SYSTEM MAY CAUSE THE METAL PARTS OF** THE LIGHT TO CARRY CURRENT IF ANY WIRES OR WIRE CONNECTIONS ARE DAMAGED OR LOOSE. IN THIS CASE, ANYONE WHO TOUCHES THE LIGHT WILL RECEIVE AN ELECTRIC SHOCK. RESULTING IN INJURY OR DEATH.

BE CAREFUL NOT TO DAMAGE OR CUT THE WIRE INSULATION (COVERING) DURING INSTALLATION. DO NOT LET THE WIRES TOUCH ANY SHARP EDGES.

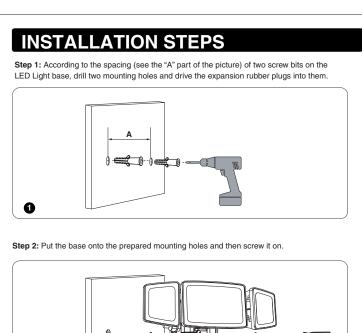

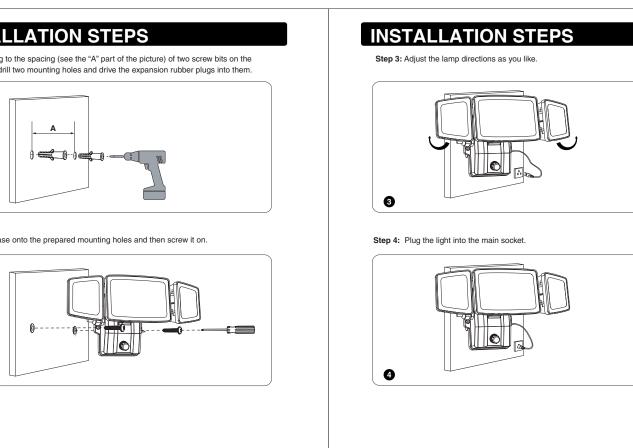

TROUBLESHOOTING Malfunction Cause Remedy LED senses a The light is not energized Check power-on status Turn off the nearby lights or sensor head to other direction Other surrounding light sources make the light loes not light up misjudge it as daytime LED sensor light The shadows around the Do not cover the sensor head nink it's night the day LED sensor light Surrounded by other unstable 1. Avoid being exposed to such light sources light sources shining onto the 2. Follow the instructions in . The light from the lamp itself "LED DUSK TO DAWN WALL LIGHT - Matters Needing Attention" to readjust the light sensor

Replace the batteries of the remote control by referring to the figure on the right.

FCC Warning:

((

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device.

pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off

and on, the user is encouraged to try to correct the interference by one or more of the following

-Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is

-Consult the dealer or an experienced radio/TV technician for help This equipment complies with FCC radiation exposure limits set forth for an uncontrolled

environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

HK JW Illumination Co., Limited Unit 616, 6/F., Kam Teem Industrial Building, 135 Connaught Road West, Sai Wan Hong Kong Manufacturer/Hersteller: MDH LIGHTING LTD Suite 302, 292 Strovolos Avenue, 2048 Strovolos Nicosia,

UK Importer: MDH LIGHTING LTD 69 Aberdeen Avenue, Cambridge CB2 8DL, United Kingdom

Made in China

UK CE

 ϵ

2

(€

 ϵ

 ϵ