
Olafus[®]

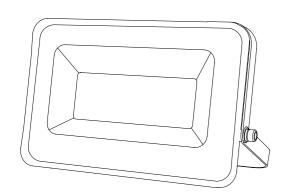

LED FLOOD LIGHT


Product Manual

MODEL: □ LAA50G □ G100


☐ LAA150G ☐ LAA200G


COMPONENTS AND STRUCTURE



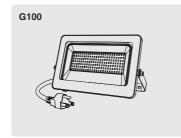



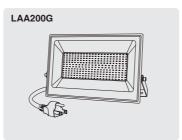

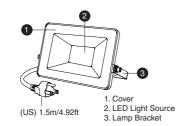

SPECIFICATIONS

Model	LAA50G	G100	LAA150G	LAA200G
Input Voltage	100-120V~60Hz			
Input Current	0.43A	0.83A	1.22A	1.65A
Rated Power	50W	100W	150W	200W
Luminous Flux	4200lm	9000lm	13000lm	18000lm
CCT	6500K			
CRI	≥80			
Power Factor	≥0.9			
L70B50 lifetime	30000hours L70B50 @25°			
Beam Angle	120°			
ta	-20-40°C/-4°F-104°F			
Luminaire Location	SUITABLE FOR WET LOCATIONS			
•	DIN	IENSIONS		
Model	LAA50G		G100	
Dimensions (LxHxW)	230x138x35mm / 9.06inx5.47x1.38in		289x39x185 mm/ 11.38x1.54x7.28in	
Weight	0.64 KG / 1.41 lb		1.235 kg / 2.72 lb	
Model	LAA150G		LAA200G	
Dimensions (LxHxW)	334x44x197 mm/ 13.15x1.73x7.76in		376x45x251 mm/ 14.8x1.77x9.88 in	
Weight	1.715 kg / 3.78 lb		2.42kg / 5.34 lb	
	Н			

PREPARATION

Check all components for damage, do not use the product if it is damaged.

Estimated Assembly Time:10-30 minutes

TOOLS REQUIRED (not included)









WARNING:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. RISK OF SHOCK- BEFORE BEGINNING INSTALLATION, TURN OFF ELECTRICITY AT THE CIRCUIT BREAKER BOX OR THE MAIN FUSE BOX.

 ϵ

PREPARATION

CAUTION:

PLEASE MAKE SURE YOUR WALL SWITCH AND POWER AT MAIN CIRCUIT BREAKER BOTH ARE OFF.

IF IN DOUBT ABOUT ELECTRICAL INSTALLATION, CONSULT A LICENSED ELECTRICIAN.

WARNING: INSTALLING THIS LIGHT IN AN UNGROUNDED ELECTRICAL SYSTEM MAY CAUSE THE METAL PARTS OF THE LIGHT TO CARRY CURRENT IF ANY WIRES OR WIRE CONNECTIONS ARE DAMAGED OR LOOSE. IN THIS CASE, ANYONE WHO TOUCHES THE LIGHT WILL RECEIVE AN ELECTRIC SHOCK, RESULTING IN INJURY OR DEATH.

BE CAREFUL NOT TO DAMAGE OR CUT THE WIRE INSULATION (COVERING) DURING INSTALLATION. DO NOT LET THE WIRES TOUCH ANY SHARP EDGES.

INSTALLATION STEPS



Step 1: According to the spacing (see the "A" part of the picture) of two screw bits on the LED Light bracket, drill two mounting holes.

Step 2: Put the bracket onto the prepared mounting holes and then screw it on.

Step 3: Adjust the beam direction as you like, Wiring.

Step 4: Adjust the beam direction as you like, and then plug into the main socket.

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

This device complies with part 15 of the FCC Rules, Operation is subject to the following two

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is

-Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Shen Zhen Shi Zhi Hui Duo Ke Ji You Xian Gong Si qian wan yi lu 1 hao A dong 201 shi, qian hai shen gang he zuo qu, shen zhen, guang dong, 518000, CN support@olafuslife.com www.olafuslife.com

EU REP MDH LIGHTING LTD

Suite 302, 292 Strovolos Avenue, 2048 Strovolos Nicosia, Cyprus | support@olafuslife.com

UK REP MDH LIGHTING LTD 69 Aberdeen Avenue, Cambridge CB2 8DL, United Kingdom | support@olafuslife.com Made in China

RR C€ Z

 ϵ