

DOSS

Bluetooth
Home Speaker



Mode NO. :DOSS SoundBox XL
User Manual


Introduction

Thank you for purchasing DOSS SoundBox XL with Bluetooth function. We encourage you to read this instruction guide thoroughly to get most out of the innovative home speaker.


Package content

- Home speaker x 1
- Power adapter with power plug x 1
- Ø3.5mm audio cable x 1
- User manual x 1

Product overview

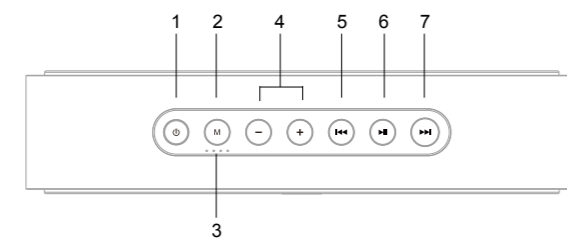

- 1.Power button** : long press to turn the device ON/OFF.
- 2.Mode switch**: Press the button to switch the mode.
- 3.LED lights** : From - indicates for Bluetooth mode,AUX in mode,TF card mode & battery status.
- 4.Volume control**
Press the button to decrease the volume.
Press the button to increase the volume.
- 5.Press the button** to track back.
- 6.Play/Pause** : press the button to stop playing and press again to continue.
- 7.Press the button** to track forward.

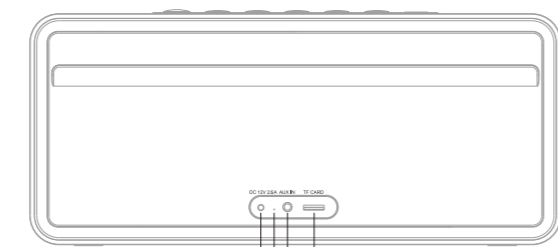

8.Power port: DC 12V 2.5A

9.LED charging light

Charging: steady red.

Fully charge: light off

10.AUX in: Use it for cable playback with compatible devices.

11.TF card: Use it for TF card (with music) playback. Support MP3,WAV,WMV songs,32G or smaller size cards are better, if not, please format that to FAT32.

Status indicators

Indicator lights on the top	Indicator	Description
Indicator lights on the top	① Flashing blue	The speaker has entered into the pairing mode and it is ready to be paired the first time
	① Steady blue	Indicates that the device is successfully paired
	② Steady red	Indicates that the mode switched to AUX in successfully
	③ Steady white	Indicates that the mode switched to TF card successfully
Battery indicator	④ Flashing red	Indicates that the power is low
	Steady red	Battery is charging
	Light off	Battery is fully charged



Scan the QR code or search 'DOSS fans' on Facebook to join our group. Share your experience and find more surprise!

DOSS

Wonders Technology Co.,Ltd
Email:Support@dossav.com
Follow us on Facebook:
<https://www.facebook.com/dossav>

Preparation

- 1.Use the DC 12V 2.5A power adapter to plug in to the charging port on the back of the speaker, make sure that the power supply is within the standard of 100V-240V.
- 2.Make sure that the speaker is fully charged before using it for the first time. It will take approximately 2-3 hours to recharge after that.
- 3.While charging, the LED is glows red. When the battery has fully charge, the red LED will turn off.
- 4.To turn ON/OFF the speaker press the power button for 2 seconds.

Pairing the wireless speaker with your smart device

- 1.Place your smart device and speaker no more than one meter away from each other.
- 2.Press the power button for 2 seconds to turn it on.
- 3.Set your smart device to "discover" the speaker. Upon powering on , a tone will be heard and the blue LED will start flashing, accompany by a prompt notify the speaker has entered into the pairing mode.
- 4.Enable Bluetooth on your device and choose DOSS SoundBox XL from the list.
- 5.If pairing is successful, the LED will change to a steady blue and your device will confirm that the connection has been established. If the pairing process has failed after 60 seconds, please repeat steps 1 through 5 again.

Troubleshooting

	Problem	Solution
Bluetooth	Cannot Pair with Bluetooth devices	Press Play/Pause button for 5 seconds, then try to pair it again
	Cannot play music after pairing	Please select 'DOSS SoundBox XL' as the default playback device
	Cuts off during playback	Maybe cause by the charging interference , place in a different location and do not charge it during playback
	Laptop prompts to install driver	Make sure your device has Bluetooth, or check if device setting are correct
TF Card	Not pair with transmitter	Please press the Play/Pause button for 3 seconds or contact device manufacture for help
	The speaker do not play when the card is inserted,and jumps directly back to Bluetooth mode	Check whether the card format is FAT or FAT32. If not, format it to FAT or FAT32. Check the song format. The speaker only supports MP3, WAV, WMV
Other	The song cuts off during playback	There may be a problem with the song's format ,try deleting all the songs in the same format
	Cannot turn off the speaker	Use the needle or wire to poke the reset button inside Auxin Port
	Customer Service Email	support@dossav.com

Product specifications

Product Type: Home speaker
Unit dimension: 11.8x2.64x5.2 inch
Unit weight: 3.46lbs
Output power: 2 x 10 W | 12 W Subwoofer
Driver unit: 2.0 inch speaker x2 + 1.5 inch x3.5 inch passive radiator x 2
Frequency response: 40Hz-20kHz
Signal to noise ratio: ≥70db
Warranty: One-year limited

Power

Battery type: Li-ion 7.4V,2200mAh
Output power: 2 x 10W|12W Subwoofer

Power adapter(supplied)

Model : DYS624-120250W-1/K
Input : 100-240 V, 50/60 Hz, 0.8A MAX
Output : 12 V , 2500 mAh

Wireless/Networking

Bluetooth specification : 4.0+EDR
Supported Bluetooth profiles : A2DP AVRCP,SPP
Maximum operation range : 10 meters/33ft

Warning

- Do NOT drop, hit or shake the device.
- Do NOT disassemble, repair or modify the speaker by yourself.
- Do NOT use cleaning products that contain benzene, solvents or alcohol.
- Do NOT expose the speaker to excessive heat or direct sunlight for a long time.
- Do NOT store the device in a place with humidity or dust.
- Do NOT place heavy objects on top of the speaker.
- Do NOT use the speaker near a microwave oven or wireless LAN products.



Scan the QR code or search 'DOSS fans' on Facebook to join our group. Share your experience and find more surprise!

DOSS

Wonders Technology Co.,Ltd
Email:Support@dossav.com
Follow us on Facebook:
<https://www.facebook.com/dossav>