## **Device structure**



## **Operating instruction**

**Step1:** Press the ON button of device. Put the device in planar surface and then press zero button for zero setting.



Step2: The positioning pin protrudes the bottom of measuring rod at the initial state.



**Step3:** Insert the ferrule into bottom of measuring rod and push the positioning pin up, then screw the fixed button to keep positioning pin still.



**Step4:** After finishing the steps above, we can start to measure the ferrule length. Insert the ferule into bottom of measuring rod, then read the test value on screen.



**Step5:** Measuring finished and press the OFF button of device.