 




The MeatStick®

The Wireless Meat Thermometer



Thank you for choosing The MeatStick

If you need help, please contact support:
support@themeatstick.com

REV.18SEP20_PS861_en_US

 
    The MeatStick
#mymeatstick

FIRST TIME SETUP

1. Open your preferred mobile app store. Search and download "The MeatStick App". You can also find these instructions on the App.



2. Place stick on the charger, insert 2 new AA batteries, click the button to activate your charger. Please charge the stick for a minimum of **4 hours** before your first use.



The LED light will turn off after the stick is completely charged.
(AA batteries not included)

3. Press the button on the charger to activate the stick. Select the stick in the App and choose your desired cook.



4. You can NOW remove the stick from the charger and insert it completely into the meat, up to the ceramic handle. The stick should be in the thickest part, away from fat and bones.



5. You will get real-time data on your smartphone, the App will let you know when it's ready to eat.



Once your cook is ready, let your meat rest and carefully remove the stick from the meat. Be careful it might be hot!

6. After enjoying your meat, allow the stick to cool down, then clean it to look like new and replace on charger. It will auto turn off when not in use.



7. The stick will auto-charge while on the charger so it's ready to use for your next cook.

⚠ CAUTION ⚠



The stainless steel stick withstands up to 212°F/100°C and the ceramic handle withstands up to 572°F/300°C.

Exceeding the recommended temperatures may damage the stick.



If not within a heat source, the stick will turn off automatically after 30 minutes.



Position the stick completely into the meat. This allows the stick to withstand the high temperatures.



Cooks over direct heat may cause fire flare-ups that can instantly exceed 900°F/500°C. Please be aware and remove the stick to avoid damaging it.



In an open grill you can be up to 33ft/10m away from your stick. The range will be reduced to 6ft/2m or less in enclosed cooking setups (i.e. oven).



Do not use the stick in a microwave or pressure cooker.



The stick will be very hot after each use. Do not touch it with your bare hands.



The stick is dishwasher, sous-vide, and deep-fryer safe.

⚠ Do not soak in standing water when not in use.



Extend The MeatStick's range with the compatible The MeatStick X charger or The MeatStick WiFi Bridge.



All The MeatStick products are covered by a 1-year limited warranty. For more details: themeatstick.com/warranty



The MeatStick is modular, you can create the set that you want. Visit our website to add more sticks or add-ons to your collection!



Protect our planet by recycling paper & plastic packaging at designated facilities.

STICK & CHARGER

