## LTECH




Q

**Series** 

Remotes

Manual www.ltech-led.cn For: Q1/Q2/Q4/Q5

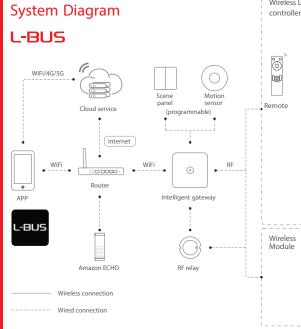

## LEDs Wireless knob panel(E610P-RF Wireless driver E series panel LEDs Wireless driver RF to phase-cut Triac LED drive LEDs 0-10V LED driver RF 0-10V LEDs DMX Module DMX LED driver

## **Product Introduction**

Q series remotes are 4-zone remotes with color changing and brightness dimming functions. Color and brightness can be displayed by indicator lights. Within the effective range, Q series remotes are capable of connecting unlimited wireless drivers and keeping the effects in sync. Remotes work with drivers F4-3A, F4-5A,F4-DMX-5A or F5-DMX-4A, also E series touch panels.

## **Technical Specs**

Remote Type: 4-zone control


Power Supply: 2 pack\*AAA battery

Wireless Type: RF 2.4GHz

Working Temp.: -20°C ~55°C

Package Size: L166×W47×H22(mm)

Weight(G.W.): 85g

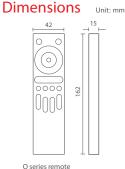


EX series panel

EXC series panel

Wireless knob panel(Ex61)

Wireless driver

Wireless driver

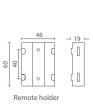



LEDs


LEDs

LEDs

## **Key Functions**

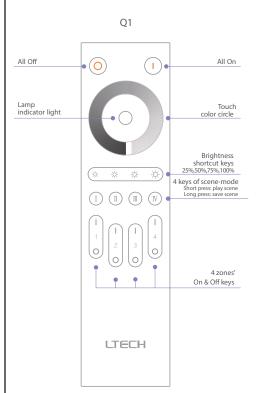

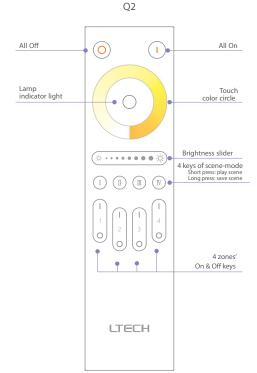

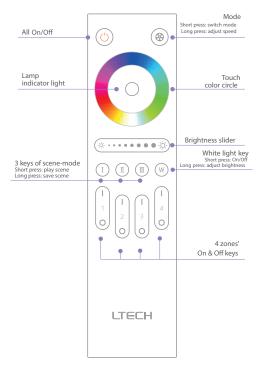


Q4

### Mode

- 1. Static red 4. Static yellow
- 2. Static green 5. Static purple
- 3. Static blue 6. Static cyan
- 10. RGB gradient
- 9. 7 Colors jumping
  - 12. Static black(only turn off RGB) 11.7 colors gradient



## **Key Functions**

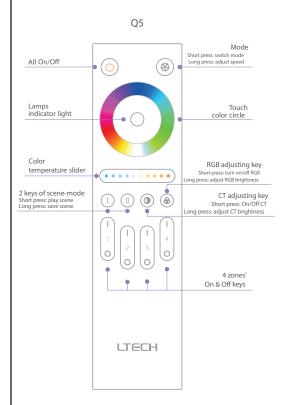

## Match Code

- 1. Q series remotes work with wireless drivers
- Q1/ Q2/Q4 remote works with F4-3A  $\,$  , F4-5A, F4-DMX-5A wireless drivers.
- Q5 remote works with F5-DMX-4A, EBOX-DMX wireless modules.

#### Method 1

1.1.1 Power off the wireless driver.



1.1.2 Hold down"ON" key on the remote for the pairing zone, and meanwhile power on the wireless drive  $\,$  r.



1.1.3 The lamp of wireless driver flashes several times and then stop flashing. You will hear a long beep as confirmation, then pair successfully.

#### Method 2

1.2.1 Short press "ID learning button" on the wireless driver and the lamp flashes, then please complete the next step within 15s.



1.2.2 Long press the "ON" key on the remote for the pairing zone.



1.2.3 The lamp of wireless driver stops flashing, then pair successfully.


- 2. Q series remotes work with panels
- Q1 remote works with E1/E1S/EX1/EX1S/EX5 panel;
- Q2 remote works with E2/EX2/EX panel;
- Q4 remote works with E3/E3S/E4/E4S/EX3/EX3S/EX4/EX4S/EX7/EX7S/EX8/EX8S panel;
- Q5 remote works with E5S panel.



2. 2 Long press the "ON" key on the remote for the pairing zone until the indicator light of the touch panel stops flashing ,then pair successfully.



- \* Please match/clear code when the touch panel is power-on (the indicator light is white).
- 3. Match code between remotes (Assuming that B pairs with A (1))
- 3.1 Short press the top two keys of remote B simultaneously, release them and the indicator light keeps on.

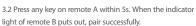



# 

## Clear code

Press the top two keys on remote simultaneously for about 6s. The indicator light flashes twice, then clear code successfully.

## Wiring Diagram

4. RGB jumping


10. 7 Colors gradient

Remote works with wireless drivers

1. Red-green jumping 2. Green-blue jumping 3. Red-blue jumping

5. 7 Colors jumping


8. Red-blue gradient

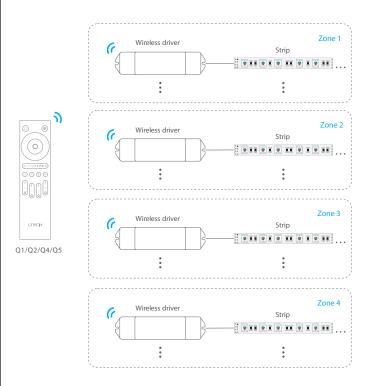

6. Red-green gradient

9. RGB gradient

## Remote works with E series touch panels

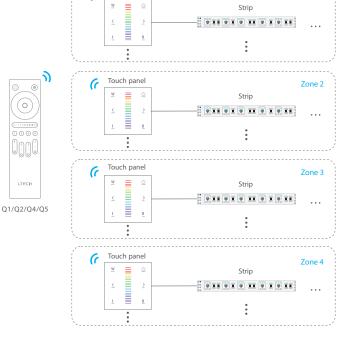

\* This manual is subject to changes without further notice. Product functions depend on the goods. Please feel free to contact our official distributors if you have any question.