

LED STRIP INSTALLATION INSTRUCTIONS





PRODUCT SPECIFICATIONS 24V DC PARALLEL ALUMINIUM PROFILE OR HEAT SINK 5.000MM-10000MM See Product Data Sheet for Maximum Length 24V DC LED DRIVER + CONTROLLER See Product Data Sheet for specific requirements 0-1/10V, DALI, DMX, RF, WIFI UP TO 65° CELCIUS -20° TO 50° CELCIUS 12HRS PER DAY-See Warranty T&C's for full Terms & Conditions RA >90 120° IP20 | IP54 | IP67 5 YEARS REPLACEMENT* See Warranty T&C's for full Terms & Conditions

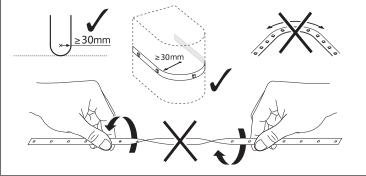


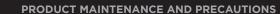


- LED strips installation must be installed by qualified personnel.
- LED strip must be tested and photographed on before installation for warranty validation.
- For cutting LED strip, it is necessary to use the standard accessories
 provided by Havit Commercial (e.g. DC wire, end-cap, front-cap, adhesive,
 etc.), and according to the correct cutting and connecting methods for the
 installation.
- LED strip cannot be installed in areas where water hazards might be formed, such as the surface of pits and ditches. And similar places in which rain and water may be accumulated easily.
- LED Strip must be installed on aluminium surface including heat sink or profile, Aluminium sheets can also be used but must be 3mm or greater in thickness to comply with warranty.
- Do not strongly pull on the LED strips during installation process. And avoid squeezing and scratching LED strips with sharp objects.
- LED Strip must be operated within the correct ambient and operating temperature ranges specified on the product data sheets and also in table on this document.
- For correct connection of the product, each length of LED strip must be connected to the main power source.
- Do not bend LED Strip below 60mm in diameter, Bending below this diameter will cause strip to break and will void warranty.
- LED Driver should retain 20% of total load to make sure LED Strip has the full potential to work correctly.
- Voltage supplied to LED Strip must be with 5% of required voltage LED Strip requires to work correctly
- Must guarantee that each power source (GND) must be connected.
- Pay attention to the power cable during the installment process, Installer
 must not connect LED Strip incorrectly to LED Driver by making sure
 polarity is correct and output voltage of LED Driver is same as LED Strip,
 Incorrect installation may cause damage to LED Strip and warranty will be
 voided.
- Electro-static bands must be worn during installation to avoid any electricity being transferred to LED Strip and causing failure.
- During the warranty period, only defective products are acceptable to be replaced by Havit Commercial. Havit Commercial is not responsible for other expenses because of replacement, such as transportation fee, installation fee, etc.

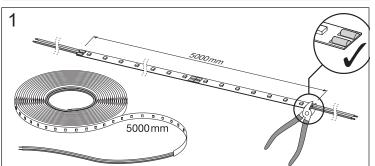

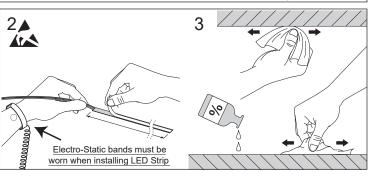

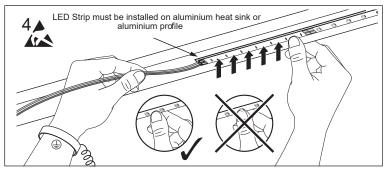

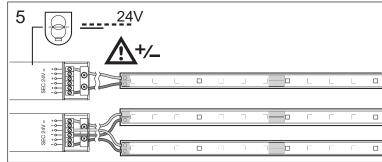



Web: www havitcommercial.com.au Email: sales@havitcommercial.com.au

Phone: 02 9381 8383



