



WHELEN AEROSPACE TECHNOLOGIES

Phone: (860) 526-9504

Internet: www.flyWAT.com

Sales/Service e-mail: info@flyWAT.com

**Installation Guide/ICA:
Aviation model 7123407
P/N 01-0771234-07
Flasher/Current Source**

TSO-C30c TYPE I, II & III; APPROVED
TSO-C96a CLASS II; APPROVED

The conditions and tests required for TSO approval of this article are minimum performance standards. Those installing this article either on or within a specific type or class of aircraft must determine that the aircraft installation conditions are within the TSO standards which include any accepted integrated non-TSO functions. TSO articles and any accepted integrated non-TSO function(s) must have separate approval for installation in an aircraft. The article may be installed only according to 14 CFR part 43 or the applicable airworthiness requirements.

WARNING: This product can expose you to chemicals including Lead which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

SPECIFICATIONS:

Nominal Operational Voltage: 28 VDC
 Current Source Input Current:
 LED Forward Position Light 0.2 Amps
 LED Anti-Collision Light (Peak@.25 Sec.) 3.2 Amps
 LED Anti-Collision Light (Avg.) 0.6 Amps
 LED Ground Recognition Light (Peak@.25 Sec.) . 0.7 Amps
 LED Ground Recognition Light (Avg.) 0.13 Amps
 Anti-Collision/Ground Recognition Flashrate 45± 5 Per. Min.

EQUIPMENT LIMITATIONS: An approved Anti-Collision / Position Light System consists of at least 2 flasher/current source units, each connected to a LED anti-collision and position light lighthouse.

Certain types of installations may require additional testing.

AIRWORTHINESS LIMITATIONS: The Airworthiness Limitations section is FAA approved and specifies inspections and other maintenance required under §43.16 and §91.403 of the Federal Aviation Regulations, unless an alternative program has been approved.

No airworthiness limitations are associated with the installation of the flasher/current source.

CONTINUED AIRWORTHINESS: If any bank of LEDs fail, both the lighthouse module 71170() and the flasher should be replaced.

Note: To reduce eye strain, use an optical filter such as dark glasses or a blue covering dome during LED inspection.

Note: An anti-collision light will automatically shut-off after 9-10 flashes if a failure is detected.

INSTALLATION PROCEDURES:

1. Consider areas or locations designated by the aircraft manufacturer. Check that breakers are properly rated.
2. Attach the flasher using the (4) 0.156 dia. mounting holes.
3. Connect the inputs according to the chart shown. Connections to be in accordance with FAA approved methods.
4. Check all avionic systems for interference from the installation.
5. A flight check should be performed by a certified pilot.
6. If required, update aircraft records utilizing FAA Field Approval (Form 337) or equivalent.

Note: SYNC is a low-powered, bi-directional control signal. Connecting to the synchronize signal of any WAT LED anti-collision assembly will cause the lights to flash at the same time. If synchronization is not necessary, the connection may be left open.

