


**Product Features**

- 5. BALL POPPING FEATURE**  
 Push or ride the elephant to pick up the balls, then they'll pop out of his mouth. There are five balls included with this product.
- 6. HOLE IN SEAT**  
 Put balls into the hole in the seat for put-and-take fun. Lift the seat to retrieve the balls. Note: The ring around the hole in the seat is removable, but we recommend to keep it in place at all times.
- 7. UNDER-SEAT STORAGE**  
 Lift the seat to store the balls underneath when not playing with them.
- 8. GROW-WITH-ME SPEED CONTROL**  
 Position 1 provides resistance to the wheels for early walkers. Position 2 lets the wheels roll freely for advanced walkers and riders.

**Battery Installation**

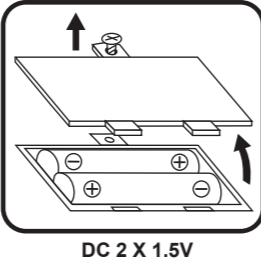

USE TWO 1.5 VOLT BATTERIES;  
 TYPE: (CARBON ZINC, ALKALINE);  
 SIZE: (R6, MN1500, AA, LR6, UM-3);  
 BATTERIES NOT INCLUDED.

**WARNING:**  
 1. DO NOT MIX NEW AND OLD BATTERIES.  
 2. DO NOT MIX ALKALINE, CARBON ZINC OR RECHARGEABLE BATTERIES.  
 3. BATTERIES TO BE INSTALLED BY ADULT ONLY.  
 4. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.  
 5. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOYS.  
 6. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.

7. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.  
 8. ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.  
 9. DO NOT DISPOSE OF THIS PRODUCT AND BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.  
 10. RECHARGEABLE BATTERIES MUST BE REMOVED FROM THE TOY BEFORE CHARGING WHEREVER POSSIBLE.  
 11. RECHARGEABLE BATTERIES SHOULD ONLY BE CHARGED UNDER ADULT SUPERVISION.  
 12. REMOVE ALL BATTERIES WHEN YOU DO NOT USE THE TOY FOR A LONG PERIOD.  
 13. LOW OR FLAT BATTERIES CAN CAUSE DETRIORATION IN THE SOUND QUALITY OF THIS PRODUCT. DISTORTED OR SLOW SOUND QUALITY CAN BE RESTORED BY REPLACING THE BATTERIES.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
 • Reorient or relocate the receiving antenna.  
 • Increase the separation between the equipment and receiver.  
 • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
 • Consult the dealer or an experienced radio / TV technician for help.  
 CAN ICES-3(B)/NMB-3(B)  
 Cleaning instructions: Surface clean only. Wipe clean with a soft, damp cloth. Do not immerse in water or place in dishwasher.  
 Remove or dispose of all packaging safely before giving to children.  
 Package has to be kept since it contains important information.  
 Product and colors may vary.

**MADE IN CHINA**

? : 1-800-840-4916  
 2018 INFANTINO  
 SAN DIEGO, CA 92121 USA  
 INFO@BLUE-BOX.COM

**IMPORTANT INFORMATION**

Maximum weight 19 kg (42 lbs). Not to be used by children over 36 months due to size limitations. Inspect product before each use. Never use this product if any parts are missing, damaged, or broken.

**WARNING**

Prevent serious injury or death:  
 NEVER use near swimming pools, on or near stairs, hills, roadways, or inclines. This toy has no brake. The speed control switches on the rear wheels do not prevent product movement. They only slow the wheels to help beginning walkers. Use only on flat, level surfaces. We recommend wearing shoes while riding. Direct adult supervision required at all times. Stay near and watch your child during use. Riding Rules - Take care to inform children of safe riding rules:  
 - Use with caution to avoid obstacles and collisions with other children and objects. Such incidents may cause injury to the user and/or other children.  
 - Only one child to ride at a time.  
 - Do not stand on the product.  
 - Do not attempt to use projectiles other than the balls that are supplied with this product.



6-36m

Ollie


3-in-1 sit, walk & ride elephant



**WARNING:**  
 This toy is to be assembled by an adult.

**Assembly Instructions**

**8 x Screws**  
 Note: Tighten and loosen all screws with a Phillips screwdriver. Do not over-tighten screws. The screwdriver is not included.

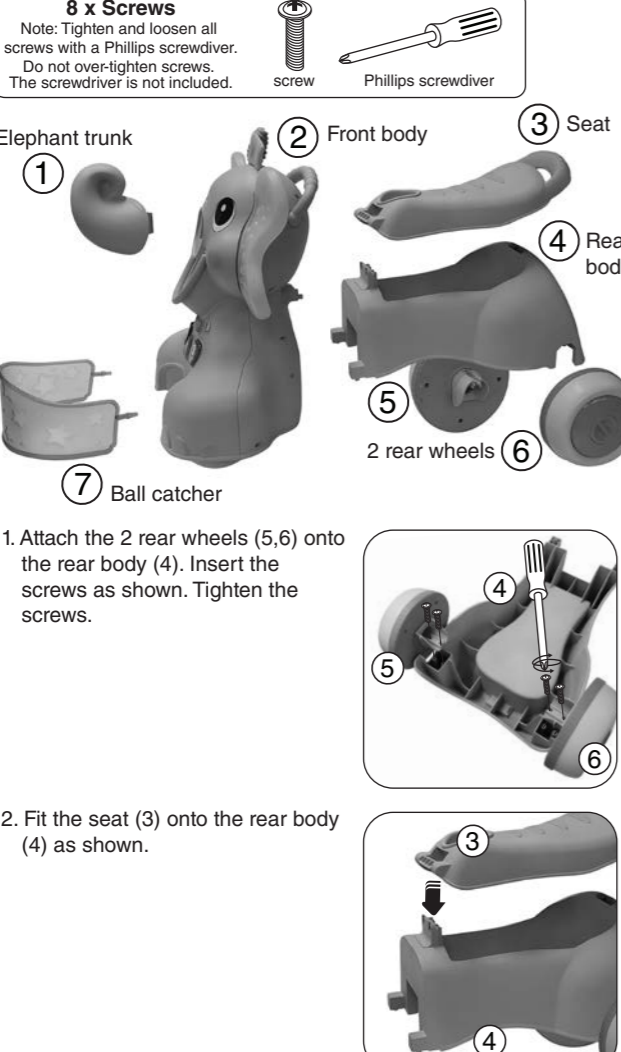

1. Attach the 2 rear wheels (5,6) onto the rear body (4). Insert the screws as shown. Tighten the screws.

2. Fit the seat (3) onto the rear body (4) as shown.

3. Fit the rear body (4) into the front body (2).

4. Lift the seat as shown. Insert the screws and tighten.

5. Turn the elephant over, then insert the screws into the holes as shown. Tighten the screws.

6. Insert the elephant trunk (1) onto the front body (2) as shown. Click into place.

7. Insert the ball catcher (7) into the two front holes. Note: The ball catcher is optional and helps catch the balls and keep them close to the toy for easy scooping. The ball catcher can be removed for more ball chasin' fun.

7. Insert the ball catcher (7) into the two front holes. Note: The ball catcher is optional and helps catch the balls and keep them close to the toy for easy scooping. The ball catcher can be removed for more ball chasin' fun.

**Converting to Walker and Ride-on Modes**

1. To use this toy as a walker, lift the seat. Pull down the support and insert it into the rectangular hole in the rear body.

2. To convert from walker to ride-on, squeeze the two buttons at the base of the support, swing the support up and snap it into the bottom of the seat. Lower the seat to ride-on position.

**Product Features**

- 1. OFF/LOW VOLUME/HIGH VOLUME SWITCH**  
 To turn on the toy, slide the off/low volume/high volume switch to either low or high volume position.
- 2. MODE SELECTOR**  
 Slide the mode selector to choose Learning Mode, Music Mode, or Silly Sounds Mode.
- 3. LIGHT-UP BUTTONS**  
 Press the three light-up buttons to activate phrases, songs, sounds, and lights.
- 4. HAIR**  
 Soft fabric hair tufts include squeaker and crinkle sounds.