


Sea-Legs 777 unit

Remote Transmitter 433 MHz

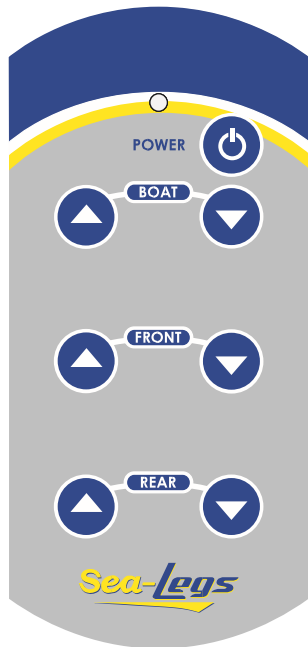

Programming Additional Remotes

1. Carefully remove front cover from receiving unit with switches.
2. Locate program switch (upper left hand corner of the board).
3. Press program switch, the L.E.D. will light up.
4. Once the L.E.D. is lit, push any button on the new remote control.
5. Once the L.E.D. goes out, the remote is now programmed.

***Note:** Up to 8 remotes may be programmed to a single board.

***Note:** To completely clear memory, push and hold the program switch until the L.E.D. goes out (approx. 30 seconds). This will “clear” all transmitter codes.

