

Sea-Legs Operating Instructions

CAUTION: RAISING AND LOWERING OF PONTOON COULD RESULT IN SERIOUS INJURY OR DEATH. MAKE SURE THAT PEOPLE AND PETS ARE CLEARLY AWAY FROM THE SEA-LEGS, AND UNDERSIDE OF THE BOAT, WHEN RAISING OR LOWERING THE PONTOON.

Sea-Legs Remote Control Operating Instructions

To activate the remote transmitter, press and hold down the “On” Button for a few seconds. For safety reasons, the transmitter powers off after 2 minutes of inactivity.

Twin Tube Version

Boat Up – Raises both front and back of pontoon simultaneously.

Boat Down – Lowers both front and back of pontoon simultaneously. Alarm only sounds using this function.

Front Up – Raises front of pontoon.

Front Down – Lowers front of pontoon.

Rear Up – Raises rear of pontoon.

Rear Down – Lowers rear of pontoon.

On Triple Tube Version – Same as above Plus

Passenger Up – Raises the Passenger side of the pontoon up.

Passenger Down – Lowers the Passenger side of the pontoon.

Driver Up – Raises the Driver side of the pontoon.

Driver Down – Lowers the Driver side of the pontoon.

ADDITIONAL NOTES: For Operational video, tips and tricks, and troubleshooting go to www.sea-legs.com then click on product information then click on videos.

1. As your pontoon rises, it will move FORWARD, in a cantilever motion. Allow ample clearance in front of boat while rising.
2. In most cases the rear of the pontoon will raise slightly slower than the front because it is heavier. Also due to every lake bottom being a different slope, you will need to level the boat using the appropriate individual leg controls. Similarly, when you lower your pontoon, the rear may come down faster.
3. Your Sea-Legs remote control receiver unit has a set of toggle switches which operate the front and rear legs directly. If your remote cannot be used (e.g. misplaced or forgotten), lift the seat cushion the pump is installed under. The receiver unit will be the blue and grey faced box with buttons or yellow board box with toggle switches, typically mounted next to the pump.
4. If your remote-control transmitter becomes wet, let it sit for a few minutes to allow it to dry naturally. It is not like dropping your cell phone in the water, it will work again.
5. If you should lose or permanently misplace your Remote Transmitter, it can be replaced. Visit our website or call your Sea-Legs dealer who can assist you with the purchase.
6. Remember that the transmitter is a battery-operated device. To ensure uninterrupted operation, we recommend changing the battery at the beginning of each boating season.
7. An alarm will sound when the Sea-Legs are fully retracted beneath the pontoon deck by using the boat down function.
8. When checking fluid level make sure the legs are in the fully retracted position, oil in reservoir should be within a couple inches of completely full.
9. Sea-Legs recommends a minimum of 850CCA or 1000MCA Marine STARTING Battery, if pontoon is equipped with a battery switch make sure selectors is on both /all batteries before operating.
10. For safety reasons there is a resettable in-line fuse located on the red battery cable going to the battery.