

Pairing Instruction for the Twin-Tube System

1. Disconnect all power from the receiver.
2. Activate the transmitter by pushing the ON button located on the front.
3. To insure an uninterrupted signal, locate yourself with the transmitter in a position near the receiver.
4. Restore power to the receiver.
5. Within 10 seconds of restoring power to the receiver, simultaneously push the top 3 buttons on the transmitter (front raise, boat raise, rear raise) and hold for 4 seconds.

Note. When pairing an **additional** transmitter to a receiver, it's important to turn all of the primary (original) transmitters off while the new unit is being paired. The receiver will only listen to one transmitter at a time, by turning the primary transmitter(s) off, you simultaneously send a log-out command to the receiver.

Instructions for Tri-Tube system.

1. Disconnect all power from the receiver.
2. Activate the transmitter by pushing the ON button located on the front.
3. To insure an uninterrupted signal, locate yourself with the transmitter in a position near the receiver.
4. Restore power to the receiver.
5. Within 10 seconds of restoring power to the receiver, simultaneously push buttons 1 & 2 on the transmitter and hold for 4 seconds.

Note. When pairing an **additional** transmitter to a receiver, it's important to turn all of the primary (original) transmitters off while the new unit is being paired. The receiver will only listen to one transmitter at a time, by turning the primary transmitter(s) off, you simultaneously send a log-out command to the receiver.